 
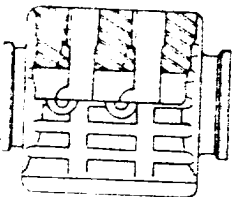 



SINGLE

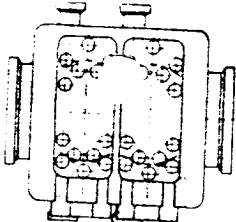

DOUBLE

MODEL LWP MANUAL-LOCK

Item Number	Description	Quantity		Part Number
		(a)	(b)	
1	Working Pressure (psi)			3,000 and 2,000
2	Bore (in.)			LWP 9
3	Piston (in.)			LWP 7 1/4
4	Ram Shaft (in.)			LWP 5
5	Door Seal			LWP 2 3/4
6	Door (Right)	2(2)		133531
7	Door (Left)	2(2)		030030
8	O-Ring, Cylinder and Cylinder Head	1		131402
9	Cylinder (Right)	1		131403
10	Cylinder (Left)	1		030134
11	O-Ring, Cylinder and Cylinder Head	1		131404
12	Cylinder (Right)	1		130407
13	Cylinder (Left)	1		131405
14	O-Ring, Cylinder and Cylinder Head	1		130406
15	Cap Screw, Sinker Head	24		070054
16	Door Cap Screw	16(2)		010554
17	Hinge Bracket Assembly, Right (d)	1(0)		132638
18	Hinge Bracket Assembly, Left (d)	1(0)		132637
19	Ram Shaft	2		130010
20	Piston Assembly	2(2)		130413
21	Locknut, Piston	2		130012
22	Set Screw	2		130012
23	O-Ring, Piston	2(2)		030023
24	Locking Shaft	2		141185
25	Locking Shaft Seal Assembly (d)	2(2)		141184
26	Window Head Right	1		132510

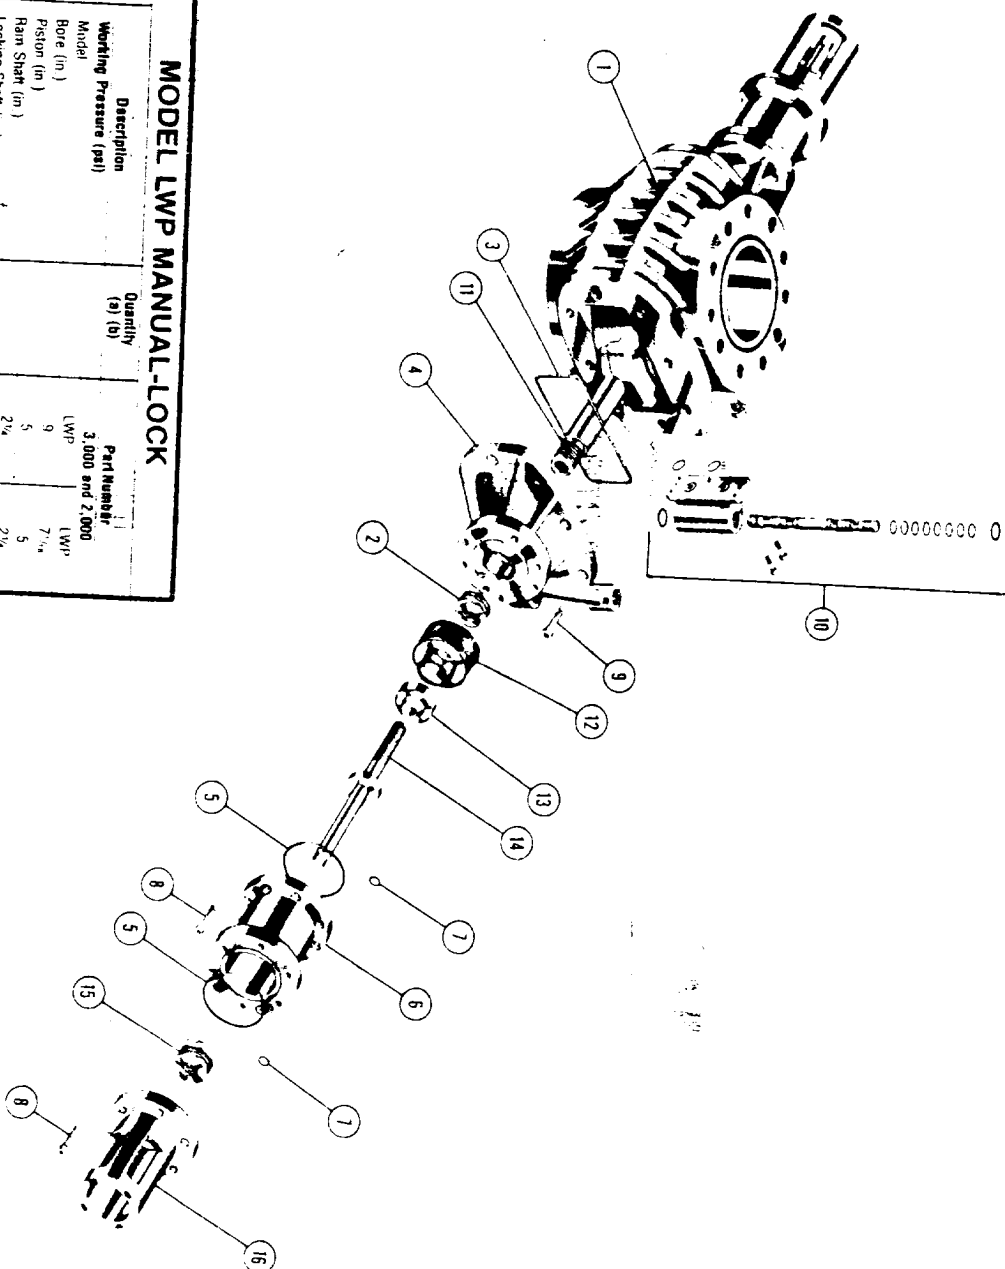 

(a) Quantity shown for single model; an RUP increase quantity proportionately for double or triple models.
 (b) Recommended spare parts shown in parentheses for single model; an RUP increase quantity proportionately for double or triple models.
 (c) Not a standard accessory. Spare parts shown for reference only; after rework, parts shown for reference only.