

All connections to and from preventer to have a pressure rating equivalent to that cf the B.O.P.'s.

Inside blowout preventer to be available on rig floor. Operating controls located a safe distance from the rig floor. Hole must be kept filled on trips below intermediate casing. Operator not responsible for blowouts resulting from not keeping hole full.

. D. P. float must be installed and used below zone of first gas intrusion.