


Flare Line

Prevailing Wind Direction:  
 Summer -- South  
 Winter -- Northeast

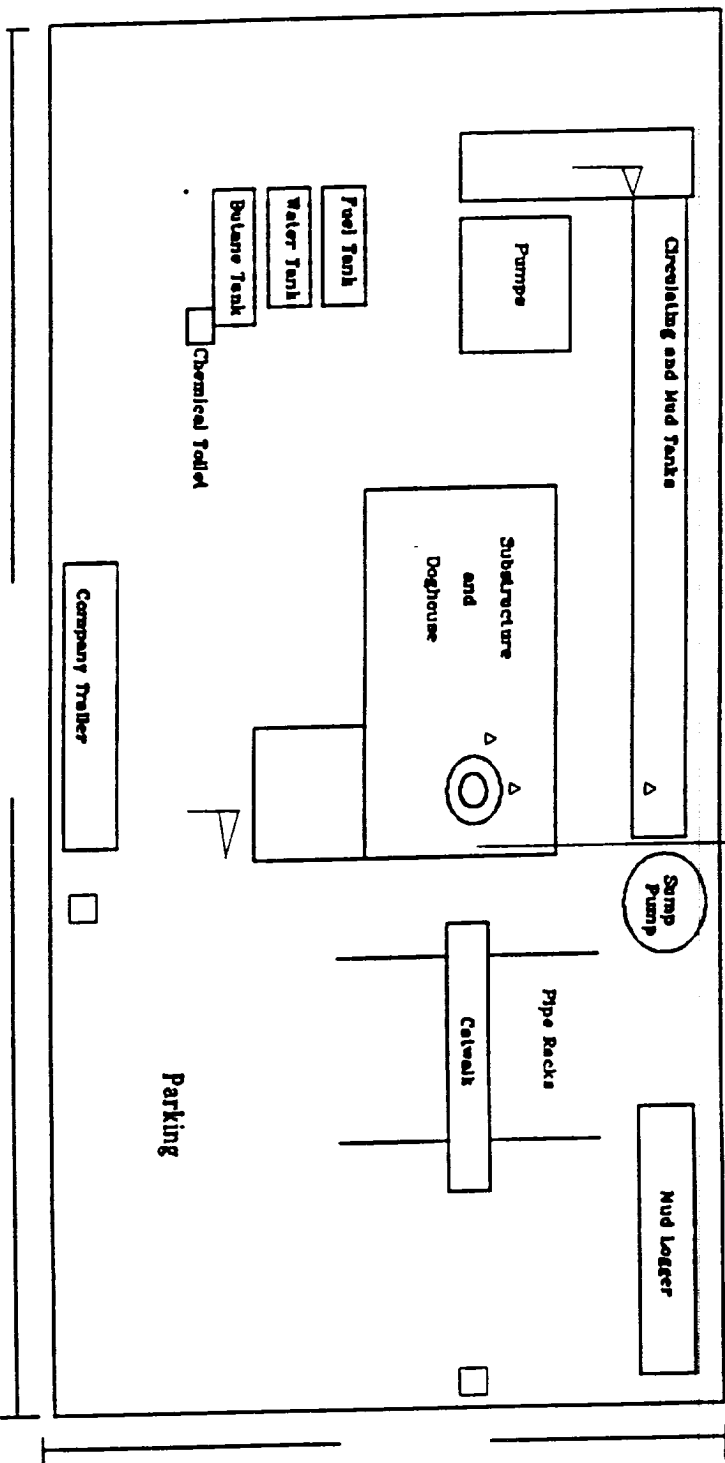

△ - Alarm On Rig floor with sensors at the floor, bell nipple and shaker

△ - Wind Direction Indicators

□ - Safe Briefing Areas with caution signs and protective breathing equipment

Location entrance with condition sign