

- required with sufficient volume to operate the B.O.P.'s. All connections to and from preventer to have a pressure rating ed 6. · to that of the B.O.P.'s.
- Inside blowout preventer to be available on rig floor. 7.
- 8. Operating controls located a safe distance from the rig floor. Nole must be kept filled on trips below intermediate casing.

· EXHIBIT

OCD HOBBS UFFICE

MAR 2 1990

RECEIVED

1

-