


## 3000 psi & 5000 psi Working Pressure BOP's

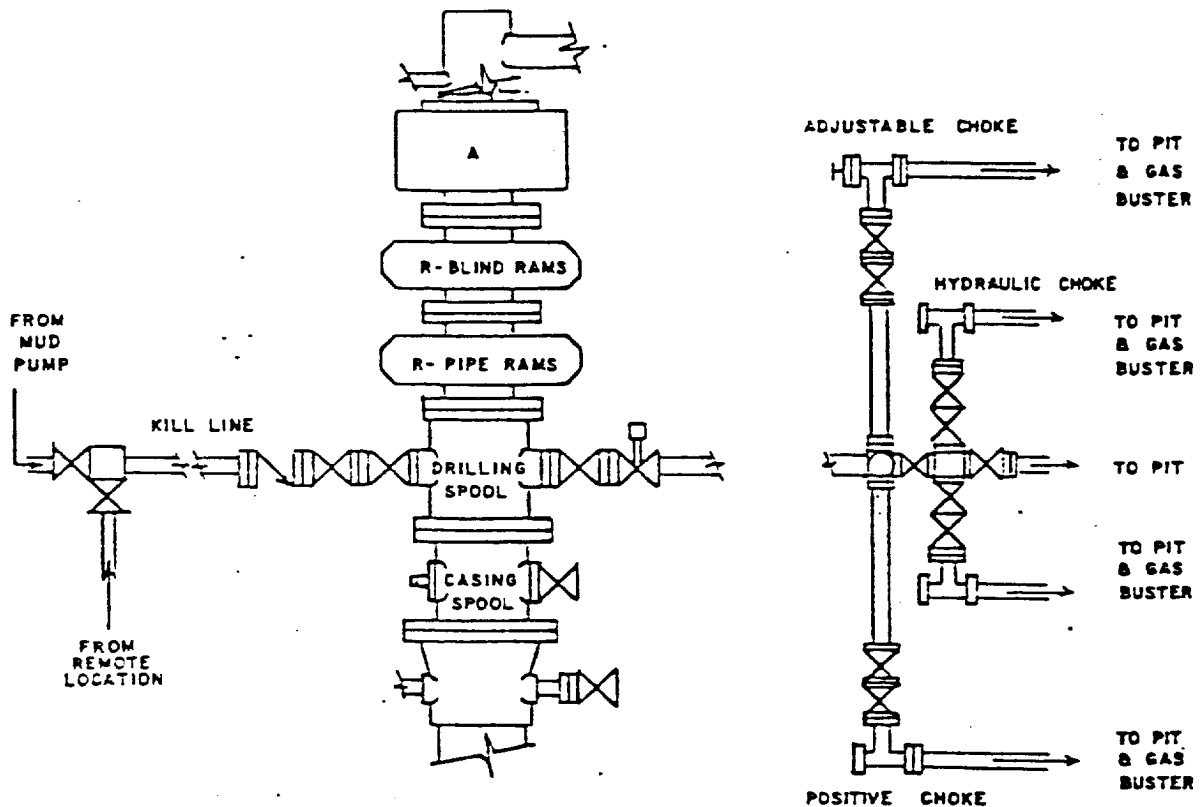

### Test Procedure

- 1) Flush BOP's and all lines to be tested with water.
- 2) Run test plug on test joint and seat in casing head (leave valve below test plug open to check for leak).
- 3) Test the following to rated pressure:
  - a) inside blowout preventer
  - b) lower kelly cock
  - c) upper kelly cock
  - d) stand pipe valve
  - e) lines to mud pump
  - f) kill line to BOP's
- 4) Close and test pipe rams to rated pressure.
- 5) Close and test Hydril to rated pressure.
- 6) Back off and leave test plug in place. Close and test blind rams to rated pressure.
- 7) Test all choke manifold valves to rated pressure.
- 8) Test kill line valves to rated pressure.

JUN 7 1983

O.C.C.  
HOBBS OFFICE

