


Operator Webb Oil Company  
 Well Danvers Federal #2  
 Unit E Section 6 Township 17 Range 30  
 API # 30-015-04099

TOPS

Salado	570'
Base Salt	1022'
Gatos	1185'
Queen	2040'
Grayburg	2475'
San Andres	2763'

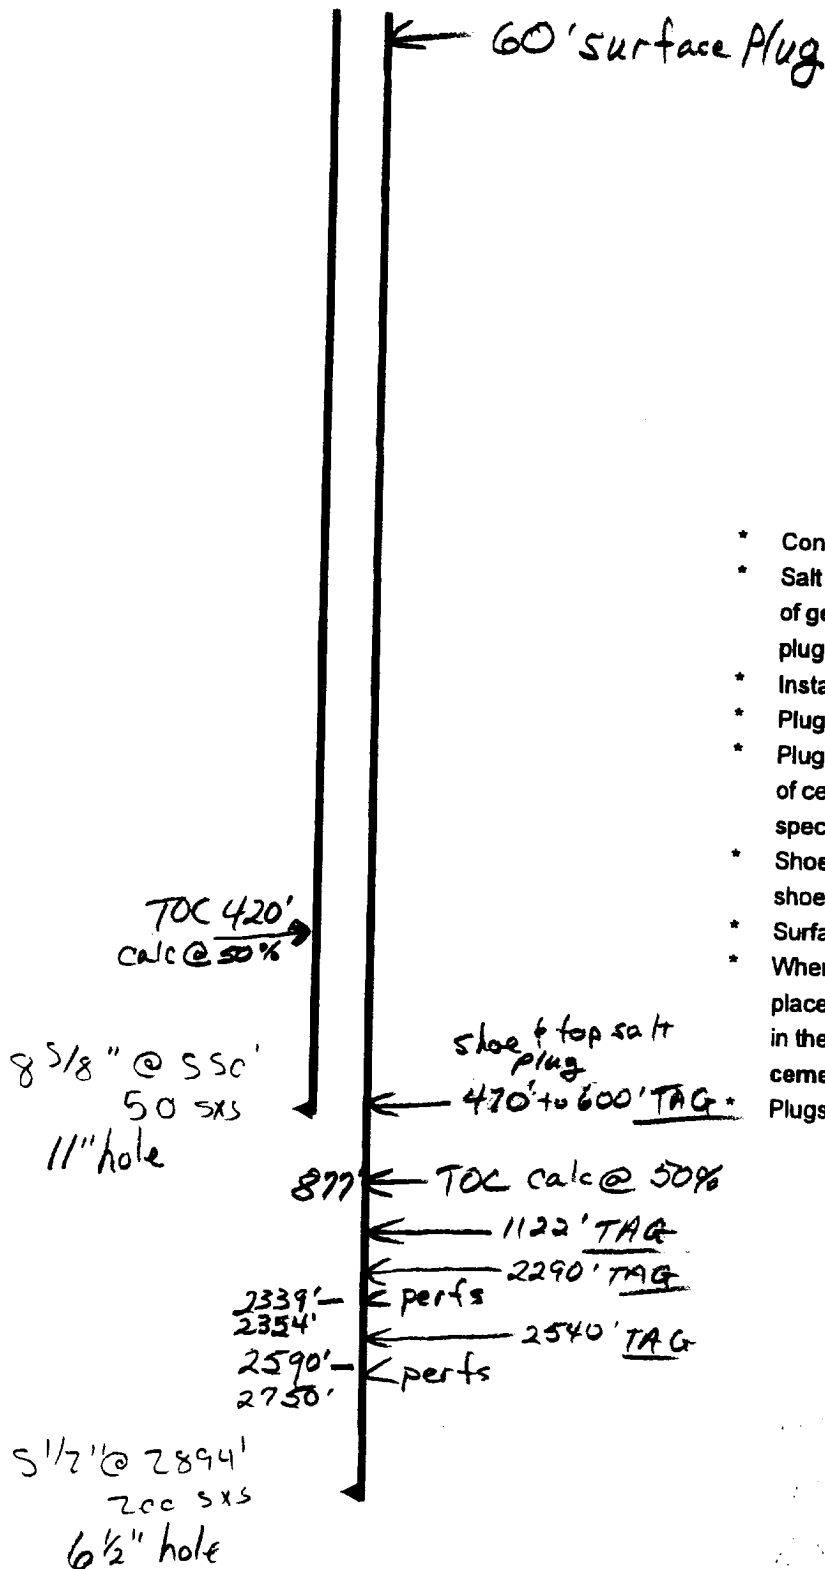

- \* Contact OCD 24 hrs. prior to any work done.
  - \* Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.
  - \* Install dry hole marker as per Rule 202.B.2
  - \* Plugs are to be set from point indicated up.
  - \* Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
  - \* Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
  - \* Surface plug will be from 0' - 60'
  - \* Where plugs are required, cement must be placed inside and outside of all casing string(s) in the correct footage or sacks required, if no cement exists.
- Plugs to be tagged will be indicated.

MLB