


Operator Brothers Co.  
Well Tamano (DSC) wt # 202  
Unit I Section 11 Township 18 Range 3  
API # 30-015-26158

TOPS

Yates 5311  
T. Salt 1100  
B. Salt 2100  
Glorieta \_\_\_\_\_  
Bone Sp. 5907  
Abo \_\_\_\_\_  
Wolfcamp \_\_\_\_\_  
Morrow \_\_\_\_\_  
Devonian \_\_\_\_\_  
Fusselman \_\_\_\_\_  
Other Delaware 4906

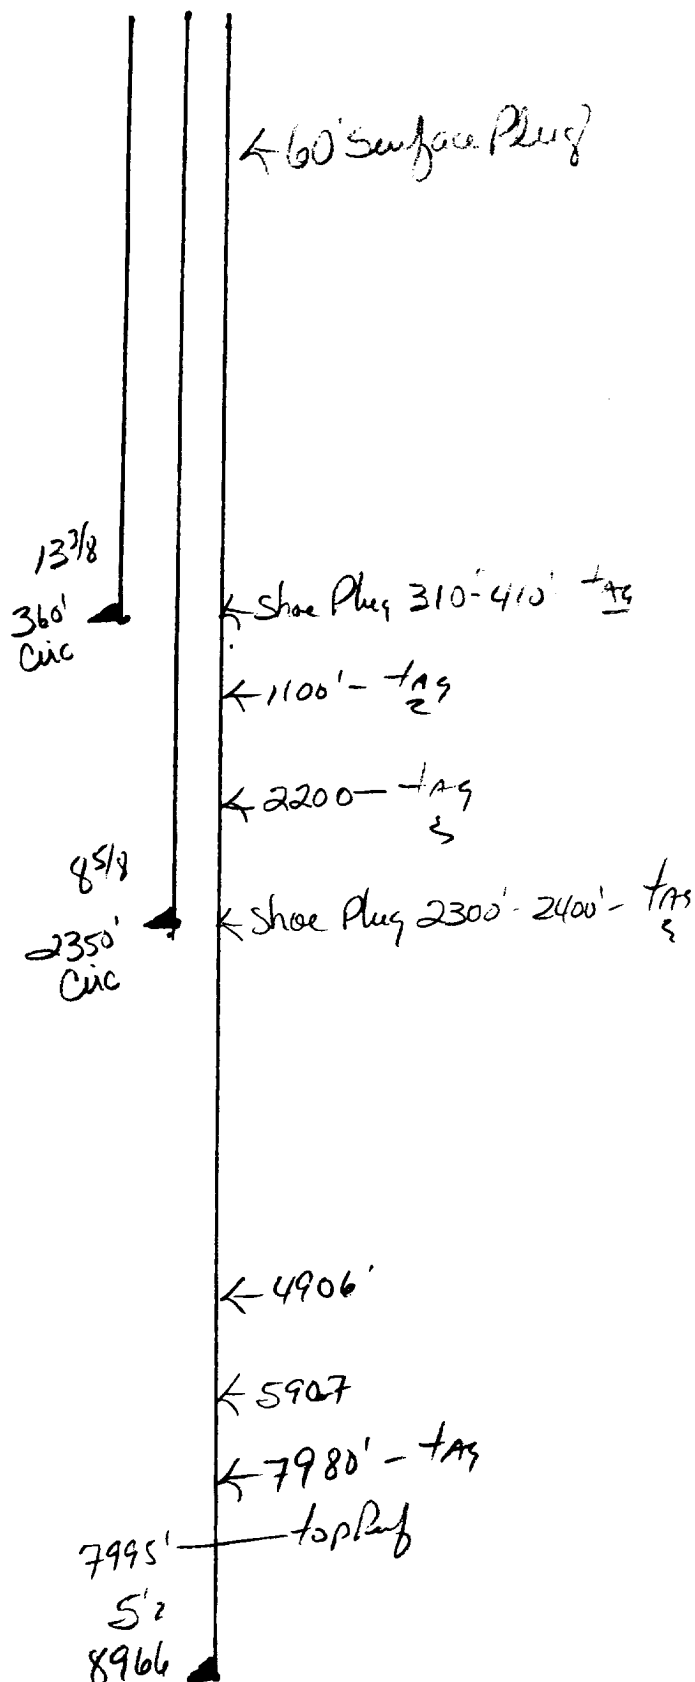

- Contact OCD 24 hrs. prior to any work done.
- Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug
- Install dry hole marker as per rule 202.B.2
- Plugs are to be set from point indicated up. Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater.
- Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- Surface plug will be from 0' - 60'
- Where plugs are required cement must be placed inside and outside of all casing string(s), in the correct footage or sacks required, if no cement exists.
- Plugs to be tagged will be indicated.