


Form 3160-5
(June 1990)

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT
DIST. 6 N.M.

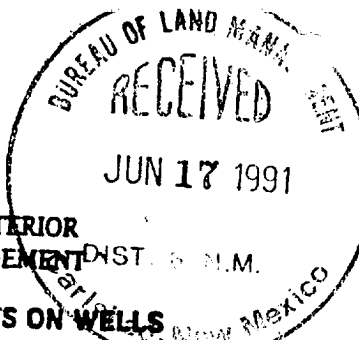

RECEIVED
JUN 24 1991

O. C. U.
ARTESIA, NEW MEXICO
Bureau Order No. 1004-0135
Expires: March 31, 1993

3. Lease Designation and Serial No.

NM 63358

6. If Indian, Allottee or Tribe Name

SUNDRY NOTICES AND REPORTS ON WELLS
Do not use this form for proposals to drill or to deepen or reentry to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals

SUBMIT IN TRIPLICATE

1. Type of Well

☒ Oil Well ☐ Gas Well ☐ Other

2. Name of Operator

Southwest Royalties, Inc.

3. Address and Telephone No.

c/o Box 953, Midland, Texas 79702 (915) 684-6381

4. Location of Well (Footage, Sec., T., R., M., or Survey Description)

1980' FSL & 1980' FEL, Section 17, T23S, R30E
11 air miles east of Loving, New Mexico

7. If Unit or CA, Agreement Designation

Exxon Federal

8. Well Name and No.

1

9. API Well No.

10. Field and Pool, or Exploratory Area

Wildcat

11. County or Parish, State

Eddy

CHECK APPROPRIATE BOX(S) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

TYPE OF SUBMISSION

☒ Notice of Lease

☐ Subsequent Report

☐ Final Abandonment Notice

TYPE OF ACTION

☐ Abandonment

☐ Recomposition

☐ Plugging Back

☐ Casing Repair

☐ Altering Casing

☐ Other

☐ Change of Plans

☐ New Construction

☐ Non-Routine Fracturing

☐ Water Shut-Off

☐ Conversion to Injection

☐ Dispose Water

(Note: Report results of geologic completion, no Well Completion or Recomposition Report and Log form.)

13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is discontinuously drilled, give subsurface locations and measures and true vertical depths for all markers and zones pertinent to that work.)

Intent to plug and abandon procedure as per phone conversation with Shannon Shaw (BLM), 6-14-91 with verbal approval.

- (1) Rig up pulling unit, pull and lay down sucker rods.
- (2) Unset packer @ 5201' and retrievable bridge plug, pull out of hole.
- (3) Pick up and free point 5-1/2" casing: if casing is free below 2000' - rig up to cut off and pull casing.
- (4) Run in hole with 2-7/8" tubing to 7375'. Use 9# mud laden fluid between plugs.
- (5) CIBP (35' cap) 7175'.
- (6) Pull tubing to 5360'.
- (7) CIBP (35' cap) 5290'.
- (8) Pull out of hole with tubing.
- (9) Cut off 5-1/2" casing - pull out of hole and lay down.
- (10) Run in hole with 2-7/8" tubing.
- (11) Spot 100' cement and cut off (50' inside 5-1/2" & 50' on top of 5-1/2") - cut off will be inside 8-5/8". (Set 100' plug at bottom of 8-5/8" shoe - no need to tag).
- (12) Spot cement plugs to surface 350' - 450' (100' plug - need to tag). 50' surface plug.
- (13) Remove wellhead - weld on surface plate and dry hole marker.

14. I hereby certify that the foregoing is true and correct

Signed Shannon Shaw
(This space for Federal or State office use)

Title _____ Agent

Date 6-14-91

Approved by _____
Conditions of approval, if any:

Title _____ Date 6/21/91