

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUBMIT IN TRIPLICATE*
(Other instructions on reverse side)

Form approved.
Budget Bureau No. 42-R1424.

5. LEASE DESIGNATION AND SERIAL NO.

NM-081208

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☐ GAS WELL ☐ OTHER ☒ Recomplete from WIW to Oil Well

2. NAME OF OPERATOR
Tenneco Oil Company

3. ADDRESS OF OPERATOR
Suite 1200, Lincoln Tower Bldg, Denver, Colo.

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.*
See also space 17 below.)
At surface

1650' F/NL and 1392" F/EL

14. PERMIT NO.

15. ELEVATIONS (Show whether DF, RT, GR, etc.)

6962 GR

7. UNIT AGREEMENT NAME

South Hospah Unit

8. FARM OR LEASE NAME

9. WELL NO.

3

10. FIELD AND POOL, OR WILDCAT

South Hospah Lower Sand

11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA

Sec. 12, T17N, R9W

12. COUNTY OR PARISH

McKinley

13. STATE

New Mexico

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

FRACTURE TREAT

SHOOT OR ACIDIZE

REPAIR WELL

(Other)

PULL OR ALTER CASING

MULTIPLE COMPLETE

ABANDON*

CHANGE PLANS

Recompletion

X

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

FRACTURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

REPAIRING WELL

ALTERING CASING


ABANDONMENT*

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

Recomplete from SI water injection well in South Hospah Upper Sand to oil well in South Hospah Lower Sand as follows:

Move in service unit, install B. O. P., run ^{Squeeze} squeeze packer on 2-7/8" tubing and set at approximately 1400'. Squeeze perforations 1528'-1552' with 50 sks, WOC 24 hrs., drill out cement & test squeeze job to 900 psi. Drill out plug @ 1571', float collar & float jt. to 1599' (Guide shoe will not be drilled out.). Load hole w/crude. Perforate lower Hospah 1584'-1590' w/2 JSPF. Run 2-7/8" tubing to 1580', swab, well will be stimulate if required.

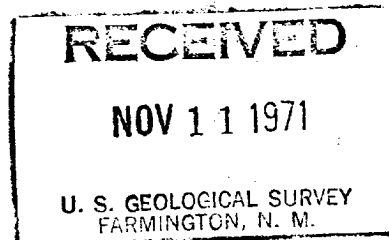

18. I hereby certify that the foregoing is true and correct

SIGNED

[Signature]

TITLE Sr. Production Clerk

DATE 11/9/71

(This space for Federal or State office use)

APPROVED BY

TITLE

DATE

CONDITIONS OF APPROVAL, IF ANY: