

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUBMIT IN TRIPLICATE*
(Other instructions on re-
verse side)

Form approved.
Budget Bureau No. 42-R1424.

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☐ GAS WELL ☐ OTHER Drilling	5. LEASE DESIGNATION AND SERIAL NO. 14-20-0603-1692
2. NAME OF OPERATOR Gulf Oil Corporation	6. IF INDIAN, ALLOTTEE OR TRIBE NAME None
3. ADDRESS OF OPERATOR P. O. Box 1938, Roswell, New Mexico 88201	7. UNIT AGREEMENT NAME Terrace Working Interest
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface 2060' F&L & 2190' F&L Section 12, T-18N, R-7W	8. FARM OR LEASE NAME Terrace Working Interest
14. PERMIT NO.	9. WELL NO. 1
15. ELEVATIONS (Show whether DF, RT, GR, etc.) GR 6581'	10. FIELD AND POOL, OR WILDCAT Wildcat
	11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA Section 12, T18N, R-7W, N26P.M.
	12. COUNTY OR PARISH Socorro
	13. STATE New Mexico

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF ☐	PULL OR ALTER CASING ☐
FRACTURE TREAT ☐	MULTIPLE COMPLETE ☐
SHOOT OR ACIDIZE ☐	ABANDON* ☐
REPAIR WELL ☐	CHANGE PLANS ☒
(Other) ☐	

SUBSEQUENT REPORT OF:

WATER SHUT-OFF ☐	REPAIRING WELL ☐
FRACTURE TREATMENT ☐	ALTERING CASING ☐
SHOOTING OR ACIDIZING ☐	ABANDONMENT* ☐
(Other) ☐	

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

Please change the program as listed in our original Application dated April 30, 1970 to the following:

- (1) **Drill 17-1/2" hole to 450' and run 13-3/8" casing to bottom.**
- (2) **After pressure testing casing, drill ahead with air mist with 11" hole to evaluate shows of oil or gas.**
- (3) **At 4200' run and cement a combination string of 8-5/8" casing, if needed, to protect exposed pay, correct loss circulation or control water flow.**
- (4) **If none of the events listed in three occur, reduce hole to 7-7/8 and continue drilling to Abc red bed or until water entry makes it necessary to mud-up.**
- (5) **Continue drilling with gal mud.**

18. I hereby certify that the foregoing is true and correct

SIGNED

M. J. Taylor

TITLE

District Production Manager

DATE

May 19, 1970

(This space for Federal or State office use)

TITLE

DATE


APPROVED

APPROVED BY
CONDITIONS OF APPROVAL, IF ANY:

MAY 22 1970

JERRY W. LONG
DISTRICT ENGINEER

*See Instructions on Reverse Side

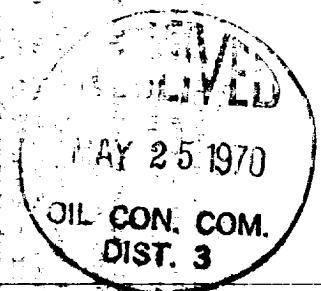

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; and/or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.