

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUBMIT IN TRIPLICATE*
(Other instructions on reverse side)

Form approved.
Budget Bureau No. 42-R1424.

5. LEASE DESIGNATION AND SERIAL NO.

424

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

Jicarilla Apache

7. UNIT AGREEMENT NAME

8. FARM OR LEASE NAME

Littleton

9. WELL NO.

1

10. FIELD AND POOL, OR WILDCAT

Venado - Mesa Verde

11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA

Sec. 8-T22N-R5W

NMPM

12. COUNTY OR PARISH

Sandoval

13. STATE

N.M.

1. OIL WELL ☒ GAS WELL ☐ OTHER ☐
2. NAME OF OPERATOR
Warren Drilling Company
3. ADDRESS OF OPERATOR
U 1215 United Founders Tower, Oklahoma City, Okla.
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements. See also space 17 below.)
At surface
660' FNL & 660' FWL Sec. 8-T22N-R5W

14. PERMIT NO.

15. ELEVATIONS (Show whether OF, RT, GR, etc.)

6992' K. B.

Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF ☐

PULL OR ALTER CASING ☐

FRACTURE TREAT ☐

MULTIPLE COMPLETION ☐

SHOOT OR ACIDIZE ☐

ABANDON* ☐

REPAIR WELL ☐

CHANGE PLANS ☐

(Other) ☐

SUBSEQUENT REPORT OF:

WATER SHUT-OFF ☐

REPAIRING WELL ☐

FRACTURE TREATMENT ☐

ALTERING CASING ☐

SHOOTING OR ACIDIZING ☐

ABANDONMENT* ☒

(Other) ☐


(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)

6-6-73 Plug and Abandonment completed.

Well was plugged and abandoned in the following manner:

1. Set 15 sack cement plug 4780'-4830'. (Did not have sufficient tubing on location to set plug 5050'-5092'.)
2. Set 30 sack cement plug 3950'-4150'.
3. Set 15 sack cement plug 3350'-3450'.
4. Shot off casing at 2043'.
5. Set 50 sack cement plug 1870'-2100'.
6. Set 75 sack cement plug 1350'-1600'.
7. Set Dry Hole Marker with 15 sacks at surface.

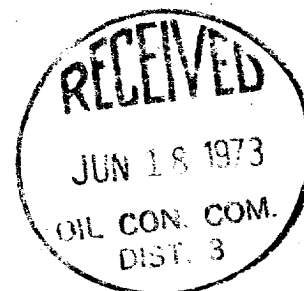

18. I hereby certify that the foregoing is true and correct

SIGNED

TITLE

Petroleum Engineer
Consultant

DATE

6-14-73

(This space for Federal or State office use)

APPROVED BY

TITLE

DATE

CONDITIONS OF APPROVAL, IF ANY:

*See Instructions on Reverse Side

COPY 10