

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEYSUBMIT IN TRIPLICATE*
(Other instructions on re-
verse side)Form approved.
Budget Bureau No. 42-R1424.

5. LEASE DESIGNATION AND SERIAL NO.

ST 078067

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

--

7. UNIT AGREEMENT NAME

Carson Unit

8. FARM OR LEASE NAME

(R. Mins) Carson A.

9. WELL NO.

21-23

10. FIELD AND POOL, OR WILDCAT

Disti

11. SEC., T., R., E., M., OR BLK. AND
SURVEY OR AREASec. 23, T. 25 N., R. 12
W., N.M.P.M.

12. COUNTY OR PARISH

San Juan

13. STATE

N. M.

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☐ GAS WELL ☐ OTHER ☒ Water Injection	7. UNIT AGREEMENT NAME Carson Unit
2. NAME OF OPERATOR Shell Oil Company	8. FARM OR LEASE NAME (R. Mins) Carson A.
3. ADDRESS OF OPERATOR P. O. Box 999, Bakerfield, California 93302	9. WELL NO. 21-23
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface 660' south and 1978' east of the northwest corner, Sec. 23, T. 25 N., R. 12 W., N.M.P.M., San Juan County, New Mexico.	10. FIELD AND POOL, OR WILDCAT Disti
14. PERMIT NO.	15. ELEVATIONS (Show whether DF, RT, GR, etc.) KB 6410.5', OR 6410.1'
12. COUNTY OR PARISH San Juan	13. STATE N. M.

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF ☐	PULL OR ALTER CASING ☐
FRACTURE TREAT ☐	MULTIPLE COMPLETE ☐
SHOOT OR ACIDIZE ☐	ABANDON* ☐
REPAIR WELL ☐	CHANGE PLANS ☐
(Other) ☐	Set bridge plug ☒


SUBSEQUENT REPORT OF:

WATER SHUT-OFF ☐	REPAIRING WELL ☐
FRACTURE TREATMENT ☐	ALTERING CASING ☐
SHOOTING OR ACIDIZING ☐	ABANDONMENT* ☐
(Other) ☐	

(NOTE: Report results of multiple completion on Well
Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

1. Pull tubing and packer.
2. Set a wire line bridge plug at 4896.5'.
3. Run tubing and packer.
4. Resume injection.

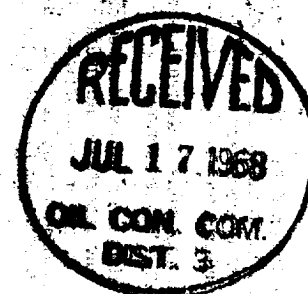

18. I hereby certify that the foregoing is true and correct

SIGNED B. W. [Signature] TITLE _____ DATE JUL 15 1968

(This space for Federal or State office use)

APPROVED BY _____ TITLE _____ DATE _____
CONDITIONS OF APPROVAL, IF ANY:

*See Instructions on Reverse Side

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State regulations, permits, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for special instructions.

Item 17: Proposals to abandon a well and submit reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include the reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting or any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking for approval of the abandonment.