


*cl*

**UNITED STATES  
DEPARTMENT OF THE INTERIOR  
BUREAU OF LAND MANAGEMENT**

**SUNDRY NOTICES AND REPORTS ON WELLS**

Do not use this form for proposals to drill or to deepen or reentry to a different reservoir.  
Use "APPLICATION FOR PERMIT--" for such proposals

SUBMIT IN TRIPLICATE

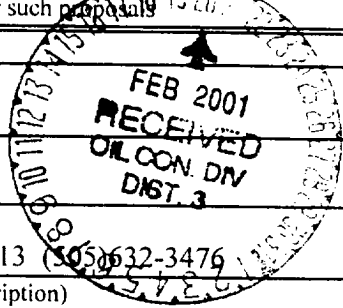

FORM APPROVED  
Budget Bureau No. 1004-0135  
Expires: March 31, 1993

5. Lease Designation and Serial No.  
NM 070322A

6. If Indian, Allottee or Tribe Name

7. If Unit or CA. Agreement Designation  
Central Bisti Unit

8. Well Name and No.  
Central Bisti Unit #WS-1

9. API Well No.  
30045 29987

10. Field and Pool, or Exploratory Area  
Bisti Lower Gallup

11. County or Parish, State  
San Juan, New Mexico

1. Type of Well  
 Oil Well     Gas Well     Other

2. Name of Operator  
Central Resources, Inc.

3. Address and Telephone No.  
P.O. Box 1213, Bloomfield, New Mexico 87413 (505) 632-3476

4. Location of Well (Footage, Sec., T., R., M., or Survey Description)  
466' FSL, 1136' FWL, Sec. 10, T25N, R12W *M*

**12. CHECK APPROPRIATE BOX(S) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA**

TYPE OF SUBMISSION		TYPE OF ACTION	
<input type="checkbox"/> Notice of Intent	<input checked="" type="checkbox"/> Abandonment	<input type="checkbox"/> Change of Plans	
<input type="checkbox"/> Subsequent Report	<input type="checkbox"/> Recompletion	<input type="checkbox"/> New Construction	
<input checked="" type="checkbox"/> Final Abandonment Notice	<input type="checkbox"/> Plugging Back	<input type="checkbox"/> Non-Routine Fracturing	
	<input type="checkbox"/> Casing Repair	<input type="checkbox"/> Water Shut-Off	
	<input type="checkbox"/> Altering Casing	<input type="checkbox"/> Conversion to Injection	
	<input type="checkbox"/> Other _____	<input type="checkbox"/> Dispose Water	

(Note: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

**13. Describe Proposed or Completed Operations (Clearly state all pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)\***

January 23-25th.

- A. ~~Set a CIBP at 1836' and spot cement on top to 1886' using 20 sacks cement.~~ <sup>128</sup>
- B. Bring top of Menefee plug from 1800' to <sup>1425</sup>2200' inside outside 7" casing using 47 sacks cement.
- C. Set Pictured Cliffs plug from 1176' to 1076' inside and outside 7" casing using 47 sacks cement.
- D. Place the Fruitland Plug from 890' to 790' inside and outside 7" casing using 47 sacks cement.
- E. Place the surface plug from 356' to surface inside and outside the 7" casing to cover the surface casing shoe, the Ojo Alamo interval to the surface.
- G. Cut well head and install dry hole marker. Clear and remediate location.

14. Thereby certify that the foregoing is true and correct

Signed *Patty Shelton* Title Production Technician Date 02/13/01

**Patty Shelton**

(This space for Federal or State office use)

Approved by \_\_\_\_\_ Title \_\_\_\_\_ Date \_\_\_\_\_

Conditions of approval, if any:

**SENT FOR RECORD**

Title 18 U.S.C. Section 1001, makes it a crime for any person knowingly and willfully to make to any department or agency of the United States any false, fictitious or fraudulent statements or representations as to any manner within its jurisdiction.

\*See Instruction on Reverse Side

NMOCD

-B-1-2001

*dm* *WFL*

*X*