

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUBMIT IN TRIPLICATE*
(Other instructions on reverse side)

Form approved.
Budget Bureau No. 42-R1424.

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

5. LEASE DESIGNATION AND SERIAL NO.

14-20-603-735-14

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

7. UNIT AGREEMENT NAME

West Bisti Unit

8. FARM OR LEASE NAME

9. WELL NO.

101

10. FIELD AND POOL, OR WILDCAT

Bisti Lower Gallup

11. SEC., T., R., M., OR BLK. AND
SURVEY OR AREA

Sec 13-T26N-R14W

12. COUNTY OR PARISH

San Juan

13. STATE

NM

1. OIL ☐ WELL GAS ☐ WELL OTHER ☒ Injection

2. NAME OF OPERATOR


Gulf Oil Corporation

3. ADDRESS OF OPERATOR

P. O. Box 670, Hobbs, NM 88240

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.
See also space 17 below.)
At surface

1980' FSL & 660' FEL

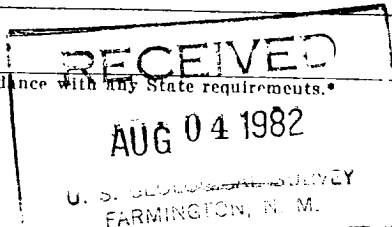

14. PERMIT NO.

15. ELEVATIONS (Show whether DF, RT, GR, etc.)

6413' GL

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF ☐

FRACTURE TREAT ☐

SHOOT OR ACIDIZE ☐

REPAIR WELL ☐

(Other) Repair Casing Leak

PULL OR ALTER CASING ☐

MULTIPLE COMPLETE ☐

ABANDON* ☐

CHANGE PLANS ☐

X

SUBSEQUENT REPORT OF:

WATER SHUT-OFF ☐

FRACTURE TREATMENT ☐

SHOOTING OR ACIDIZING ☐

(Other) ☐

REPAIRING WELL ☐

ALTERING CASING ☐

ABANDONMENT* ☐

(NOTE: Report results of multiple completion on Well
Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)

POH with tubing. Set RBP at 5000', cap with 10' frac sand. Set cement retainer at 75' above casing leak. Cement as needed. Drill out cement retainer and cement. Clean out to RBP. Recover RBP. Set packer at 5175'. Return well to injection.



18. I hereby certify that the foregoing is true and correct

SIGNED

R. D. Rite

TITLE

Area Engineer

DATE

8-3-82

(This space for Federal or State use)

APPROVED

APPROVED BY

CONDITIONS OF APPROVAL

TITLE

DATE

JAMES F. SIMS

DISTRICT ENGINEER

See Instructions on Reverse Side