

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEYSUBMIT IN TRIPLICATE*
(Other instructions on re-
verse side)Form approved.
Budget Bureau No. 42-R1424.
5. LEASE DESIGNATION AND SERIAL NO.

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☐ GAS WELL ☒ OTHER		6. IF INDIAN, ALLOTTEE OR TRIBE NAME 603-297 Navajo Tribal 14-20-	
2. NAME OF OPERATOR Skelly Oil Company		7. UNIT AGREEMENT NAME	
3. ADDRESS OF OPERATOR 1860 Lincoln Street - Denver, Colorado 80203		8. FARM OR LEASE NAME Navajo "C"	
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface 1770' PSL & 1770' FWL Section 12-26N-12W		9. WELL NO. 1	
14. PERMIT NO.		10. FIELD AND POOL, OR WILDCAT Gallegos Gallup	
15. ELEVATIONS (Show whether DF, RT, GR, etc.) 5939' GR		11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA Section 12-26N-12W	
		12. COUNTY OR PARISH San Juan	
		13. STATE New Mexico	

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF ☐	PULL OR ALTER CASING ☐
FRACTURE TREAT ☐	MULTIPLE COMPLETE ☐
SHOOT OR ACIDIZE ☐	ABANDON* ☐
REPAIR WELL ☐	CHANGE PLANS Sand ☒
(Other) Plug back & test Fruitland	☒

SUBSEQUENT REPORT OF:

WATER SHUT-OFF ☐	REPAIRING WELL ☐
FRACTURE TREATMENT ☐	ALTERING CASING ☐
SHOOTING OR ACIDIZING ☐	ABANDONMENT* ☐
(Other) ☐	

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

Approval has been obtained to plug and abandon; however, plans have been changed to test the Fruitland Sand 1100-1113' as follows:

Squeeze 20 sacks cement with 3% gel across Gallup perforations 5040-5070'.

Run Gamma Ray Collar log


Perforate at 1180' with 4 jet shots

Pump 150 sacks cement down 5-1/2" casing with Howco plug on top of cement. Displace down 5-1/2" casing with water and stop plug at 1150'. Top of cement behind casing to be at approximately 700' and across Fruitland formation 1100-1113'. Shut well in at top and WOC 24 hours.

Perforate Fruitland Sand 1100-1113' with 52 jet shots (4 shots per foot)

Run open ended tubing to 1100' and swab and test

If necessary, acidize and/or frac.

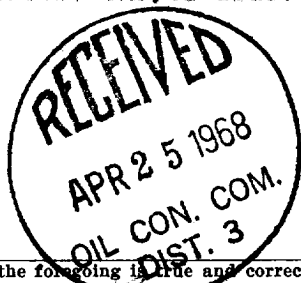

18. I hereby certify that the foregoing is true and correct

SIGNED

Richard H. Hargis

TITLE

District Superintendent

DATE

April 23, 1968

(This space for Federal or State office use)

APPROVED BY

TITLE

DATE

CONDITIONS OF APPROVAL, IF ANY:

*See Instructions on Reverse Side

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.

