

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUBMIT IN TRIPLICATE*
(Other instructions on re-
verse side)

Form approved.
Budget Bureau No. 42-R1424

5. LEASE DESIGNATION AND SERIAL NO.

NOO-C-14-20-2727

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

Navajo

7. UNIT AGREEMENT NAME

8. FARM OR LEASE NAME

Navajo Tribe "BP"

9. WELL NO.

3

10. FIELD AND POOL, OR WILDCAT

Tocito Dome

11. SEC., T., R., M., OR BLK. AND
SURVEY OR AREA

35, T26N, R18W, NMPM

12. COUNTY OR PARISH

San Juan

13. STATE

N. Mex.

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☒ GAS WELL ☐ OTHER ☐

2. NAME OF OPERATOR

TEXACO, Inc.

3. ADDRESS OF OPERATOR

P. O. Box EE, Cortez, Co. 81321

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.*
See also space 17 below.)
A. surface

660' From North Line & 1980' From West Line

14. PERMIT NO.

15. ELEVATIONS (Show whether DF, RT, GR, etc.)

5596" KB

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF ☐

FRACTURE TREAT ☐

SHOOT OR ACIDIZE ☐

REPAIR WELL ☐

(Other) ☐

PULL OR ALTER CASING ☐

MULTIPLE COMPLETE ☐

ABANDON* ☐

CHANGE PLANS ☐

SUBSEQUENT REPORT OF:

WATER SHUT-OFF ☐

FRACTURE TREATMENT ☐

SHOOTING OR ACIDIZING ☐

(Other) ☐

REPAIRING WELL ☐

ALTERING CASING ☐

ABANDONMENT* ☒

(NOTE: Report results of multiple completion on Well
Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

Abandoned this well because it was completed non-productive: 9-10-74.

Procedure:

Filled hole with mud. Spot 30 sacks cement 6450'-6300'. Run free point and cut casing at 3424'. Spot 50 sacks cement 100' in and out of casing stub. Spot 75 sacks cement plugs 3900'-3700' and 2150'-1950'. Spot 70 sacks cement 1700'-1550' across intermediate string shoe and 10 sacks cement at surface with the marker.

18. I hereby certify that the foregoing is true and correct

SIGNED

W. A. May

TITLE Field Foreman


(This space for Federal or State office use)

APPROVED BY

TITLE

DATE

CONDITIONS OF APPROVAL, IF ANY:

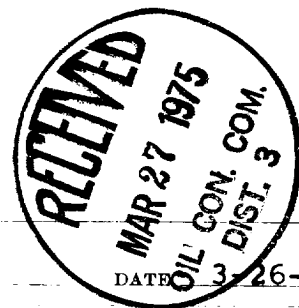

DATE 3-26-75

*See Instructions on Reverse Side

USGS (3) , OGCC (2) , JAS, GLE, JHP, ARM