

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEYSUBMIT IN TRIPLICATE*
(Other instructions on re-
verse side)Form approved.
Budget Bureau No. 42-R1424.

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT" for such proposals.)

1. OIL WELL <input type="checkbox"/> GAS WELL <input checked="" type="checkbox"/> OTHER	5. LEASE DESIGNATION AND SERIAL NO. NM 0559973
2. NAME OF OPERATOR Kirby Exploration Company	6. IF INDIAN, ALLOTTEE OR TRIBE NAME
3. ADDRESS OF OPERATOR P.O. Box 1745, Houston, Texas 77001	7. UNIT AGREEMENT NAME
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below) At surface 980' FNL and 1350' FWL	8. FARM OR LEASE NAME Grigsby Federal
14. PERMIT NO.	9. WELL NO. 1
15. ELEVATIONS (Show whether DF, RT, GR, etc.) 6263 GL	10. FIELD AND POOL, OR WILDCAT WAW Picture Cliff Extension
	11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA Sec 9 - 26N - 13W
	12. COUNTY OR PARISH San Juan
	13. STATE New Mexico

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

FRACTURE TREAT

SHOOT OR ACIDIZE

REPAIR WELL

(Other)

PULL OR ALTER CASING

MULTIPLE COMPLETE

ABANDON*

CHANGE PLANS

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

FRACTURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

REPAIRING WELL

ALTERING CASING

ABANDONMENT*

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

Well was plugged and abandoned as follows:

1. Set 50 sacks cement plug from 1300 to total depth 1551.
2. Set 25 sacks cement plug from 450 to 550'.
3. Set 70 sacks cement plug from 50' to 250'.
4. Set 5 sacks cement plug in top of surface pipe.
5. Cut off surface pipe 3' below ground level.
6. Dry hole marker will not be installed.
7. Well plugged and abandoned 3:00 p.m. 6-11-76.

18. I hereby certify that the foregoing is true and correct

SIGNED

William T. Jones

TITLE

Agent

DATE

6-14-76

(This space for Federal or State office use)

APPROVED

APPROVED BY

TITLE


DATE

CONDITIONS OF APPROVAL, IF ANY:

P. T. McGRATH

DISTRICT ENGINEER

*See Instructions on Reverse Side

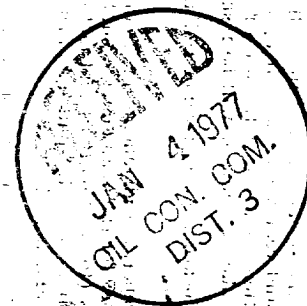

JUN 17 1976

U. S. GEOLOGICAL SURVEY