

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUBMIT IN TRIPPLICATE*
(Other instructions on reverse side)

Form approved.
Budget Bureau No. 42-R1424.

5. LEASE DESIGNATION AND SERIAL NO.

BF-047017-A

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

ILLEGIBLE

1. OIL WELL GAS WELL OTHER

2. NAME OF OPERATOR
Southern Union Production Company

3. ADDRESS OF OPERATOR
P. O. Box 808, Farmington, New Mexico 87401

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.*
See also space 17 below.)
At surface
590 ft. from the North line and 1240 ft. from the East line.

7. UNIT AGREEMENT NAME

8. FARM OR LEASE NAME

Angel Peak #3

9. WELL NO.

3

10. FIELD AND POOL, OR WILDCAT

Fulcher Antz
Pictured Cliffs

11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA

Sec. 11, T-28N, R-11W

14. PERMIT NO.

15. ELEVATIONS (Show whether DF, RT, GR, etc.)

12. COUNTY OR PARISH

San Juan

13. STATE

New Mexico

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

FRACTURE TREAT

SHOOT OR ACIDIZE

REPAIR WELL

(Other)

PULL OR ALTER CASING

MULTIPLE COMPLETE

ABANDON*

CHANGE PLANS

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

FRACTURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

REPAIRING WELL

ALTERING CASING

ABANDONMENT*

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

Due to uneconomic status of Angel Peak No. 3 it has been plugged and abandoned as follows:

1. Rigged up and pumped 25 barrels fresh water down 1" tubing, sent in on a Vacuum.
2. Pumped 25 sacks class "B" cement in open hole from 1773 ft. to 1723 ft.
3. Came out of hole with 1" tubing to 825 foot and pumped 5 sack plug.
4. Came out of hole with 1" tubing and pumped 10 sacks plug (24 ft. of 6-5/8") to Ground Level.
5. Cut off tubing head and installed Dry Hole Marker.
6. Location ready for inspection.

RECEIVED

MAY 3 1976

U. S. GEOLOGICAL SURVEY
FARMINGTON, N.M.

18. I hereby certify that the foregoing is true and correct

Original Signed By

SIGNED

Jerry L. Lea
Jerry L. Lea

TITLE

Area Engineer

DATE

4/28/76

(This space for Federal or State office use)


APPROVED BY

TITLE

DATE

CONDITIONS OF APPROVAL, IF ANY:

*See Instructions on Reverse Side

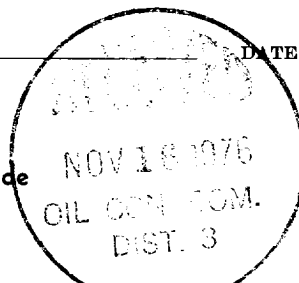

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.