

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

FORM APPROVED
Budget Bureau No. 1004-0135
Expires: September 30, 1990

SUNDRY NOTICES AND REPORTS ON WELLS

Do not use this form for proposals to drill or to deepen or reentry to a different reservoir.

Use "APPLICATION FOR PERMIT-" for such proposals - 0 AM 10: 46

SUBMIT IN TRIPLICATE

1. Type of Well

☐ OIL
WELL

☒ GAS
WELL

☐ OTHER

2. Name of Operator

Amoco Production Company

Melissa Velasco-Price

3. Address and Telephone No.

P.O. Box 3092 Houston, TX 77253

(281) 366-2548

4. Location of Well (Footage, Sec., T., R., M., or Survey Description)

790' FNL 1850' FWL Sec. 25 T28N R12W Unit C

5. Lease Designation and Serial No.

SF-078904-A

6. If Indian, Allottee or Tribe Name

7. If Unit or CA, Agreement Designation

8. Well Name and No.

Gallegos Canyon Unit 123

9. API Well No.

30-045-07232

10. Field and Pool, or Exploratory Area

Kutz West Pictured Cliffs

11. County or Parish, State

San Juan New Mexico

12. CHECK APPROPRIATE BOX(s) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

TYPE OF SUBMISSION

☒ Notice of Intent

☐ Subsequent Report

☐ Final Abandonment Notice

TYPE OF ACTION

☒ Abandonment

☐ Recompletion

☐ Plugging Back

☐ Casing Repair

☐ Altering Casing

☐ Other

☐ Change of Plans

☐ New Construction

☐ Non-Routine Fracturing


☐ Water Shut-Off

☐ Conversion to Injection

(Note: Report results of multiple completion on Well Completion or
Recompletion Report and Log form.)

13. Describe Proposed or Completed Operations. (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

Amoco Production Company requests permission to Plug and Abandon the subject well per the attached well work procedure.

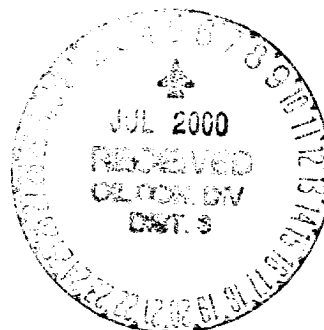

14. I hereby certify that the foregoing is true and correct

Signed

Melissa Velasco-Price

Title **Permitting Assistant**

Date **06/07/00**

(This space for Federal or State office use)

Approved by

Title

Date *6/30/00*

Conditions of approval, if any:

Title 18 U.S.C. Section 1001, makes it a crime for any person knowingly and willfully to make to any department or agency of the United States any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction.

*See Instructions On Reverse Side

NMOC

GCU 123 (623)

Original Completion: 2/62 (DK) Recompleted: 6/62 (GP), 5/76 (PC)

TD = 6,415' PBTD = 1,855'

Page 2 of 2

Objective: PXA entire wellbore

1. Notify regulatory agencies (BLM, NMOCD, FIMO) 24 hours in advance of plugging activity. Contact BLM and indicate well is allotted (FIMO regulations effective April 1, 1997).
2. Check location for anchors. Install if necessary. Test anchors.
3. MIRUSU. Blow down well. Kill if necessary with fresh water. NDWH. NUBOP.
4. TOH with 2 3/8" tubing. TIH with 2 3/8" tubing workstring and CIBP. Set CIBP at 1,650'. Spot cement plug from 1,650' to 1,252' to cover Pictured Cliffs and Fruitland. TOH, rig up wireline, TIH and perforate at 638'. Pump cement down casing and circulate cement to surface leaving casing full of cement to cover Kirtland Shale, Ojo Alamo and surface.
5. NDBOP. Cut off casing and wellhead. Install PXA marker according to BLM or State requirements.
6. Contact FMC and ship surface equipment to yard or other location per instructions.
7. Turn over to Buddy Shaw for reclamation.
8. Rehabilitate location according to BLM or State requirements.

GCU 123 (PC)

C25 T28N-R12W, 790' FNL, 1850' FWL

API 3004507232

SF-078904-A

Proposed PXA Wellbore Schematic

