

NO. OF COPIES RECEIVED	3
DISTRIBUTION	
SANTA FE	1
FILE	1
U.S.G.S.	
LAND OFFICE	
OPERATOR	1

NEW MEXICO OIL CONSERVATION COMMISSION

Form C-103
Supersedes Old
C-102 and C-103
Effective 1-1-65

5a. Indicate Type of Lease
State <input type="checkbox"/> Federal <input checked="" type="checkbox"/> Fee <input type="checkbox"/>
5. State Oil & Gas Lease No.

SUNDRY NOTICES AND REPORTS ON WELLS (DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT -" (FORM C-101) FOR SUCH PROPOSALS.)

1. OIL <input type="checkbox"/> WELL GAS <input checked="" type="checkbox"/> WELL OTHER- <input type="checkbox"/>	7. Unit Agreement Name
2. Name of Operator El Paso Natural Gas Company	8. Farm or Lease Name Schwerdtfeger
3. Address of Operator Box 990, Farmington, New Mexico	9. Well No. 1
4. Location of Well UNIT LETTER M , 990 FEET FROM THE South LINE AND 990 FEET FROM THE West LINE, SECTION 27 TOWNSHIP 31N RANGE 9W NMPM.	10. Field and Pool, or Wildcat Blanco Mesa Verde
15. Elevation (Show whether DF, RT, GR, etc.) 6067' DF	12. County San Juan

Check Appropriate Box To Indicate Nature of Notice, Report or Other Data NOTICE OF INTENTION TO: SUBSEQUENT REPORT OF:

PERFORM REMEDIAL WORK <input type="checkbox"/>	PLUG AND ABANDON <input checked="" type="checkbox"/>	REMEDIAL WORK <input type="checkbox"/>	ALTERING CASING <input type="checkbox"/>
TEMPORARILY ABANDON <input type="checkbox"/>	CHANGE PLANS <input type="checkbox"/>	COMMENCE DRILLING OPNS. <input type="checkbox"/>	PLUG AND ABANDONMENT <input type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>	OTHER <input type="checkbox"/>	CASING TEST AND CEMENT JOB <input type="checkbox"/>	OTHER <input type="checkbox"/>

17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

The mechanical condition of this well is such that a workover and recompletion in the old hole is uneconomical; it is therefore intended to plug and abandon this well in the following manner:


Pull tubing, if tubing is stuck shoot off below the 5 1/2" casing shoe.

Set a cast iron cement retainer on the tubing near the bottom of the 5 1/2" casing and squeeze the open hole with 200 sacks of cement.

Perforate the 5 1/2" casing at 1660' and block squeeze the 5 1/2" annulus with 100 sacks of cement.

Remove the wellhead and install a 4" x 4' plug and abandonment marker in a 5 sack cement plug in the top of the surface casing.

No casing recovery is planned.

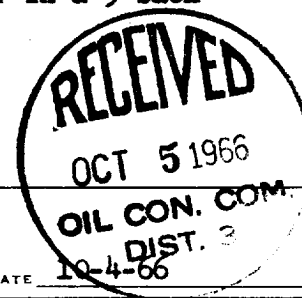

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

Carl E. Matthews

Petroleum Engineer

DATE

10-4-66

APPROVED BY

TITLE

DATE

10-5-66

CONDITIONS OF APPROVAL, IF ANY: