

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

FORM APPROVED
Budget Bureau No. 1004-0135
Expires: March 31, 1993

SUNDRY NOTICES AND REPORTS ON WELLS

Do not use this form for proposals to drill or to deepen or reentry to a different reservoir.
Use "APPLICATION FOR PERMIT-" for such proposals

SUBMIT IN TRIPLICATE

1. Type of Well

☒ Oil Well ☐ Gas Well ☐ Other

2. Name of Operator


BK Petroleum, Inc.

3. Address and Telephone No.

P.O. Box 826, Farmington, NM 87499, 505-326-3139

4. Location of Well (Footage, Sec., T., R., M., or Survey Description)

1673' FNL, 1789' FEL, Sec. 17, T31N R16W

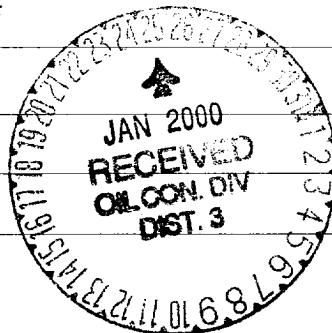

5. Lease Designation and Serial No.
14-20-600-3531

6. If Indian, Allottee or Tribe Name

Navajo

7. If Unit or CA, Agreement Designation

Many Rocks Gallup Project

8. Well Name and No.

Many Rocks Gallup # 21

9. API Well No.

30-045-12182

10. Field and Pool, or Exploratory Area

Many Rocks Gallup

11. County or Parish, State

San Juan

12. CHECK APPROPRIATE BOX(s) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

TYPE OF SUBMISSION	TYPE OF ACTION	
<input checked="" type="checkbox"/> Notice of Intent	<input checked="" type="checkbox"/> Abandonment	<input type="checkbox"/> Change of Plans
<input type="checkbox"/> Subsequent Report	<input type="checkbox"/> Recompletion	<input type="checkbox"/> New Construction
<input type="checkbox"/> Final Abandonment Notice	<input type="checkbox"/> Plugging Back	<input type="checkbox"/> Non-Routine Fracturing
	<input type="checkbox"/> Casing Repair	<input type="checkbox"/> Water Shut-Off
	<input type="checkbox"/> Altering Casing	<input type="checkbox"/> Conversion to Injection
	<input type="checkbox"/> Other _____	<input type="checkbox"/> Dispose Water

(Note: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

BK Petroleum, Inc. respectfully request permission to Plug and Abandon the above referenced well in the Many Rocks Gallup Unit. The below mention procedures will be used to complete this action.

1. Set 4 1/2" CIBP at 1430'. RIH with 2 3/8 tubing. Tag CIBP and spot 219' of cement on plug. TOC caculated at 470 BHP.
2. Displace 4 1/2 with 8.33 PPG fresh water from TOC @ 1211' to 240' Caculated 15 BBLS.
3. Perforate @ 235' circulate cement to surface and fill inside 4 1/2 to surface.
3. Cut of casing to allow dry hole marker to be installed.
4. Remove surface equipment. remediate location as required.

14. I hereby certify that the foregoing is true and correct

Signed

Title President

Date 01/13/00

(This space for Federal or State office use)

Approved by

Title

Acting Team Lead

Date

1/19/00