

Buckeye Disposals
PO Box 2724
Lubbock, Texas 79408

Remediation Plan for State AF #3

Ms. Lynch,

Thank you for your review and conditional approval of the cleanup of the State AF #3. To continue the cleanup, we propose the following steps:


1. Remove all dirt down to the liner.
2. Take soil samples from each corner of the berm and anywhere the liner is ripped or torn.
 - a. Laboratory will check for levels of benzene, vtex, tph and chloride.
3. Discuss analytics with NMOCD prior to excavation.
4. Clean the liner of all remaining oil residue.
5. Take samples of the soil where the liner has torn on the South side of the disposal and on the containment berm. (Soil samples locations attached.)
6. Remove all contaminated soil.
7. Install new liner.
8. Bring in new dirt to refill previously contaminated areas.
9. Paint facility.
10. Dispose of contaminated dirt at an approved facility.

We are prepared to start the cleanup procedures immediately. Please let me know when we can precede in the remediation.

Jack Yates

10/3/2016

Torn liner
sample area

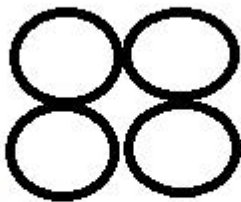

N



Sample Area

