

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEYSUBMIT IN TRIPLICATE
(Other instructions on reverse side)Form approved.
Budget Bureau No. 42-R1424.

6. LEASE DESIGNATION AND SERIAL NO.

NM-19213-A

8. IF INDIAN, ALLOTTEE OR TRIBE NAME

7. UNIT AGREEMENT NAME

8. FARM OR LEASE NAME

Trinity

9. WELL NO.

#1

10. FIELD AND POOL, OR WILDCAT

Wildcat

11. SEC., T., R., M., OR BLK. AND
SURVEY OR AREA

Sec. 28, T12S, R38E

12. COUNTY OR PARISH

Lea

13. STATE

NM

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1.

OIL
WELL ☒ GAS
WELL ☐ OTHER

2. NAME OF OPERATOR

TOM L. INGRAM

3. ADDRESS OF OPERATOR

POB 1757, ROSWELL, NEW MEXICO 88201

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.*

See also space 17 below.)

At surface

766' FSL & 554 FWL of Sec. 28

14. PERMIT NO.

15. ELEVATIONS (Show whether DF, RT, GR, etc.)

3827 GR

16.

Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

☐
☐
☐
☐

PULL OR ALTER CASING

☐
☐
☐
☐

FRACTURE TREAT

MULTIPLE COMPLETE

SHOOT OR ACIDIZE

ABANDON*

REPAIR WELL

CHANGE PLANS

(Other)

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

☐
☐
☐

REPAIRING WELL

☐
☐
☐

FRACTURE TREATMENT

ALTERING CASING

SHOOTING OR ACIDIZING

ABANDONMENT*

(Other) testing

(NOTE: Report results of multiple completion on Well
Completion or Recompletion Report and Log form.)

17 DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

5/12 thru 7/19/75: Perforated 1 shot per foot, 10,094-97-99-100-102-110-113. Acidized w/1500 gallons. Swabbed formation water with a trace of gas. Set CIBP @ 9950 and put 100' of cement on top. Perforated 1 shot per foot, 9647-48-49-51-52-55-57. Acidized with 1500 gals. Swabbed oil & wtr. Perforated 1 shot per foot, 9626-9627, 9600, 9550-51-52-59-77-78-79-99. Acidized with 10,000 gals. Swabbed wtr. with trace of oil. Squeezed perforations 9550-9657 with 150 sx. Perf. 2 shots per foot, 9647-53, 9574-78, 9550-54. Acidized with 3000 gals. Re-acidized with 5000 gallons. Swabbed wtr. with trace of oil. Set CIBP @ 8995. Put 100' of cement on top. Put 100' plug @ 7200. Perforated 4 holes @ 5199, 5204-10-19-21-24-28-33-44-57-62. Acidized with 3000 gals. Swabbed wtr. with trace of oil. Squeezed perfs. 5199-5262 with 100 sx. Perf'd one shot per foot 5204-10-19-21-24-28-33 and acidized with 1000 gallons. Swabbed wtr. with trace of oil.

18. I hereby certify that the foregoing is true and correct

SIGNED

Tom Ingram

TITLE

Operator

DATE


9/19/75

(This space for Federal or State office use)

APPROVED BY

TITLE

CONDITIONS OF APPROVAL, IF ANY:

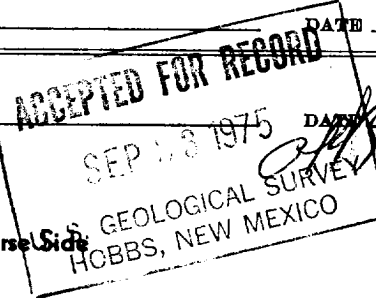

*See Instructions on Reverse Side