

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

SUBMIT IN TRIPL
(Other Instructions
verse 21c)

RECEIVED

Form approved.
Budget Bureau No. 1004-0135
Expires August 31, 1985

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

JAN 12 11 52 AM '89

1. OIL WELL ☒ GAS WELL ☐ OTHER ☐	7. UNIT AGREEMENT NAME MCA Unit
2. NAME OF OPERATOR Conoco Inc.	8. FARM OR LEASE NAME MCA Unit Bty 2
3. ADDRESS OF OPERATOR P.O. Box 460 - Hobbs, New Mexico 88240	9. WELL NO. 155
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface 1980' FNL & 1980' FEL - Unit Letter G	10. FIELD AND POOL, OR WILDCAT Maljama G-SA
14. PERMIT NO. 30-025-00768	11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA 29-17S-32E
15. ELEVATIONS (Show whether DF, RT, GR, etc.)	12. COUNTY OR PARISH Lea
	13. STATE NM

18. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:		SUBSEQUENT REPORT OF:	
TEST WATER SHUT-OFF ☐	PULL OR ALTER CASING ☐	WATER SHUT-OFF ☐	REPAIRING WELL ☐
FRACTURE TREAT ☐	MULTIPLE COMPLETION ☐	FRACTURE TREATMENT ☐	ALTERING CASING ☐
SHOOT OR ACIDIZE ☐	ABANDON* ☒	SHOOTING OR ACIDIZING ☐	ABANDONMENT* ☐
REPAIR WELL ☐	CHANGE PLANS ☐	(Other) ☐	(Other) ☐

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting and proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.) *

- 1) Test casing to 500 psi.
 - 2) Drill out CIBP at 3500'. Clean out open hole until you hit iron (somewhere between 3775'-3800').
 - 3) Spot 200 sxs cement over open hole. WOC. Tag cement.
 - 4) Spot mud & cement plugs as specified. (See sketch)
 - 5) Shoot squeeze holes at 600' and circulate cement to surface
 - 6) Install P&A marker
- For further information contact Pete Bower at 397-5894.

19. I hereby certify that the foregoing is true and correct

SIGNED <i>[Signature]</i>	TITLE Administrative Supervisor	DATE January 10, 1989
*This space for Federal or State office use		
APPROVED BY <i>[Signature]</i>	TITLE	DATE 1-27-89
CONDITIONS OF APPROVAL, IF ANY:		

*See Instructions on Reverse Side

RECEIVED

JAN 30 1989

OCD
HOBBS OFFICE

FOR

JOB OR AUTH. NO.


LOCATION 1980' FNL 1980' FEL 29-17-32

PAGE

SUBJECT MCA Unit No. 155

DATE

BY

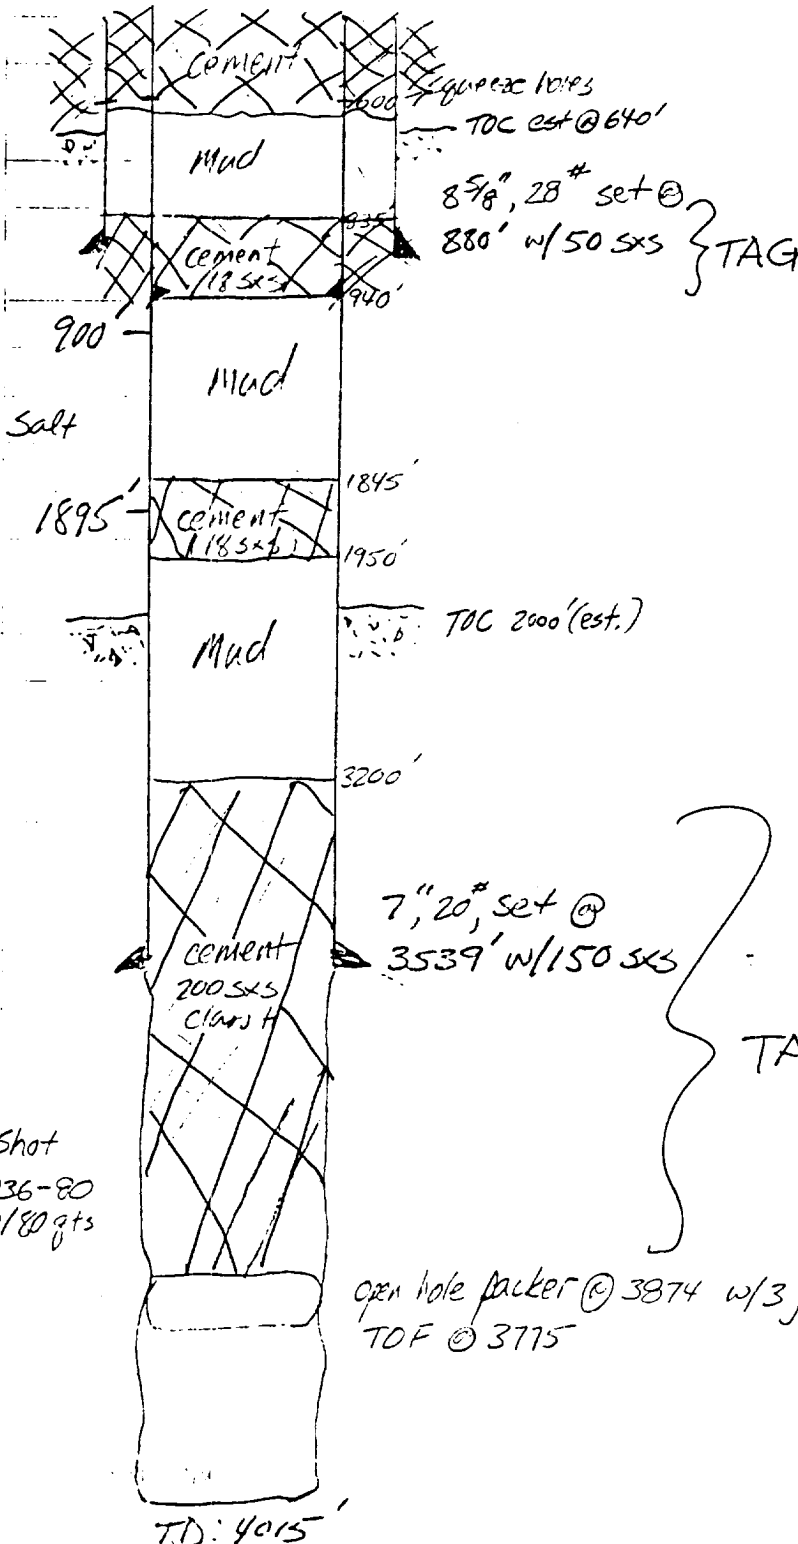

MCA 155

1980' FNL & 1980' FEL SEC 29 T17S R32E

Elev. 3950

Proposed P&A Wellbore

PDB 11/3/89