
Submit 1 Copy To Appropriate District Office	State of New Mexico		Form C-103			
<u>District I</u> – (575) 393-6161 1625 N. French Dr., Hobbs, NM 88240	Energy, Mi	nerals and Natu	ral Resources	WELL API NO.	Revised July 18, 2013	
<u>District II</u> – (575) 748-1283	OIL CONSERVATION DIVISION			30-025- 22454		
811 S. First St., Artesia, NM 88210 <u>District III</u> – (505) 334-6178		South St. Fran		5. Indicate Type of L STATE	ease FEE 🔀	
1000 Rio Brazos Rd., Aztec, NM 87410 <u>District IV</u> – (505) 476-3460		inta Fe, NM 87		6. State Oil & Gas Lo		
1220 S. St. Francis Dr., Santa Fe, NM				o. State on ee ous 2.	1100	
87505 SUNDRY NOT	ICES AND REPO	RTS ON WELLS		7. Lease Name or Un	nit Agreement Name	
(DO NOT USE THIS FORM FOR PROPO DIFFERENT RESERVOIR. USE "APPLI				E.B. Anders		
PROPOSALS.)	0 17/1137					
1. Type of Well: Oil Well   2. Name of Operator	9. OGRID Number	52				
BXP	3294	87				
3. Address of Operator						
1515 Calle Ser	, Ste. 174, Ho	bhs. MM &	840	SWD: Wol	f Cam P	
4. Well Location  Unit Letter   ↑↑ :	QQU feet fro	om the Sou	Ha line and	190 feet from th	e West line	
Section /s	Towns		nge 38E	NMPM Lea Co		
		how whether DR,	RKB, RT, GR, etc.)			
		3859	,		4-21	
12. Check A	Appropriate Box	to Indicate N	ature of Notice,	Report or Other Da	ta	
NOTICE OF IN	ITENTION TO	-	SUBS	SEQUENT REPO	RT OF	
PERFORM REMEDIAL WORK	PLUG AND ABA		REMEDIAL WORK		TERING CASING	
TEMPORARILY ABANDON	CHANGE PLAN		COMMENCE DRII		AND A	
PULL OR ALTER CASING DOWNHOLE COMMINGLE	MULTIPLE COM	1PL 🗌	CASING/CEMENT	JOB 🗌		
CLOSED-LOOP SYSTEM						
OTHER:			OTHER:			
<ol> <li>Describe proposed or comp of starting any proposed we proposed completion or rec</li> </ol>	ork). SEE RULE 1	9.15.7.14 NMAC	E. For Multiple Con	give pertinent dates, in appletions: Attach wellt	oore diagram of	
• • •		NU BOP LIVE	seateky & To	H W/PC tubing	(Z7/8)	
	1				ntontop wocah	
Thu (17) a"	the PNC ho	le win in Aella	1 6000 0 4	June 3 John Cla	7000' 2 hrs wic Tag	
P&S 50 Sx Class C 4800 Por 4 Sw h	ala Ca XXXXXX	tru an aby to	1 LA 2 5 907	LES SXS MAN IT &	7000 4 hrs WUC-Tota	
Per & 4 hotes @	3100 CAZEN	SXL ALAME	TOU . THIND 50%	1. ZIMC 50 ~50	sW.	
46 12 4	2300	" "	ii.			
ii u C	380	" " Cire	to autace. P	icture.		
Rb was su	. Ent off Well	head, Instal	LDHM. Enta	nchors below sour	(MHIC L	
Empty ske	of Pits. Waste	to GM-wes	tratum. Bo	hab within godan	s Fmal.	
					THE	
Spud Date:		Rig Release Dat	te:	=		
I hereby certify that the information	above is true and c	omplete to the be	st of my knowledge	and belief.		
Type or print name M-S. Me	fucc x	TITLE Part	uch Many	pare DATE	1.30.2021	
Type or print name	exchant	E-mail address:	mymerche	penrocoil as PHONI	E: 675) 492-1236	
For State Use Only						
APPROVED BY:	torther	TITLE Compl	iance Officer A	DATE	2/2/21	
Conditions of Approval (if any): Released to Imaging: 2/2/2021 10:3		<u> </u>		•		

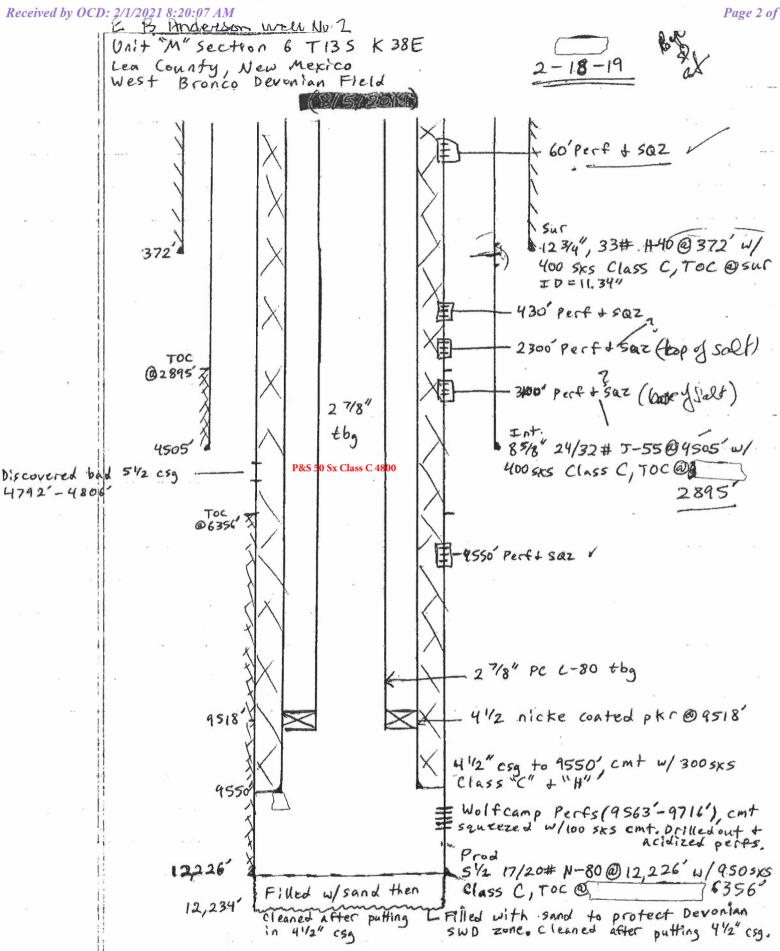

# CONDITIONS OF APPROVAL FOR PLUGGING AND ABANDONMENT OCD - Southern District

The following is a guide or checklist in preparation of a plugging program, this is not all inclusive and care must be exercised in establishing special plugging programs in unique and unusual cases, Notify NMOCD District Office I (Hobbs) at (575)-263-6633 at least 24 hours before beginning work. After MIRU rig will remain on well until it is plugged to surface. OCD is to be notified before rig down.

## Company representative will be on location during plugging procedures.

- **1.** A notice of intent to plug and abandon a wellbore is required to be approved before plugging operations are conducted. A cement evaluation tool is required in order to ensure isolation of producing formations, protection of water and correlative rights. A cement bond log or other accepted cement evaluation tool is to be provided to the division for evaluation if one has not been previously run or if the well did not have cement circulated to surface during the original casing cementing job or subsequent cementing jobs. Insure all bradenheads have been exposed, identified and valves are operational prior to rig up.
- **2.** Closed loop system is to be used for entire plugging operation. Upon completion, contents of steel pits are to be hauled to a permitted disposal location.
- **3.** Trucking companies being used to haul oilfield waste fluids to a disposal commercial or private- shall have an approved NMOCD C-133 permit. A copy of this permit shall be available in each truck used to haul waste products. It is the responsibility of the operator as well as the contractor, to verify that this permit is in place prior to performing work. Drivers shall be able to produce a copy upon request of an NMOCD Field inspector.
- 4. Filing a subsequent C-103 will serve as notification that the well has been plugged.
- **5.** A final C-103 shall be filed (and a site inspection by NMOCD Inspector to determine if the location is satisfactorily cleaned, all equipment, electric poles and trash has been removed to Meet NMOCD standards) before bonding can +be released.
- **6.** If work has not begun within 1 Year of the approval of this procedure, an extension request must be file stating the reason the well has not been plugged.
- 7. Squeeze pressures are not to exceed 500 psi, unless approval is given by NMOCD.
- **8.** Produced water will not be used during any part of the plugging operation.
- 9. Mud laden fluids must be placed between all cement plugs mixed at 25 sacks per 100 bbls of water.
- **10.** All cement plugs will be a minimum of 100' in length or a minimum of 25 sacks of cement, whichever is greater. 50' of calculated cement excess required for inside casing plugs and 100% calculated cement excess required on outside casing plugs.
- 11. Class 'C' cement will be used above 7500 feet.
- 12. Class 'H' cement will be used below 7500 feet.
- **13.** A cement plug is required to be set 50' above and 50' below, casing stubs, DV tools, attempted casing cut offs, cement tops outside casing, salt sections and anywhere the casing is perforated, these plugs require a 4 hour WOC and then will be tagged
- **14.** All Casing Shoes Will Be Perforated 50' below shoe depth and Attempted to be Squeezed, cement needs to be 50' above and 50' Below Casing Shoe inside the Production Casing.
- **16.** When setting the top out cement plug in production, intermediate and surface casing, wellbores should remain full at least 30 minutes after plugs are set
- 17. A CIBP is to be set within 100' of production perforations, capped with 100' of cement, WOC 4 hours and tag.
- **18.** A CIBP with 35' of cement may be used in lieu of the 100' plug if set with a bailer. This plug will be placed within 100' of the top perforation, (WOC 4 hrs and tag).

- 19. No more than 3000' is allowed between cement plugs in cased hole and 2000' in open hole.
- 20. Some of the Formations to be isolated with cement plugs are: These plugs to be set to isolate formation tops
- A) Fusselman
- B) Devonian
- C) Morrow
- D) Wolfcamp
- E) Bone Springs
- F) Delaware
- G) Any salt sections
- H) Abo
- I) Glorieta
- J) Yates.
- K) Potash---(In the R-111-P Area (Potash Mine Area),

A solid cement plug must be set across the salt section. Fluid used to mix the cement shall be saturated with the salts that are common to the section penetrated and in suitable proportions, not more than 3% calcium chloride (by weight of cement) will be considered the desired mixture whenever possible, woe 4 hours and tag, this plug will be SO' below the bottom and 50' above the top of the Formation.

**21.** If cement does not exist behind casing strings at recommended formation depths, the casing can be cut and pulled with plugs set at recommended depths. If casing is not pulled, perforations will be shot and cement squeezed behind casing, woe and tagged. These plugs will be set SO' below formation bottom to 50' above formation top inside the casing.

## DRY HOLE MARKER REQ.UIRMENTS

The operator shall mark the exact location of the plugged and abandoned well with a steel marker not less than four inches in diameter, 3' below ground level with a plate of at least¼" welded to the top of the casing and the dry hole marker welded on the plate with the following information welded on the dry hole marker:

- 1. Operator name
- 2. Lease and Well Number
- 3. API Number
- 4. Unit letter
- 5. Quarter Section (feet from the North, South, East or West)
- 6. Section, Township and Range
- 7. Plugging Date
- 8. County

### SPECIAL CASES ----AGRICULTURE OR PRARIE CHICKEN BREEDING AREAS

In these areas, a below ground marker is required with all pertinent information mentioned above on a plate, set 3' below ground level, a picture of the plate will be supplied to NMOCD for record, the exact location of the marker (longitude and latitude by GPS) will be provided to NMOCD (We typically require a current survey to verify the GPS)

#### SITE REMEDIATION DUE WITHIN ONE YEAR OF WELL PLUGGING COMPLETION

<u>District I</u> 1625 N. French Dr., Hobbs, NM 88240 Phone:(575) 393-6161 Fax:(575) 393-0720

811 S. First St., Artesia, NM 88210 Phone:(575) 748-1283 Fax:(575) 748-9720

District III
1000 Rio Brazos Rd., Aztec, NM 87410

Phone:(505) 334-6178 Fax:(505) 334-6170 1220 S. St Francis Dr., Santa Fe, NM 87505 Phone:(505) 476-3470 Fax:(505) 476-3462

**State of New Mexico Energy, Minerals and Natural Resources Oil Conservation Division** 1220 S. St Francis Dr. **Santa Fe, NM 87505** 

CONDITIONS

Action 16450

#### **CONDITIONS OF APPROVAL**

Operator:			OGRID:	Action Number:	Action Type:
BXP OPERATING, LLC	P.O. Box 7227	Dallas, TX75209	329487	16450	C-103F

OCD Reviewer	Condition
kfortner	See attached conditions of approval Note changes on procedure