Office	of New Mexico	Form C-103 ¹ of 6				
<u>District I</u> – (575) 393-6161 1625 N. French Dr., Hobbs, NM 88240	Revised July 18, 2013					
011 5. 1 list St., Altesia, Wi 00210	ERVATION DIVISION	30-015-20950 5. Indicate Type of Lease				
1000 Rio Brazos Rd Aztec NM 87410	outh St. Francis Dr. a Fe, NM 87505	STATE 🛛 FEE 🗌				
1220 S. St. Francis Dr., Santa Fe, NM	6. State Oil & Gas Lease No.					
87505 SUNDRY NOTICES AND REPORT (DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO	7. Lease Name or Unit Agreement Name					
DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (PROPOSALS.)		Allied State SWD				
1. Type of Well: Oil Well 🗌 Gas Well 🛛 Other	SWD	8. Well Number 1				
2. Name of Operator Read & Stevens, Inc.		9. OGRID Number 18917				
3. Address of Operator	00	10. Pool name or Wildcat				
PO Box 1518, Roswell, NM 882 4. Well Location		SWD Delaware				
Unit Letter: <u>1980</u> feet from	the South line and 99					
Section 10 Township	23S Range 26E	NMPM Eddy County				
3,330' GL	v whether DR, RKB, RT, GR, etc. /3,315' KB					
12. Check Appropriate Box to	o Indicate Nature of Notice.	Report or Other Data				
		•				
NOTICE OF INTENTION TO: PERFORM REMEDIAL WORK D PLUG AND ABANI		SEQUENT REPORT OF: K				
TEMPORARILY ABANDON CHANGE PLANS PULL OR ALTER CASING MULTIPLE COMPI	COMMENCE DRI					
DOWNHOLE COMMINGLE						
CLOSED-LOOP SYSTEM		Notify OCD 24 hrs. prior to any work				
13. Describe proposed or completed operations. (Cl	early state all pertinent details, and					
of starting any proposed work). SEE RULE 19.7 proposed completion or recompletion.	5.7.14 NMAC. For Multiple Con	mpletions: Attach wellbore diagram of				
1) POOH w/injection tbg & pkr set @	3 263'					
2) Set CIBP @ 3,250' & dump bail 35'	of Class C cement to iso					
3) Set 100' Class C cement plug at 1,4) Set Class C cement plug across su						
and tag. Spot 25 sx Cmt 100' to su	urface					
5) Cut off wellhead & install dry hole r	narker.					
Spud Date: 9/15/1973	Rig Release Date: 6/10/20)11				
****SEE ATTACHED COA's****						
I hereby certify that the information above is true and con		GGED BY 2/23/2022 e and belief.				
Kalle Baraina						
/	TITLE Production Report					
Type or print name Kelly Barajas	kbarajas@read-a	stevens.com PHONE.575-624-3760				
For State Use Only						
APPROVED BY: <u>APPROVED BY:</u> T Conditions of Approval (if any):	ITLE Staff Man	DATE2/23/2021				
Released to Imaging: 2/23/2021 1:03:15 PM						

Released	to 1	Imaging:	2/	(23)	/20	21	1	:0	3:	15	1	2]	ļ
----------	------	----------	----	------	-----	----	---	----	----	----	---	----	---

CONDITIONS FOR PLUGGING AND ABANDONMENT

OCD - Southern District

The following is a guide or checklist in preparation of a plugging program, this is not all inclusive and care must be exercised in establishing special plugging programs in unique and unusual cases, Notify NMOCD District Office II at (575)-748-1283 at least 24 hours before beginning work. After MIRU rig will remain on well until it is plugged to surface. OCD is to be notified before rig down. Company representative will be on location during plugging procedures.

- 1. A notice of intent to plug and abandon a wellbore is required to be approved before plugging operations are conducted. A cement evaluation tool is required in order to ensure isolation of producing formations, protection of water and correlative rights. A cement bond log or other accepted cement evaluation tool is to be provided to the division for evaluation if one has not been previously run or if the well did not have cement circulated to surface during the original casing cementing job or subsequent cementing jobs. Insure all bradenheads have been exposed, identified and valves are operational prior to rig up.
- 2. Closed loop system is to be used for entire plugging operation. Upon completion, contents of steel pits are to be hauled to a permitted disposal location.
- 3. Trucking companies being used to haul oilfield waste fluids to a disposal commercial or private shall have an approved NMOCD C-133 permit. A copy of this permit shall be available in each truck used to haul waste products. It is the responsibility of the operator as well as the contractor, to verify that this permit is in place prior to performing work. Drivers shall be able to produce a copy upon request of an NMOCD Field inspector.
- 4. Filing a subsequent C-103 will serve as notification that the well has been plugged.
- 5. A final C-103 shall be filed (and a site inspection by NMOCD Inspector to determine if the location is satisfactorily cleaned, all equipment, electric poles and trash has been removed to Meet NMOCD standards) before bonding can be released.
- 6. If work has not begun within 1 Year of the approval of this procedure, an extension request must be file stating the reason the well has not been plugged.
- 7. Squeeze pressures are not to exceed 500 psi, unless approval is given by NMOCD.
- 8. Produced water will not be used during any part of the plugging operation.
- 9. Mud laden fluids must be placed between all cement plugs mixed at 25 sacks per 100 bbls of water.
- 10. All cement plugs will be a minimum of 100' in length or a minimum of 25 sacks of cement, whichever is greater. 50' of calculated cement excess required for inside casing plugs and 100% calculated cement excess required on outside casing plugs.
- 11. Class 'C' cement will be used above 7500 feet.
- 12. Class 'H' cement will be used below 7500 feet.
- 13. A cement plug is required to be set 50' above and 50' below, casing stubs, DV tools, attempted casing cut offs, cement tops outside casing, salt sections and anywhere the casing is perforated, these plugs require a 4 hour WOC and then will be tagged
- 14. All Casing Shoes Will Be Perforated 50' below shoe depth and Attempted to be Squeezed, cement needs to be 50' above and 50' Below Casing Shoe inside the Production Casing.

- 16. When setting the top out cement plug in production, intermediate and surface casing, wellbores should remain full at least 30 minutes after plugs are set
- 17. A CIBP is to be set within 100' of production perforations, capped with 100' of cement, WOC 4 hours and tag.
- 18. A CIBP with 35' of cement may be used in lieu of the 100' plug if set with a bailer. This plug will be placed within 100' of the top perforation, (WOC 4 hrs and tag).
- 19. No more than 3000' is allowed between cement plugs in cased hole and 2000' in open hole.
- 20. Some of the Formations to be isolated with cement plugs are: These plugs to be set to isolate formation tops
 - A) Fusselman
 - B) Devonian
 - C) Morrow
 - D) Wolfcamp
 - E)Bone Springs
 - F) Delaware
 - G) Any salt sections
 - H) Abo
 - I) Glorieta
 - J) Yates.
 - K) Potash--- (In the R-111-P Area (Potash Mine Area), a solid cement plug must be set across the salt section. Fluid used to mix the cement shall be saturated with the salts that are common to the section penetrated and in suitable proportions, not more than 3% calcium chloride (by weight of cement) will be considered the desired mixture whenever possible, WOC 4 hours and tag, this plug will be 50' below the bottom and 50' above the top of the Formation.
- 21. If cement does not exist behind casing strings at recommended formation depths, the casing can be cut and pulled with plugs set at recommended depths. If casing is not pulled, perforations will be shot and cement squeezed behind casing, WOC and tagged. These plugs will be set 50' below formation bottom to 50' above formation top inside the casing


DRY HOLE MARKER REQUIRMENTS


The operator shall mark the exact location of the plugged and abandoned well with a steel marker not less than four inches in diameter, 3' below ground level with a plate of at least ¼" welded to the top of the casing and the dry hole marker welded on the plate with the following information welded on the dry hole marker:

1. Operator name2. Lease and Well Number3. API Number4. Unit Letter5. QuarterSection (feet from the North, South, East or West)6. Section, Township and Range7. Plugging Date8. County(SPECIAL CASES)------AGRICULTURE OR PRARIE CHICKEN BREEDING AREAS

In these areas, a below ground marker is required with all pertinent information mentioned above on a plate, set 3' below ground level, a picture of the plate will be supplied to NMOCD for record, the exact location of the marker (longitude and latitude by GPS) will be provided to NMOCD (We typically require a current survey to verify the GPS)

SITE REMEDIATION DUE WITHIN ONE YEAR OF WELL PLUGGING COMPLETION

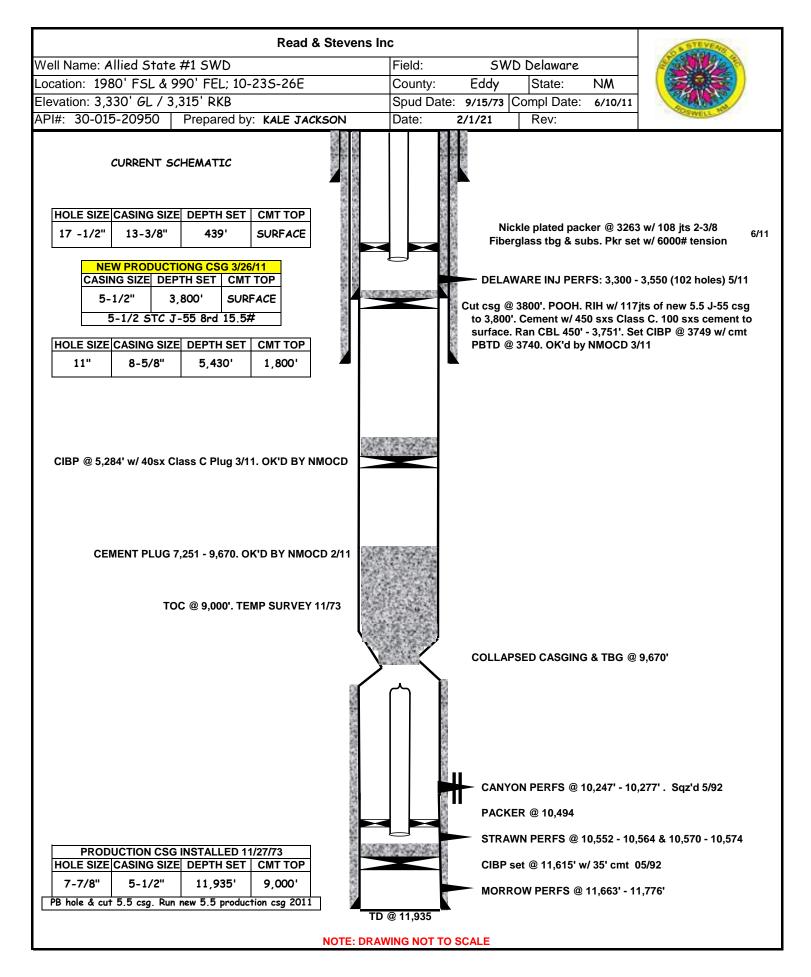

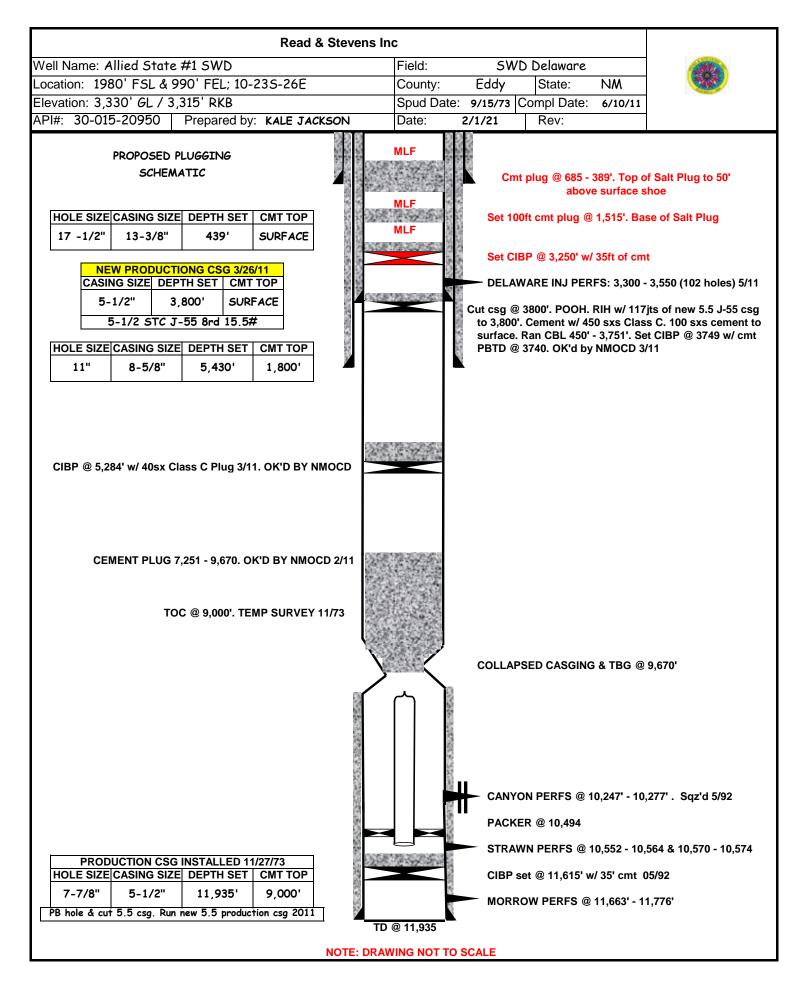

District I 1625 N. French Dr., Hobbs, NM 88240

District II

District IV

Phone:(575) 393-6161 Fax:(575) 393-0720

811 S. First St., Artesia, NM 88210 Phone: (575) 748-1283 Fax: (575) 748-9720

Phone:(505) 334-6178 Fax:(505) 334-6170

1220 S. St Francis Dr., Santa Fe, NM 87505 Phone:(505) 476-3470 Fax:(505) 476-3462

District III 1000 Rio Brazos Rd., Aztec, NM 87410 CONDITIONS

Action 18562

State of New Mexico Energy, Minerals and Natural Resources Oil Conservation Division 1220 S. St Francis Dr. Santa Fe, NM 87505

CONDITIONS OF APPROVAL

Operator:				OGRID:	Action Number:	Action Type:
READ & STEVENS INC	P.O. Box 1518	Roswell, NM88202		18917	18562	C-103F
OCD Reviewer			Cond	tion		
gcordero			None			