ecejwediby Opp Po Appropriate District 4	1 PM State of New Mexico	Form <i>E</i> -103 of 1.
Office District I – (575) 393-6161	Energy, Minerals and Natural Resources	Revised July 18, 2013
1625 N. French Dr., Hobbs, NM 88240		WELL API NO.
<u>District II</u> – (575) 748-1283 811 S. First St., Artesia, NM 88210	OIL CONSERVATION DIVISION	30-025-03844 5. Indicate Type of Lease
<u>District III</u> – (505) 334-6178	1220 South St. Francis Dr.	STATE FEE
1000 Rio Brazos Rd., Aztec, NM 87410 District IV – (505) 476-3460	Santa Fe, NM 87505	6. State Oil & Gas Lease No.
1220 S. St. Francis Dr., Santa Fe, NM 87505		0. 2.4.0 0.1 0. 2.4.0 2.4.0 1.0.
	TICES AND REPORTS ON WELLS	7. Lease Name or Unit Agreement Name
	OSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A ICATION FOR PERMIT" (FORM C-101) FOR SUCH	Lovington San Andres Unit
PROPOSALS.)		-
1. Type of Well: Oil Well	Gas Well Other Injector	40
2. Name of Operator Chevron Midcontinent, L.P.		9. OGRID Number 241333
3. Address of Operator		10. Pool name or Wildcat
6301 Deauville Blvd Midland	, Texas 79706	Lovington Grayburg SA
4. Well Location	. 1980 foot from the South line and 1	090 East
Onit Letter		
Section 1	Township 17 S Range 36E	NMPM County Lea
	11. Elevation (Show whether DR, RKB, RT, GR, et	<i>c.)</i>
12. Check	Appropriate Box to Indicate Nature of Notice	e. Report or Other Data
		•
		BSEQUENT REPORT OF:
PERFORM REMEDIAL WORK	PLUG AND ABANDON REMEDIAL WO	
TEMPORARILY ABANDON	<u> </u>	RILLING OPNS. P AND A
PULL OR ALTER CASING	MULTIPLE COMPL CASING/CEME	NI JOB
DOWNHOLE COMMINGLE CLOSED-LOOP SYSTEM		
OTHER:	□ OTHER:	
13. Describe proposed or com	pleted operations. (Clearly state all pertinent details, a	and give pertinent dates, including estimated date
	vork). SEE RULE 19.15.7.14 NMAC. For Multiple C	Completions: Attach wellbore diagram of
proposed completion or re	completion.	
Please see atta	ched procedure for well abandonment details	S.
4" diameter 4' tall Above	Cround Markor	
4 diameter 4 tall Above	Ground Marker	
	SEE ATTA	CHED CONDITIONS
	OF APPRO	
Spud Date:	Rig Release Date:	
I hereby certify that the information	a above is true and complete to the best of my knowled	lge and belief.
. /		
SIGNATURE Hayes Th	Tibodeaux TITLE Engineer	DATE 5/23/2022
//	odeaux E-mail address: Hayes.Thibodea	ux@chevron.com PHONE: 281-726-9683
	E-mail address:	PHONE: 201-120-9003
For State Use Only		
	A st.	
APPROVED BY: X	A 11-	
APPROVED BY:Conditions of Approval (if any):	TITLE Compliance Officer 575-263-6633	

# CURRENT WELLBORE DIAGRAM LSAU 48

Created:	8/25/2008	By: da Silva	Field:	Lovington
Updated:		By:	Well No.:	48
Lease:	Lovington San Andres	<u> </u>	Twp/Rng:	17S 36E
Surf Location:	1980' FSL & 2310' FEL	CHEVNO: FA4957	Unit Ltr & Section:	J/31
BH Location:			API:	30-025-03844
County:	Lea	KB:	Original Spud Date:	6/3/1939
<b>Current Status:</b>	Active Water Injector	DF:	Original Compl. Date:	
State:	NM	GL:	Formation: Grayburg/Sa	n Andres

## Surface Csg.

 Size:
 13"

 Wt.:
 35#/ft

 Set @:
 311'

 Sxs cmt:
 250

 Circ:
 Yes

 TOC:
 Surface

 Hole Size:
 17-1/2"

## Intermediate Csg.

 Size:
 9-5/8"

 Wt.:
 32#/ft

 Set @:
 3070'

 Sxs Cmt:
 250

 Circ:
 NO

 TOC:
 390', Calc

 Hole Size:
 12-1/4"

## Production Csg.

 Size:
 7"

 Wt.:
 24#, J-55

 Set @:
 4530'


 Sxs Cmt:
 225

 Circ:
 No

 TOC:
 2200', Calc

 Hole Size:
 8-3/4"

Open Hole: 4530'- 4960'

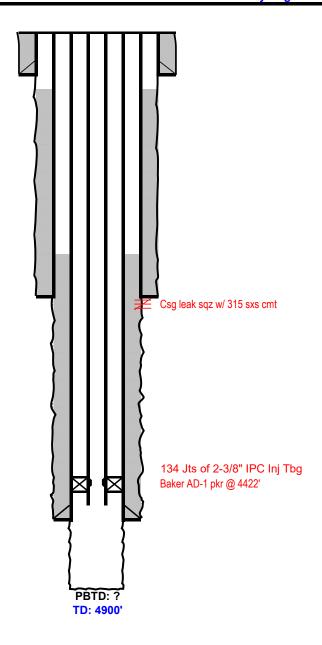

## PROPOSED WELLBORE DIAGRAM LSAU 48

da Silva Lovington Created: 8/25/2008 By: Field: Updated: Well No.: By: 48 **Lovington San Andres** Lease: Twp/Rng: 17S 36E **Surf Location:** 1980' FSL & 2310' FEL CHEVNO: FA4957 Unit Ltr & Section: J/31 BH Location: API: 30-025-03844 County: Lea KB: **Original Spud Date:** 6/3/1939 **Current Status: Active Water Injector** DF: Original Compl. Date: NM Grayburg/San Andres GL: Formation: State:

## Surface Csg.

 Size:
 13"

 Wt.:
 35#/ft

 Set @:
 311'

 Sxs cmt:
 250

 Circ:
 Yes

 TOC:
 Surface

 Hole Size:
 17-1/2"

## Intermediate Csg.

 Size:
 9-5/8"

 Wt.:
 32#/ft

 Set @:
 3070'

 Sxs Cmt:
 250

 Circ:
 NO

 TOC:
 390', Calc

 Hole Size:
 12-1/4"

#### Production Csg.

 Size:
 7"

 Wt.:
 24#, J-55

 Set @:
 4530'

 Sxs Cmt:
 225


 Circ:
 No

 TOC:
 2200', Calc

 Hole Size:
 8-3/4"

Open Hole: 4530'- 4960'

Rustler	1,949	
Salt	2,020	
Tansil	2,890	
Seven Rivers	3,239	
Queen	3,880	
Grayburg	4,344	
San Andres	4,599	
TD	4 945	

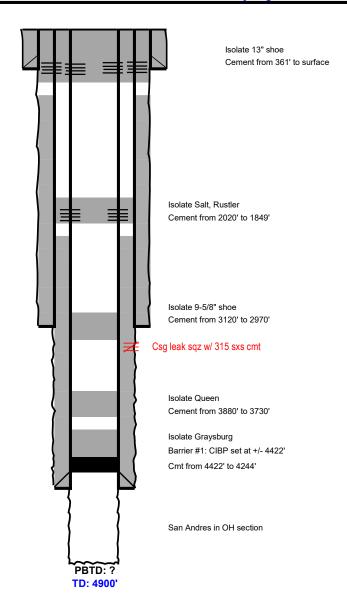

## Plugging Plan – Lovington San Andres Unit #48

API: 30-025-03844

#### Note:

- Injector well with internally lined plastic tubing
- Baker AD-1 packer at 4422'

## Proposed procedure - Lay down rig + CTU

- 1. Move in Axis 34 Lay Down rig package
- 2. N/U BOPE and pressure test same to 250 psi low for 5 minutes / 2500 psi high for 10 minutes.
- 3. Pull 2-3/8" IPC tubing
- 4. Gauge ring run will be required unless the packer is removed from the wellbore
- 5. RIH with CIBP and set at proposed depth in C-103 (4422')
- 6. Pressure test mech. barrier + casing to 500 psi for 15 minutes. Document results in WellView.
- 7. Conduct bubble tests on all annuli. If bubble test fails, communicate to coiled tubing WSR for planning purposes.
- 8. Rig down Axis 34 lay down rig

## **Proposed procedure - Coiled Tubing Unit**

- 9. R/U coiled tubing P&A package
- 10. N/U BOPE and pressure test same to 250 psi low for 5 minutes / 2500 psi high for 10 minutes.
- 11. RIH with coiled tubing to tag existing mechanical barrier in wellbore
- 12. Spot 29 sacks Class C cement from 4422' to 4244'.
- 13. Spot 25 sacks Class C cement from 3880' to 3730'.
- 14. Perforate and Squeeze 25 sacks Class C cement from 3120' to 2970'.
- 15. Perforate and Squeeze 48 sacks Class C cement from 2020' to 1849'.
- 16. Conduct bubble test on 7" x 9-5/8", 9-5/8" x 13"
  - a. If any bubble test fails, <u>consider</u> running CBL to confirm TOC (calculated at 2200') and identify additional depths to perf/squeeze OR cut/pull casing
- 17. Perforate 7" and 9-5/8" strings with deep penetrating charges from 350'. Establish circulation to surface in both annuli if possible. Conduct bubble test and ensure it's passing prior to bringing cement to surface.
- 18. If bubble test fails, consider transitioning directly to casing cutting & pulling. Discuss forward plan with NMOCD engineer for approval.
  - a. Cut casing will require a stub plug 50' inside of cut casing extending 50' above the cut portion at a minimum. WOC, tag, pressure test barrier. Proceed with approved C-103 if passing bubble test is achieved.
- 19. Perforate and circulate 200 sacks Class C cement from 361' to 0' in all strings
- 20. Confirm cement returns at surface
- 21. Rig down move off location

# CONDITIONS OF APPROVAL FOR PLUGGING AND ABANDONMENT OCD - Southern District

The following is a guide or checklist in preparation of a plugging program, this is not all inclusive and care must be exercised in establishing special plugging programs in unique and unusual cases, Notify NMOCD District Office I (Hobbs) at (575)-263-6633 at least 24 hours before beginning work. After MIRU rig will remain on well until it is plugged to surface. OCD is to be notified before rig down.

## Company representative will be on location during plugging procedures.

- **1.** A notice of intent to plug and abandon a wellbore is required to be approved before plugging operations are conducted. A cement evaluation tool is required in order to ensure isolation of producing formations, protection of water and correlative rights. A cement bond log or other accepted cement evaluation tool is to be provided to the division for evaluation if one has not been previously run or if the well did not have cement circulated to surface during the original casing cementing job or subsequent cementing jobs. Insure all bradenheads have been exposed, identified and valves are operational prior to rig up.
- **2.** Closed loop system is to be used for entire plugging operation. Upon completion, contents of steel pits are to be hauled to a permitted disposal location.
- **3.** Trucking companies being used to haul oilfield waste fluids to a disposal commercial or private- shall have an approved NMOCD C-133 permit. A copy of this permit shall be available in each truck used to haul waste products. It is the responsibility of the operator as well as the contractor, to verify that this permit is in place prior to performing work. Drivers shall be able to produce a copy upon request of an NMOCD Field inspector.
- 4. Filing a subsequent C-103 will serve as notification that the well has been plugged.
- **5.** A final C-103 shall be filed (and a site inspection by NMOCD Inspector to determine if the location is satisfactorily cleaned, all equipment, electric poles and trash has been removed to Meet NMOCD standards) before bonding can +be released.
- **6.** If work has not begun within 1 Year of the approval of this procedure, an extension request must be file stating the reason the well has not been plugged.
- 7. Squeeze pressures are not to exceed 500 psi, unless approval is given by NMOCD.
- **8.** Produced water will not be used during any part of the plugging operation.
- 9. Mud laden fluids must be placed between all cement plugs mixed at 25 sacks per 100 bbls of water.
- **10.** All cement plugs will be a minimum of 100' in length or a minimum of 25 sacks of cement, whichever is greater. 50' of calculated cement excess required for inside casing plugs and 100% calculated cement excess required on outside casing plugs.
- 11. Class 'C' cement will be used above 7500 feet.
- 12. Class 'H' cement will be used below 7500 feet.
- **13.** A cement plug is required to be set 50' above and 50' below, casing stubs, DV tools, attempted casing cut offs, cement tops outside casing, salt sections and anywhere the casing is perforated, these plugs require a 4 hour WOC and then will be tagged
- **14.** All Casing Shoes Will Be Perforated 50' below shoe depth and Attempted to be Squeezed, cement needs to be 50' above and 50' Below Casing Shoe inside the Production Casing.
- **16.** When setting the top out cement plug in production, intermediate and surface casing, wellbores should remain full at least 30 minutes after plugs are set
- 17. A CIBP is to be set within 100' of production perforations, capped with 100' of cement, WOC 4 hours and tag.
- **18.** A CIBP with 35' of cement may be used in lieu of the 100' plug if set with a bailer. This plug will be placed within 100' of the top perforation, (WOC 4 hrs and tag).

- 19. No more than 3000' is allowed between cement plugs in cased hole and 2000' in open hole.
- 20. Some of the Formations to be isolated with cement plugs are: These plugs to be set to isolate formation tops
- A) Fusselman
- B) Devonian
- C) Morrow
- D) Wolfcamp
- E) Bone Springs
- F) Delaware
- G) Any salt sections
- H) Abo
- I) Glorieta
- J) Yates.
- K) Potash---(In the R-111-P Area (Potash Mine Area),

A solid cement plug must be set across the salt section. Fluid used to mix the cement shall be saturated with the salts that are common to the section penetrated and in suitable proportions, not more than 3% calcium chloride (by weight of cement) will be considered the desired mixture whenever possible, WOC 4 hours and tag, this plug will be 50' below the bottom and 50' above the top of the Formation.

**21.** If cement does not exist behind casing strings at recommended formation depths, the casing can be cut and pulled with plugs set at recommended depths. If casing is not pulled, perforations will be shot and cement squeezed behind casing, WOC and tagged. These plugs will be set 50' below formation bottom to 50' above formation top inside the casing.

## DRY HOLE MARKER REQ.UIRMENTS

The operator shall mark the exact location of the plugged and abandoned well with a steel marker not less than four inches in diameter, 3' below ground level with a plate of at least ¼" welded to the top of the casing and the dry hole marker welded on the plate with the following information welded on the dry hole marker:

- 1. Operator name
- 2. Lease and Well Number
- 3. API Number
- 4. Unit letter
- 5. Quarter Section (feet from the North, South, East or West)
- 6. Section, Township and Range
- 7. Plugging Date
- 8. County

## SPECIAL CASES ----AGRICULTURE OR PRARIE CHICKEN BREEDING AREAS

In these areas, a below ground marker is required with all pertinent information mentioned above on a plate, set 3' below ground level, a picture of the plate will be supplied to NMOCD for record, the exact location of the marker (longitude and latitude by GPS) will be provided to NMOCD (We typically require a current survey to verify the GPS)

## SITE REMEDIATION DUE WITHIN ONE YEAR OF WELL PLUGGING COMPLETION

## Plugging Plan - Lovington San Andres Unit #48

API: 30-025-03844

#### Note:

- Injector well with internally lined plastic tubing
- Baker AD-1 packer at 4422'

## Proposed procedure - Lay down rig + CTU

- 1. Move in Axis 34 Lay Down rig package
- 2. N/U BOPE and pressure test same to 250 psi low for 5 minutes / 2500 psi high for 10 minutes.
- 3. Pull 2-3/8" IPC tubing
- 4. Gauge ring run will be required unless the packer is removed from the wellbore
- 5. RIH with CIBP and set at proposed depth in C-103 (4422')
- 6. Pressure test mech. barrier + casing to 500 psi for 15 minutes. Document results in WellView.
- 7. Conduct bubble tests on all annuli. If bubble test fails, communicate to coiled tubing WSR for planning purposes.
- 8. Rig down Axis 34 lay down rig

## **Proposed procedure - Coiled Tubing Unit**

- 9. R/U coiled tubing P&A package
- 10. N/U BOPE and pressure test same to 250 psi low for 5 minutes / 2500 psi high for 10 minutes.
- 11. RIH with coiled tubing to tag existing mechanical barrier in wellbore
- 12. Spot 29 sacks Class C cement from 4422' to 4244'.
- 13. Spot 25 sacks Class C cement from 3880' to 3730'.
- 14. Perforate and Squeeze 25 sacks Class C cement from 3120' to 2970'.
- 15. Perforate and Squeeze 48 sacks Class C cement from 2020' to 1849'.
- 16. Conduct bubble test on 7" x 9-5/8", 9-5/8" x 13"
  - a. If any bubble test fails, <u>consider</u> running CBL to confirm TOC (calculated at 2200') and identify additional depths to perf/squeeze OR cut/pull casing
- 17. Perforate 7" and 9-5/8" strings with deep penetrating charges from 350'. Establish circulation to surface in both annuli if possible. Conduct bubble test and ensure it's passing prior to bringing cement to surface.
- 18. If bubble test fails, consider transitioning directly to casing cutting & pulling. Discuss forward plan with NMOCD engineer for approval.
  - a. Cut casing will require a stub plug 50' inside of cut casing extending 50' above the cut portion at a minimum. WOC, tag, pressure test barrier. Proceed with approved C-103 if passing bubble test is achieved.
- 19. Perforate and circulate 200 sacks Class C cement from 361' to 0' in all strings
- 20. Confirm cement returns at surface
- 21. Rig down move off location

## CURRENT WELLBORE DIAGRAM LSAU 48

Created:	8/25/2008	By: da Silva	Field:	Lovington
Updated:		By:	Well No.:	48
Lease:	Lovington San Andres		Twp/Rng:	17S 36E
Surf Location:	1980' FSL & 2310' FEL	CHEVNO: FA4957	Unit Ltr & Section:	J/31
BH Location:		<u> </u>	API:	30-025-03844
County:	Lea	KB:	Original Spud Date:	6/3/1939
<b>Current Status:</b>	Active Water Injector	DF:	Original Compl. Date:	
State:	NM	GL:	Formation: Grayburg/S	an Andres

## Surface Csg.

 Size:
 13"

 Wt.:
 35#/ft

 Set @:
 311'

 Sxs cmt:
 250

 Circ:
 Yes

 TOC:
 Surface

 Hole Size:
 17-1/2"

## Intermediate Csg.

 Size:
 9-5/8"

 Wt.:
 32#/ft

 Set @:
 3070'

 Sxs Cmt:
 250

 Circ:
 NO

 TOC:
 390', Calc

 Hole Size:
 12-1/4"

## Production Csg.

 Size:
 7"

 Wt.:
 24#, J-55

 Set @:
 4530'


 Sxs Cmt:
 225

 Circ:
 No

 TOC:
 2200', Calc

 Hole Size:
 8-3/4"

Open Hole: 4530'- 4960'

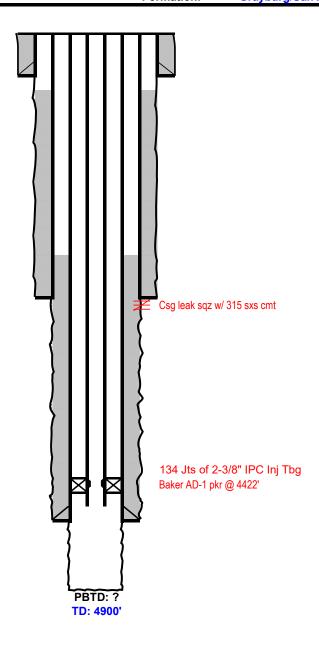

## PROPOSED WELLBORE DIAGRAM LSAU 48

da Silva Lovington Created: 8/25/2008 By: Field: Updated: Well No.: By: 48 **Lovington San Andres** Lease: Twp/Rng: 17S 36E **Surf Location:** 1980' FSL & 2310' FEL CHEVNO: FA4957 Unit Ltr & Section: J/31 BH Location: API: 30-025-03844 County: Lea KB: **Original Spud Date:** 6/3/1939 **Current Status: Active Water Injector** DF: Original Compl. Date: NM Grayburg/San Andres GL: Formation: State:

## Surface Csg.

 Size:
 13"

 Wt.:
 35#/ft

 Set @:
 311'

 Sxs cmt:
 250

 Circ:
 Yes

 TOC:
 Surface

 Hole Size:
 17-1/2"

## Intermediate Csg.

 Size:
 9-5/8"

 Wt.:
 32#/ft

 Set @:
 3070'

 Sxs Cmt:
 250

 Circ:
 NO

 TOC:
 390', Calc

 Hole Size:
 12-1/4"

#### Production Csg.

 Size:
 7"

 Wt.:
 24#, J-55

 Set @:
 4530'

 Sxs Cmt:
 225


 Circ:
 No

 TOC:
 2200', Calc

 Hole Size:
 8-3/4"

Open Hole: 4530'- 4960'

Rustler	1,949	
Salt	2,020	
Tansil	2,890	
Seven Rivers	3,239	
Queen	3,880	
Grayburg	4,344	
San Andres	4,599	
TD	4 945	

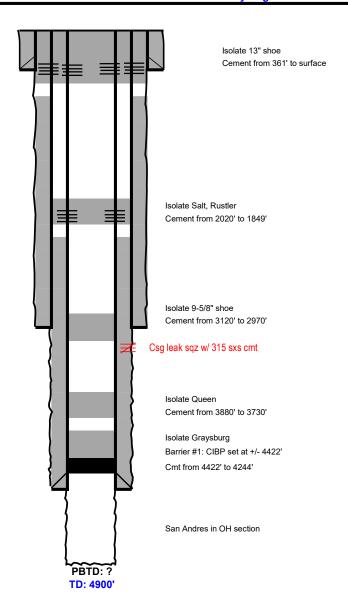

129.4286 258.8571 388.2857 517.7143 647.1429 776.5714 906 1035.429 1164.857 1294.286 1423.714 1553.143 1682.571 1812 1941.429 2070.857 2200.286 2329.714 2459.143 2588.571 2718 2847.429 2976.857 3106.286 3235.714 3365.143 3494.571 3624 3753.429 3882.857 4012.286 4141.714 4271.143 4400.571 4530

District I
1625 N. French Dr., Hobbs, NM 88240
Phone: (575) 393-6161 Fax: (575) 393-0720

District II 811 S. First St., Artesia, NM 88210 Phone:(575) 748-1283 Fax:(575) 748-9720

District III 1000 Rio Brazos Rd., Aztec, NM 87410 Phone:(505) 334-6178 Fax:(505) 334-6170

1220 S. St Francis Dr., Santa Fe, NM 87505 Phone:(505) 476-3470 Fax:(505) 476-3462

**State of New Mexico Energy, Minerals and Natural Resources Oil Conservation Division** 1220 S. St Francis Dr. **Santa Fe, NM 87505** 

COMMENTS

Action 109587

## **COMMENTS**

Operator:	OGRID:
CHEVRON U S A INC	4323
6301 Deauville Blvd	Action Number:
Midland, TX 79706	109587
	Action Type:
	[C-103] NOI Plug & Abandon (C-103F)

#### COMMENTS

(	Created By		Comment Date
	plmartinez	DATA ENTRY PM	5/26/2022

District I
1625 N. French Dr., Hobbs, NM 88240
Phone: (575) 393-6161 Fax: (575) 393-0720 District II

811 S. First St., Artesia, NM 88210 Phone:(575) 748-1283 Fax:(575) 748-9720 District III

1000 Rio Brazos Rd., Aztec, NM 87410 Phone:(505) 334-6178 Fax:(505) 334-6170

1220 S. St Francis Dr., Santa Fe, NM 87505 Phone:(505) 476-3470 Fax:(505) 476-3462

**State of New Mexico Energy, Minerals and Natural Resources Oil Conservation Division** 1220 S. St Francis Dr. **Santa Fe, NM 87505** 

CONDITIONS

Action 109587

## **CONDITIONS**

Operator:	OGRID:
CHEVRON U S A INC	4323
6301 Deauville Blvd	Action Number:
Midland, TX 79706	109587
	Action Type:
	[C-103] NOI Plug & Abandon (C-103F)

#### CONDITIONS

Created By		Condition Date
kfortner	See attached COA	5/25/2022