Form 3160-5 (June 2019)

# UNITED STATES DEPARTMENT OF THE INTERIOR

FORM APPROVED
OMB No. 1004-0137
Expires: October 31, 202

BUR	EAU OF LAND MANAGE	MENT		5. I	Lease Serial No.	IMNM53992	 2Z
Do not use this t	OTICES AND REPORTS form for proposals to dr Use Form 3160-3 (APD)	ill or to re-e	enter an		f Indian, Allottee c	or Tribe Name	2
SUBMIT IN	TRIPLICATE - Other instruction	s on page 2		7. I	f Unit of CA/Agre	ement, Name	and/or No.
1. Type of Well				8. V	Well Name and No		
Oil Well Gas W	_				API Well No.	BUSHWOO	OD 21/16 B2FC FED CO
2. Name of Operator MEWBOURNE							
3a. Address P O BOX 5270, HOBBS	7, 14101 002 11	hone No. <i>(includ</i> ) 393-5905	de area code	´ I	Field and Pool or onto: Bone Sprin		
4. Location of Well (Footage, Sec., T., R SEC 21/T19S/R33E/NMP	.,M., or Survey Description)				Country or Parish, EA/NM	State	
12. CHE	CK THE APPROPRIATE BOX(ES	S) TO INDICAT	E NATURE	OF NOTICE,	REPORT OR OTI	HER DATA	
TYPE OF SUBMISSION			TYI	PE OF ACTIO	N		
✓ Notice of Intent	Acidize Alter Casing	Deepen Hydraulic F	Fracturing	Production Reclama	on (Start/Resume)	=	er Shut-Off Integrity
Subsequent Report	Casing Repair  Change Plans	New Constr		Recompl Tempora	ete rily Abandon	Othe	r
Final Abandonment Notice	Convert to Injection	Plug Back		Water Di			
1) Change well name from Bus 2) Change surface & intermed the most recent 4-string bound 3) Variances are requested to	tices must be filed only after all reconstructions approval to make the following shwood 21/16 B2FC Fed Com # fiate casing design from 4 string lary. Production casing & liner was perform BOP break testing & of	wing changes  #1H to Bushwo s to surface to vill not change. ffline cementin	to the appropod 21/16 F 3 strings to	nation, have be oved APD (10 Fed Com #523 o surface, as o	en completed and to 0400084788, 30- BH. detailed in the att	he operator h 025-53219) achment, SI	has detennined that the site
14. I hereby certify that the foregoing is ANDY TAYLOR / Ph: (575) 393-59		yped) Title	Engineer				
Signature (Electronic Submission	Date	Date 07/29/2024					
	THE SPACE FO	R FEDERA	L OR ST	ATE OFIC	E USE		
Approved by							00/00/0004
CHRISTOPHER WALLS / Ph: (575	5) 234-2234 / Approved		Title Petro	oleum Engine		Date	08/23/2024
Conditions of approval, if any, are attacl certify that the applicant holds legal or $\epsilon$ which would entitle the applicant to con	equitable title to those rights in the		Office CA	RLSBAD			
Title 18 U.S.C Section 1001 and Title 4.				ly and willfull	y to make to any do	epartment or a	agency of the United States

(Instructions on page 2)

#### **GENERAL INSTRUCTIONS**

This form is designed for submitting proposals to perform certain well operations and reports of such operations when completed as indicated on Federal and Indian lands pursuant to applicable Federal law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local area or regional procedures and practices, are either shown below, will be issued by or may be obtained from the local Federal office.

#### SPECIFIC INSTRUCTIONS

*Item 4* - Locations on Federal or Indian land should be described in accordance with Federal requirements. Consult the local Federal office for specific instructions.

Item 13: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by the local Federal office. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to the top of any tubing left in the hole; method of closing top of well and date well site conditioned for final inspection looking for approval of the abandonment. If the proposal will involve **hydraulic fracturing operations**, you must comply with 43 CFR 3162.3-3, including providing information about the protection of usable water. Operators should provide the best available information about all formations containing water and their depths. This information could include data and interpretation of resistivity logs run on nearby wells. Information may also be obtained from state or tribal regulatory agencies and from local BLM offices.

#### **NOTICES**

The privacy Act of 1974 and the regulation in 43 CFR 2.48(d) provide that you be furnished the following information in connection with information required by this application.

AUTHORITY: 30 U.S.C. 181 et seq., 351 et seq., 25 U.S.C. 396; 43 CFR 3160.

PRINCIPAL PURPOSE: The information is used to: (1) Evaluate, when appropriate, approve applications, and report completion of subsequent well operations, on a Federal or Indian lease; and (2) document for administrative use, information for the management, disposal and use of National Resource lands and resources, such as: (a) evaluating the equipment and procedures to be used during a proposed subsequent well operation and reviewing the completed well operations for compliance with the approved plan; (b) requesting and granting approval to perform those actions covered by 43 CFR 3162.3-2, 3162.3-3, and 3162.3-4; (c) reporting the beginning or resumption of production, as required by 43 CFR 3162.4-1(c)and (d) analyzing future applications to drill or modify operations in light of data obtained and methods used.

ROUTINE USES: Information from the record and/or the record will be transferred to appropriate Federal, State, local or foreign agencies, when relevant to civil, criminal or regulatory investigations or prosecutions in connection with congressional inquiries or to consumer reporting agencies to facilitate collection of debts owed the Government.

EFFECT OF NOT PROVIDING THE INFORMATION: Filing of this notice and report and disclosure of the information is mandatory for those subsequent well operations specified in 43 CFR 3162.3-2, 3162.3-3, 3162.3-4.

The Paperwork Reduction Act of 1995 requires us to inform you that:

The BLM collects this information to evaluate proposed and/or completed subsequent well operations on Federal or Indian oil and gas leases.

Response to this request is mandatory.

The BLM would like you to know that you do not have to respond to this or any other Federal agency-sponsored information collection unless it displays a currently valid OMB control number.

**BURDEN HOURS STATEMENT:** Public reporting burden for this form is estimated to average 8 hours per response, including the time for reviewing instructions, gathering and maintaining data, and completing and reviewing the form. Direct comments regarding the burden estimate or any other aspect of this form to U.S. Department of the Interior, Bureau of Land Management (1004-0137), Bureau Information Collection Clearance Officer (WO-630), 1849 C St., N.W., Mail Stop 401 LS, Washington, D.C. 20240

(Form 3160-5, page 2)

#### **Additional Information**

#### **Location of Well**

0. SHL: NWSE / 2590 FSL / 2400 FEL / TWSP: 19S / RANGE: 33E / SECTION: 21 / LAT: 32.6456166 / LONG: -103.6673284 ( TVD: 0 feet, MD: 0 feet )

PPP: SESW / 0 FSL / 1880 FWL / TWSP: 19S / RANGE: 33E / SECTION: 16 / LAT: 32.6530167 / LONG: -103.6705578 ( TVD: 10036 feet, MD: 13023 feet )

PPP: SENW / 2539 FNL / 1880 FWL / TWSP: 19S / RANGE: 33E / SECTION: 21 / LAT: 32.646038 / LONG: -103.6705813 ( TVD: 10080 feet, MD: 10484 feet )

BHL: NENW / 100 FNL / 1880 FWL / TWSP: 19S / RANGE: 33E / SECTION: 16 / LAT: 32.6672574 / LONG: -103.6705098 ( TVD: 9945 feet, MD: 18205 feet )

# PECOS DISTRICT DRILLING CONDITIONS OF APPROVAL

OPERATOR'S NAME: MEWBOURNE OIL COMPANY
WELL NAME & NO.: BUSHWOOD 21/16 FED COM 523H
APD ID: 10400084788
LOCATION: Section 21, T.19 S., R.33 E. NMP.

COUNTY: Lea County, New Mexico ▼

Previously known as BUSHWOOD 21/16 B2FC FED COM 1H. Changes approved through engineering via **Sundry 2803559** on 8/22/2024. Any previous COAs not addressed within the updated COAs still apply.

COA

H <sub>2</sub> S	0	No	• Yes			
Potash /	O None	Secretary	O R-111-Q	☐ Open Annulus		
WIPP				□ WIPP		
Cave / Karst	• Low	O Medium	O High	<ul><li>Critical</li></ul>		
Wellhead	<ul><li>Conventional</li></ul>	<ul><li>Multibowl</li></ul>	O Both	O Diverter		
Cementing	☐ Primary Squeeze	☐ Cont. Squeeze	☐ EchoMeter	☐ DV Tool		
Special Req	☐ Capitan Reef	☐ Water Disposal	✓ COM	Unit		
Waste Prev.	© Self-Certification	O Waste Min. Plan	• APD Submitted 1	orior to 06/10/2024		
Additional	✓ Flex Hose	☐ Casing Clearance	☐ Pilot Hole	Break Testing		
Language	$\square$ Four-String	Offline Cementing	▼ Fluid-Filled			

#### A. HYDROGEN SULFIDE

A Hydrogen Sulfide (H<sub>2</sub>S) Drilling Plan shall be activated **AT SPUD**. As a result, the Hydrogen Sulfide area must meet **43 CFR 3176** requirements, which includes equipment and personnel/public protection items. If Hydrogen Sulfide is encountered, please provide measured values and formations to the BLM.

#### **B. CASING DESIGN**

- 1. The 13-3/8 inch surface casing shall be set at approximately 1,400 ft. (a minimum of 25 feet (Lea County) into the Rustler Anhydrite and above the salt) and cemented to the surface. If salt is encountered, set casing at least 25 ft. above the salt.
  - a. If cement does not circulate to the surface, the appropriate BLM office shall be notified and a temperature survey utilizing an electronic-type temperature survey with surface log readout will be used or a cement bond log shall be run to verify the top of the cement. Temperature survey will be run a minimum of

- six hours after pumping cement and ideally between 8-10 hours after completing the cement job.
- b. Wait on cement (WOC) time for a primary cement job will be a minimum of **8** hours or **500** psi compressive strength, whichever is greater. (This is to include the lead cement)
- c. Wait on cement (WOC) time for a remedial job will be a minimum of 4 hours after bringing cement to surface or 500 psi compressive strength, whichever is greater.
- d. If cement falls back, remedial cementing will be done prior to drilling out that string.
- 2. The 9-5/8 inch intermediate casing shall be set in a competent bed at approximately 5,282 ft. The minimum required fill of cement behind the 9-5/8-inch intermediate casing is:

**Option 1 (Single Stage): Cement to surface.** If cement does not circulate see B.1.a, c-d above. Wait on cement (WOC) time for a primary cement job is to include the lead cement slurry due to Potash.

**Option 2 (Two-stage with DV tool:** The operator has proposed utilize a DV tool. The selected depth is below the Salado and is an acceptable set point. Operator may adjust depth of DV tool if it remains below the Salado and cement volumes are adjusted accordingly. The DV tool may be cancelled if cement circulates to surface on the first stage.

- a. **First stage to DV tool:** Cement to circulate. If cement does not circulate off the DV tool, contact the appropriate BLM office before proceeding with second stage cement job.
- b. **Second stage above DV tool: Cement to surface.** If cement does not circulate, contact the appropriate BLM office. Wait on cement (WOC) time for a primary cement job is to include the lead cement slurry due to Potash.

**Note:** Cement volume for the 2<sup>nd</sup> stage is insufficient to bring cement to surface. More cement is needed.

**Note:** Intermediate casing shall be kept fluid-filled to meet minimum collapse design requirements.

- ❖ In <u>Secretary Potash Areas</u> if cement does not circulate to surface on the first two casing strings, the cement on the 3<sup>rd</sup> casing string must come to surface.
- 3. The 7 inch Production casing shall be set in a competent bed at approximately 9,700 ft. (9,623 ft. TVD). The minimum required fill of cement behind the 7-inch intermediate casing is:

- Cement should tie-back at least **500 feet** into previous casing string. Operator shall provide method of verification. Wait on cement (WOC) time for a primary cement job is to include the lead cement slurry due to Potash.
- 4. The minimum required fill of cement behind the 4-1/2 inch production liner is:
  - Cement should tie-back **100 feet** into the previous casing. Operator shall provide method of verification.

### **Offline Cementing**

Operator has been (**Approved**) to pump the proposed cement program offline in the **Surface and intermediate(s) intervals**. Offline cementing should commence within 24 hours of landing the casing for the interval. Notify the BLM 4hrs prior to the commencement of any offline cementing procedure at **Lea County:** 575-689-5981.

#### C. PRESSURE CONTROL

- 1. Variance approved to use **flex line** from BOP to choke manifold. Manufacturer's specification to be readily available. No external damage to flex line. Flex line to be installed as straight as possible (no hard bends).
- 2. Operator has proposed a multi-bowl wellhead assembly. This assembly will only be tested when installed on the surface casing. Minimum working pressure of the blowout preventer (BOP) and related equipment (BOPE) required for drilling below the surface casing shoe shall be 5000 (5M) psi. Before drilling the surface casing shoe out, the BOP/BOPE and annular preventer shall be pressure-tested in accordance with title 43 CFR 3172.
  - a. Wellhead shall be installed by manufacturer's representatives, submit documentation with subsequent sundry.
  - b. If the welding is performed by a third party, the manufacturer's representative shall monitor the temperature to verify that it does not exceed the maximum temperature of the seal.
  - c. Manufacturer representative shall install the test plug for the initial BOP test.
  - d. If the cement does not circulate and one-inch operations would have been possible with a standard wellhead, the well head shall be cut off, cementing operations performed and another wellhead installed.
  - e. Whenever any seal subject to test pressure is broken, all the tests in the title 43 CFR 3172.6(b)(9) must be followed.

# **BOPE Break Testing Variance**

- BOPE Break Testing is ONLY permitted for intervals utilizing a 5M BOPE or less. (Annular preventer must be tested to a minimum of 70% of BOPE working pressure and shall be higher than the MASP.)
- BOPE Break Testing is NOT permitted to drilling the production hole section.
- Variance only pertains to the intermediate hole-sections and no deeper than the

- Bone Springs formation.
- While in transfer between wells, the BOPE shall be secured by the hydraulic carrier or cradle.
- Any well control event while drilling require notification to the BLM Petroleum Engineer (575-706-2779) prior to the commencement of any BOPE Break Testing operations.
- A full BOPE test is required prior to drilling the first deep intermediate hole section. If any subsequent hole interval is deeper than the first, a full BOPE test will be required. (200' TVD tolerance between intermediate shoes is allowable).
- The BLM is to be contacted (575-689-5981 Lea County) 4 hours prior to BOPE tests.
- As a minimum, a full BOPE test shall be performed at 21-day intervals.
- In the event any repairs or replacement of the BOPE is required, the BOPE shall test as per 43 CFR 3172.
- If in the event break testing is not utilized, then a full BOPE test would be conducted.

# D. SPECIAL REQUIREMENT (S)

## **Communitization Agreement**

- The operator will submit a Communitization Agreement to the Santa Fe Office, 301 Dinosaur Trail Santa Fe, New Mexico 87508, at least 90 days before the anticipated date of first production from a well subject to a spacing order issued by the New Mexico Oil Conservation Division. The Communitization Agreement will include the signatures of all working interest owners in all Federal and Indian leases subject to the Communitization Agreement (i.e., operating rights owners and lessees of record), or certification that the operator has obtained the written signatures of all such owners and will make those signatures available to the BLM immediately upon request.
- If the operator does not comply with this condition of approval, the BLM may take enforcement actions that include, but are not limited to, those specified in 43 CFR 3163.1.
- In addition, the well sign shall include the surface and bottom hole lease numbers. When the Communitization Agreement number is known, it shall also be on the sign.

# **GENERAL REQUIREMENTS**

The BLM is to be notified in advance for a representative to witness:

- a. Spudding well (minimum of 24 hours)
- b. Setting and/or Cementing of all casing strings (minimum of 4 hours)
- c. BOPE tests (minimum of 4 hours)

- 1. Unless the production casing has been run and cemented or the well has been properly plugged, the drilling rig shall not be removed from over the hole without prior approval.
  - a. In the event the operator has proposed to drill multiple wells utilizing a skid/walking rig. Operator shall secure the wellbore on the current well, after installing and testing the wellhead, by installing a blind flange of like pressure rating to the wellhead and a pressure gauge that can be monitored while drilling is performed on the other well(s).
  - b. When the operator proposes to set surface casing with Spudder Rig
    - i. Notify the BLM when moving in and removing the Spudder Rig.
    - ii. Notify the BLM when moving in the 2<sup>nd</sup> Rig. Rig to be moved in within 90 days of notification that Spudder Rig has left the location.
    - iii. BOP/BOPE test to be conducted per **43 CFR 3172** as soon as 2<sup>nd</sup> Rig is rigged up on well.
- 2. Floor controls are required for 3M or Greater systems. These controls will be on the rig floor, unobstructed, readily accessible to the driller and will be operational at all times during drilling and/or completion activities. Rig floor is defined as the area immediately around the rotary table; the area immediately above the substructure on which the draw works are located, this does not include the doghouse or stairway area.
- 3. For intervals in which cement to surface is required, cement to surface should be verified with a visual check and density or pH check to differentiate cement from spacer and drilling mud. The results should be documented in the driller's log and daily reports.

#### A. CASING

- 1. Changes to the approved APD casing program need prior approval if the items substituted are of lesser grade or different casing size or are Non-API. The Operator can exchange the components of the proposal with that of superior strength (i.e. changing from J-55 to N-80, or from 36# to 40#). Changes to the approved cement program need prior approval if the altered cement plan has less volume or strength or if the changes are substantial (i.e. Multistage tool, ECP, etc.). The initial wellhead installed on the well will remain on the well with spools used as needed.
- 2. Wait on cement (WOC) for Potash Areas: After cementing but before commencing any tests, the casing string shall stand cemented under pressure until

both of the following conditions have been met: 1) cement reaches a minimum compressive strength of 500 psi for all cement blends of both lead and tail cement, 2) until cement has been in place at least 8 hours. WOC time will be recorded in the driller's log. The casing integrity test can be done (prior to the cement setting up) immediately after bumping the plug.

- 3. Wait on cement (WOC) for Water Basin: After cementing but before commencing any tests, the casing string shall stand cemented under pressure until both of the following conditions have been met: 1) cement reaches a minimum compressive strength of 500 psi at the shoe, 2) until cement has been in place at least 8 hours. WOC time will be recorded in the driller's log. See individual casing strings for details regarding lead cement slurry requirements. The casing integrity test can be done (prior to the cement setting up) immediately after bumping the plug.
- **4.** Provide compressive strengths including hours to reach required 500 pounds compressive strength prior to cementing each casing string. Have well specific cement details onsite prior to pumping the cement for each casing string.
- **5.** No pea gravel permitted for remedial or fall back remedial without prior authorization from the BLM engineer.
- **6.** On that portion of any well approved for a 5M BOPE system or greater, a pressure integrity test of each casing shoe shall be performed. Formation at the shoe shall be tested to a minimum of the mud weight equivalent anticipated to control the formation pressure to the next casing depth or at total depth of the well. This test shall be performed before drilling more than 20 feet of new hole.
- 7. If hardband drill pipe is rotated inside casing, returns will be monitored for metal. If metal is found in samples, drill pipe will be pulled and rubber protectors which have a larger diameter than the tool joints of the drill pipe will be installed prior to continuing drilling operations.
- **8.** Whenever a casing string is cemented in the R-111-Q potash area, the NMOCD requirements shall be followed.

#### **B. PRESSURE CONTROL**

- 1. All blowout preventer (BOP) and related equipment (BOPE) shall comply with well control requirements as described in 43 CFR 3172.
- 2. If a variance is approved for a flexible hose to be installed from the BOP to the choke manifold, the following requirements apply: The flex line must meet the requirements of API 16C. Check condition of flexible line from BOP to choke manifold, replace if exterior is damaged or if line fails test. Line to be as straight as possible with no hard bends and is to be anchored according to Manufacturer's requirements. The flexible hose can be exchanged with a hose of equal size and equal or greater pressure rating. Anchor requirements, specification sheet and

- hydrostatic pressure test certification matching the hose in service, to be onsite for review. These documents shall be posted in the company man's trailer and on the rig floor.
- **3.** 5M or higher system requires an HCR valve, remote kill line and annular to match. The remote kill line is to be installed prior to testing the system and tested to stack pressure.
- **4.** If the operator has proposed a multi-bowl wellhead assembly in the APD. The following requirements must be met:
  - i. Wellhead shall be installed by manufacturer's representatives, submit documentation with subsequent sundry.
  - ii. If the welding is performed by a third party, the manufacturer's representative shall monitor the temperature to verify that it does not exceed the maximum temperature of the seal.
  - iii. Manufacturer representative shall install the test plug for the initial BOP test.
  - iv. Whenever any seal subject to test pressure is broken, all the tests in 43 CFR 3172.6(b)(9) must be followed.
  - v. If the cement does not circulate and one-inch operations would have been possible with a standard wellhead, the well head shall be cut off, cementing operations performed and another wellhead installed.
- **5.** The appropriate BLM office shall be notified a minimum of 4 hours in advance for a representative to witness the tests.
  - i. In a water basin, for all casing strings utilizing slips, these are to be set as soon as the crew and rig are ready and any fallback cement remediation has been done. The casing cut-off and BOP installation can be initiated four hours after installing the slips, which will be approximately six hours after bumping the plug. For those casing strings not using slips, the minimum wait time before cut-off is eight hours after bumping the plug. BOP/BOPE testing can begin after cut-off or once cement reaches 500 psi compressive strength (including lead cement), whichever is greater. However, if the float does not hold, cut-off cannot be initiated until cement reaches 500 psi compressive strength (including lead when specified).
  - ii. In potash areas, for all casing strings utilizing slips, these are to be set as soon as the crew and rig are ready and any fallback cement remediation has been done. For all casing strings, casing cut-off and BOP installation can be initiated at twelve hours after bumping the cement plug. The BOPE test can be initiated after bumping the cement plug with the casing valve open. (Only applies to single stage cement jobs, prior to the cement setting up.)
  - iii. The tests shall be done by an independent service company utilizing a test plug not a cup or J-packer and can be initiated immediately with the casing

valve open. The operator also has the option of utilizing an independent tester to test without a plug (i.e. against the casing) pursuant to **43 CFR 3172** with the pressure not to exceed 70% of the burst rating for the casing. Any test against the casing must meet the WOC time for 8 hours or 500 pounds compressive strength, whichever is greater, prior to initiating the test (see casing segment as lead cement may be critical item).

- iv. The test shall be run on a 5000-psi chart for a 2-3M BOP/BOP, on a 10000 psi chart for a 5M BOP/BOPE and on a 15000 psi chart for a 10M BOP/BOPE. If a linear chart is used, it shall be a one-hour chart. A circular chart shall have a maximum 2-hour clock. If a twelve hour or twenty-four-hour chart is used, tester shall make a notation that it is run with a two hour clock.
- v. The results of the test shall be reported to the appropriate BLM office.
- vi. All tests are required to be recorded on a calibrated test chart. A copy of the BOP/BOPE test chart and a copy of independent service company test will be submitted to the appropriate BLM office.
- vii. The BOP/BOPE test shall include a low-pressure test from 250 to 300 psi. The test will be held for a minimum of 10 minutes if test is done with a test plug and 30 minutes without a test plug. This test shall be performed prior to the test at full stack pressure.
- viii. BOP/BOPE must be tested by an independent service company within 500 feet of the top of the Wolfcamp formation if the time between the setting of the intermediate casing and reaching this depth exceeds 20 days. This test does not exclude the test prior to drilling out the casing shoe as per 43 CFR 3172.

#### C. DRILLING MUD

Mud system monitoring equipment, with derrick floor indicators and visual and audio alarms, shall be operating before drilling into the Wolfcamp formation, and shall be used until production casing is run and cemented.

#### D. WASTE MATERIAL AND FLUIDS

All waste (i.e. drilling fluids, trash, salts, chemicals, sewage, gray water, etc.) created as a result of drilling operations and completion operations shall be safely contained and disposed of properly at a waste disposal facility. No waste material or fluid shall be disposed of on the well location or surrounding area. Porto-johns and trash containers will be on-location during fracturing operations or any other crewintensive operations.

SA 08/22/2024

# Mewbourne Oil Company, Bushwood 21/16 Fed Com #523H Sec 21, T19S, R33E

SHL: 2590' FSL & 2400' FEL (21) BHL: 100' FNL & 1880' FWL (16)

# **Casing Program**

Hole	Casing	Interval	Csg.	Weight	Grade	Conn.	SF	SF	SF Jt	SF Body
Size	From	To	Size	(lbs)			Collapse	Burst	Tension	Tension
17.5"	0'	1400'	13.375"	54.5	J55	STC	1.20	2.70	4.79	8.05
12.25"	0'	3453'	9.625"	36	J55	LTC	1.13	1.96	2.24	2.78
12.25"	3453'	4393'	9.625"	40	J55	LTC	1.13	1.73	6.64	8.04
12.25"	4393'	5282'	9.625"	40	N80	LTC	1.13	2.09	18.08	22.48
12.25"	5282'	5412'	9.625"	40	HCL80	LTC	1.50	2.04	161.03	176.22
				BLM Minimum Safety		1.125	1	1.6 Dry	1.6 Dry	
				Factor				1.8 Wet	1.8 Wet	

All casing strings will be tested in accordance with Onshore Oil and Gas Order #2 III.B.1.h Must have table for contingency casing

	Y or N
Is casing new? If used, attach certification as required in Onshore Order #1	Y
Is casing API approved? If no, attach casing specification sheet.	Y
Is premium or uncommon casing planned? If yes attach casing specification sheet.	N
Does the above casing design meet or exceed BLM's minimum standards? If not provide justification (loading assumptions, casing design criteria).	Y
Will the pipe be kept at a minimum 1/3 fluid filled to avoid approaching the	Y
collapse pressure rating of the casing?	
Is well located within Capitan Reef?	Y
If yes, does production casing cement tie back a minimum of 50' above the Reef?	Y
Is well within the designated 4 string boundary.	N
Is well located in SOPA but not in R-111-P?	Y
If yes, are the first 2 strings cemented to surface and 3 <sup>rd</sup> string cement tied back 500' into previous casing?	Y
Is well located in R-111-P and SOPA?	N
If yes, are the first three strings cemented to surface?	
Is 2 <sup>nd</sup> string set 100' to 600' below the base of salt?	
Is an open annulus used to satisfy R-111-Q? If yes, see cement design	
Is an engineered weak point used to satisfy R-111-Q?	
If yes, at what depth is the weak point planned?	
Is well located in high Cave/Karst?	N
If yes, are there two strings cemented to surface?	
(For 2 string wells) If yes, is there a contingency casing if lost circulation occurs?	
Is well located in critical Cave/Karst?	N
If yes, are there three strings cemented to surface?	

# Mewbourne Oil Company, Bushwood 21/16 Fed Com #523H Sec 21, T19S, R33E

SHL: 2590' FSL & 2400' FEL (21) BHL: 100' FNL & 1880' FWL (16)

# **Cementing Program**

Casing	# Sks	Wt.	Yld	Slurry Description
		lb/	ft3/	
		gal	sack	
Surf.	795	12.5	2.12	Lead: Class C + Salt + Gel + Extender + LCM
	200	14.8	1.34	Tail: Class C + Retarder
Int.	570	12.5	2.12	Lead: Class C + Salt + Gel + Extender + LCM
Stg 2	200	14.8	1.34	Tail: Class C + Retarder
				ECP/DV Tool @ 3455'
Int.	240	12.5	2.12	Lead: Class C + Salt + Gel + Extender + LCM
Stg 1	200	14.8	1.34	Tail: Class C + Retarder
Prod.	345	12.5	2.12	Lead: Class C + Gel + Retarder + Defoamer + Extender
	400	15.6	1.18	Tail: Class H + Retarder + Fluid Loss + Defoamer

A copy of cement test will be available on location at time of cement job providing pump times & compressive strengths.

Casing String	TOC	% Excess
Surface	0'	100%
Intermediate	0'	25%
Production	3430'	25%

Formation Depth (TVD)

# Mewbourne Oil Company, Bushwood 21/16 Fed Com #523H Sec 21, T19S, R33E

SHL: 2590' FSL & 2400' FEL (21) BHL: 100' FNL & 1880' FWL (16)

	from KB
Rustler	1325
Top of Salt	1645
Castile	
Base of Salt	3000
Yates	3220
Capitan	3480
Delaware (Lamar)	5450
Bell Canyon	
Cherry Canyon	
Manzanita Marker	
Brushy Canyon	
Bone Spring	7940
1 <sup>st</sup> Bone Spring Sand	9070
2 <sup>nd</sup> Bone Spring Sand	9625
3 <sup>rd</sup> Bone Spring Sand	
Abo	
Wolfcamp	
Devonian	
Ellenburger	
Granite Wash	

District I 1625 N. French Dr., Hobbs, NM 88240 Phone: (575) 393-6161 Fax: (575) 393-0720 District II 811 S. First St., Artesia, NM 88210 Phone: (575) 748-1283 Fax: (575) 748-9720 District III 1000 Rio Brazos Road, Aztec, NM 87410 Phone: (505) 334-6178 Fax: (505) 334-6170 District IV 1220 S. St. Francis Dr., Santa Fe, NM 87505 Phone: (505) 476-3460 Fax: (505) 476-3462

# State of New Mexico Energy, Minerals & Natural Resources Department OIL CONSERVATION DIVISION 1220 South St. Francis Dr. Santa Fe, NM 87505

Form C-102 Revised August 1, 2011 Submit one copy to appropriate District Office

☐ AMENDED REPORT


#### WELL LOCATION AND ACREAGE DEDICATION PLAT

<sup>1</sup> API Number 30-025-53	<sup>2</sup> Pool Code 59475	TONTO; BONE SPR	ING
<sup>4</sup> Property Code 336092	BUSHWOOD 21,	perty Name /16 FED COM	6 Well Number <b>523H</b>
7 OGRID NO. 14744	1	erator Name E OIL COMPANY	<sup>9</sup> Elevation <b>3622'</b>

<sup>10</sup> Surface Location

UL or lot no.	Section	Township	Range	Lot Idn	Feet from the	North/South line	Feet From the	East/West line	County
J	21	19S	33E		2590	SOUTH	2400	EAST	LEA
		-	11 ]	Bottom F	Hole Location	If Different Fr	om Surface		
UL or lot no.	Section	Township	Range	Lot Idn	Feet from the	North/South line	Feet from the	East/West line	County
C	16	19S	33E		100	NORTH	1880	WEST	LEA
12 Dedicated Acres	13 Joint	or Infill 1	4 Consolidation	Code 15	Order No.				
240									

No allowable will be assigned to this completion until all interest have been consolidated or a non-standard unit has been approved by the division.

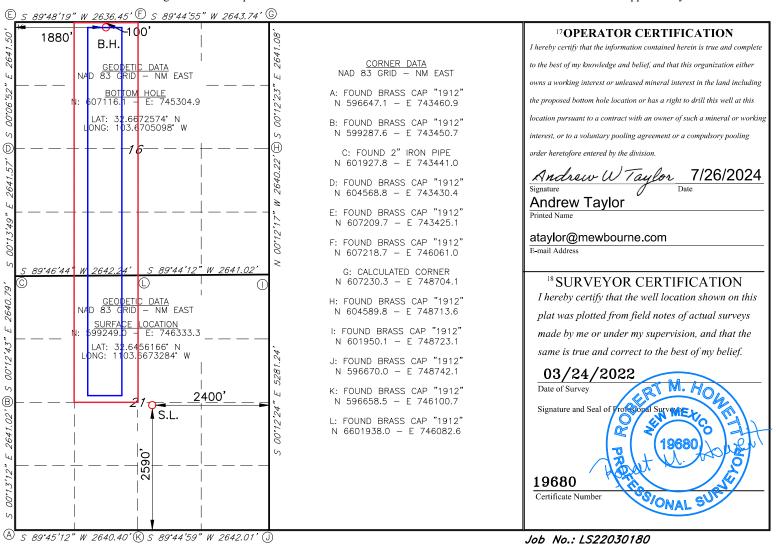



# Mewbourne Oil Co.

# **BOP Break Testing Variance**

Mewbourne Oil Company requests a variance from the minimum standards for well control equipment testing of 43 CFR 3172 to allow a testing schedule of the blow out preventer (BOP) and blow out prevention equipment (BOPE) along with batch drilling & offline cementing operations. Modern rig upgrades which facilitate pad drilling allow the BOP stack to be moved between wells on a multi-well pad without breaking any BOP stack components apart. Widespread use of these technologies has led to break testing BOPE being endorsed as safe and reliable. American Petroleum Institute (API) best practices are frequently used by regulators to develop their regulations. API Standard 53, *Well Control Equipment Systems for Drilling Wells* (5<sup>th</sup> Ed., Dec. 2018) Section 5.3.7.1 states "A pressure test of the pressure containing component shall be performed following the disconnection or repair, limited to the affected component."

# **Procedures**

- 1. Full BOPE test at first installation on the pad.
  - Full BOPE test at least every 21 days.
  - Function test BOP elements per 43 CFR 3172.
  - Contact the BLM if a well control event occurs.
- After the well section is secured and the well is confirmed to be static, the BOP will be disconnected from the wellhead and walked with the rig to another well on the pad. Two breaks on the BOPE will be made (Fig. 1).
  - Connection between the flex line and the HCR valve
  - Connection between the wellhead and the BOP quick connect (Fig. 5 & 6).
- 3. A capping flange will be installed after cementing per wellhead vendor procedure & casing pressure will be monitored via wellhead valve.
- 4. The BOP will be removed and carried by a hydraulic carrier (Fig. 3 & 4).
- 5. The rig will then walk to the next well.
- 6. Confirm that the well is static and remove the capping flange.
- 7. The connection between the flex line and HCR valve and the connection between the wellhead and the BOP quick connect will be reconnected.
- 8. Install a test plug into the wellhead.
- 9. A test will then be conducted against the upper pipe rams and choke, testing both breaks (Fig. 1 & 2).
- 10. The test will be held at 250 psi low and to the high value submitted in the APD, not to exceed 5000 psi.
- 11. The annular, blind rams and lower pipe rams will then be function tested.
- 12. If a pad consists of three or more wells, steps 4 through 11 will be repeated.



13. A break test will only be conducted if the intermediate section can be drilled and cased within 21 days of the last full BOPE test.

# **Barriers**

## **Before Nipple Down:**

- Floats in casing
- Kill weight fluid in casing
- Kill weight fluid in annulus
- Solid body mandrel and/or packoff

# **After Nipple Down:**

- Floats in casing
- Kill weight fluid in casing
- Kill weight fluid in annulus
- Solid body mandrel and/or packoff
- Offline cementing tool and/or cement head
- Capping flange after cementing

# Summary

A variance is requested to only test broken pressure seals on the BOPE when moving between wells on a multi-well pad if the following conditions are met:

- A full BOPE test is conducted on the first well on the pad. API Standard 53 requires testing annular BOP to 70% of RWP or 100% of MASP, whichever is greater.
- If the first well on the pad is not the well with the deepest intermediate section, a full BOPE test will also be performed when moving to a deeper well.
- The hole section being drilled has a MASP under 5000 psi.
- If a well control event occurs, Mewbourne will contact BLM for permission to continue break testing.
- If significant (>50%) losses occur, full BOPE testing will be required going forward.
- Full BOPE test will be required prior to drilling the production hole.

While walking the rig, the BOP stack will be secured via hydraulic winch or hydraulic carrier. A full BOPE test will be performed at least every 21 days.



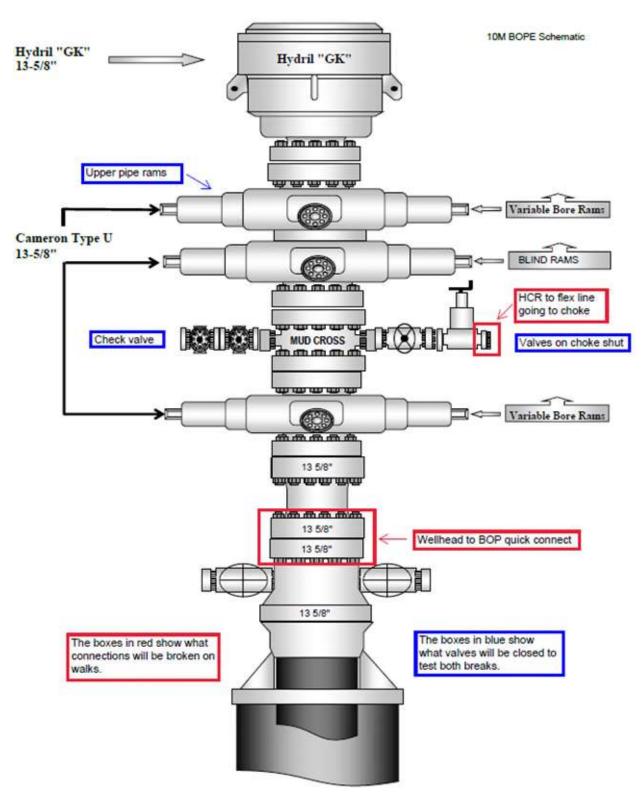


Figure 1. BOP diagram



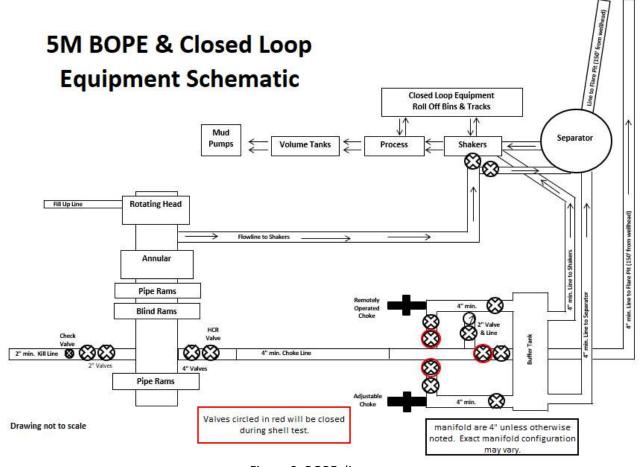


Figure 2. BOPE diagram





Figure 3. BOP handling system





Figure 4. BOP handling system



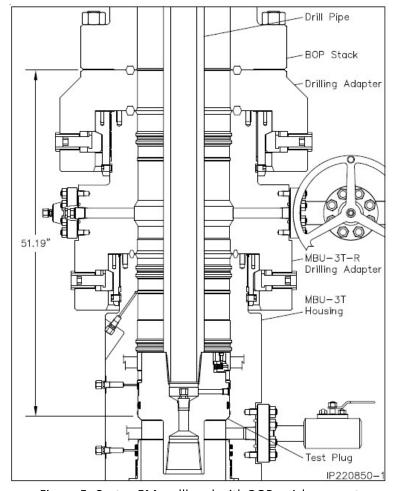


Figure 5. Cactus 5M wellhead with BOP quick connect

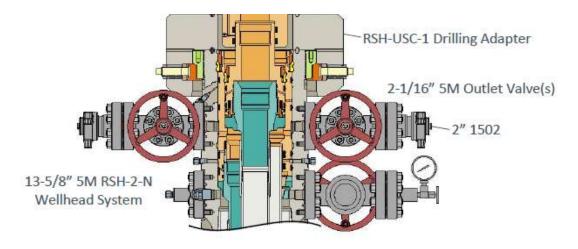


Figure 6. Vault 5M wellhead with BOP quick connect



# Mewbourne Oil Co.

# Surface & Intermediate Offline Cementing Variance

Mewbourne Oil Company requests a variance to perform offline cementing for surface and intermediate casing strings with the following conditions:

- Offline cementing will not be performed on production casing.
- Offline cementing will not be performed on a hole section with MASP > 5000 psi.
- Offline cementing will not be performed concurrently with offset drilling.

# **Surface Casing Order of Operations:**

- 1. Run 13 3/8" surface casing as per normal operations (TPGS and float collar).
- 2. Perform negative pressure test to confirm integrity of float equipment while running casing.
- 3. Confirm well is static.
- 4. Make up 13 %" wellhead or wellhead landing ring assembly and land on 20" conductor.
- 5. Fill pipe, circulate casing capacity and confirm float(s) are still holding.
- 6. Confirm well is static.
- 7. Back out landing joint and pull to rig floor. Lay down landing joint.
- 8. Walk rig to next well on pad with cement crew standing by to rig up.
- 9. Make up offline cement tool with forklift per wellhead manufacturer (Fig. 1 & 2).
- 10. Make up cement head on top of offline cement tool with forklift.
- 11. Commence cement operations.
- 12. If cement circulates, confirm well is static and proceed to step 16.
- 13. If cement does not circulate, notify the appropriate BLM office, wait a minimum of six hours, and run a temperature survey to determine the top of cement.
- 14. Use 1" pipe for remedial cement job until the surface casing is cemented to surface.
- 15. Confirm well is static.
- 16. Once cement job is complete, the cement head and offline cementing tool are removed. The wellhead technician returns to cellar to install wellhead/valves.
- 17. Install wellhead capping flange.

# **Barriers**

#### **Before Walk:**

- Float(s) in casing
- Kill weight fluid in casing
- Kill weight fluid in annulus



#### After Walk:

- Float(s) in casing
- Kill weight fluid in casing
- Kill weight fluid in annulus
- Offline cementing tool tested to 5000 psi and cement head
- Capping flange after cementing

# 20" Surface Casing Order of Operations (4 string area):

- 1. Run 20" surface casing as per normal operations (TPGS and float collar).
- Perform negative pressure test to confirm integrity of float equipment while running casing.
- 3. Fill pipe, circulate casing capacity and confirm float(s) are still holding.
- 4. Confirm well is static.
- 5. Back out landing joint and pull to rig floor. Lay down landing joint.
- 6. Make up cement head.
- 7. Walk rig to next well on pad with cement crew standing by to rig up.
- 8. Commence cement operations.
- 9. If cement circulates, confirm well is static and proceed to step 13.
- 10. If cement does not circulate, notify the appropriate BLM office, wait a minimum of six hours, and run a temperature survey to determine the top of cement.
- 11. Use 1" pipe for remedial cement job until the surface casing is cemented to surface.
- 12. Confirm well is static.
- 13. Once cement job is complete, remove cement head and install cap.

# **Barriers**

#### **Before Walk:**

- Float(s) in casing
- Kill weight fluid in casing
- Kill weight fluid in annulus
- Cement Head

## After Walk:

- Float(s) in casing
- Kill weight fluid in casing
- Kill weight fluid in annulus
- Cement head
- Capping flange after cementing



# **Intermediate Casing Order of Operations:**

- 1. Run casing as per normal operations (float shoe and float collar).
- 2. Perform negative pressure test to confirm integrity of float equipment while running casing.
- 3. Confirm well is static (if running SBM).
- 4. Land casing.
- 5. Fill pipe, circulate casing capacity and confirm floats are still holding.
- 6. Confirm well is static.
- 7. Back out landing joint and pull to rig floor. Lay down landing joint. Install packoff & test.
- 8. Nipple down BOP.
- 9. Walk rig to next well on pad with cement crew standing by to rig up.
- 10. Make up offline cement tool using forklift per wellhead manufacturer (Fig. 3 8).
- 11. Make up cement head on top of offline cement tool.
- 12. Commence cement operations.
- 13. If cement circulates, confirm well is static and proceed to step 16.
- 14. If cement does not circulate (when required), notify the appropriate BLM office, wait a minimum of six hours, and run a temperature survey to determine the top of cement.
- 15. Pump remedial cement job if required.
- 16. Confirm well is static.
- 17. Remove cement head and offline cementing tool.
- 18. Install wellhead capping flange and test.

#### **Barriers**

#### **Before Nipple Down:**

- Floats in casing
- Kill weight fluid in casing
- Kill weight fluid in annulus
- Solid body mandrel and/or packoff

#### **After Nipple Down:**

- Floats in casing
- Kill weight fluid in casing
- Kill weight fluid in annulus
- Solid body mandrel and/or packoff
- Offline cementing tool tested to 5000 psi and cement head
- Capping flange after cementing



# **Risks:**

- Pressure build up in annulus before cementing
  - o Contact BLM if a well control event occurs.
  - Rig up 3<sup>rd</sup> party pump or rig pumps to pump down casing and kill well.
  - Returns will be taken through the wellhead valves to a choke manifold (Fig 9 & 10).
  - Well could also be killed through the wellhead valves down the annulus.

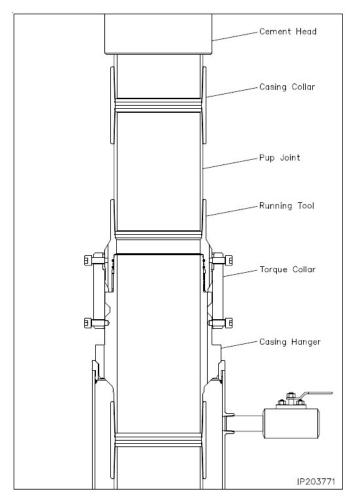


Figure 1. Cactus 13 3/8" 5M offline cementing tool. Pressure rating limited by the lesser of 5M tool rating or the 13 3/8" pup joint and casing.



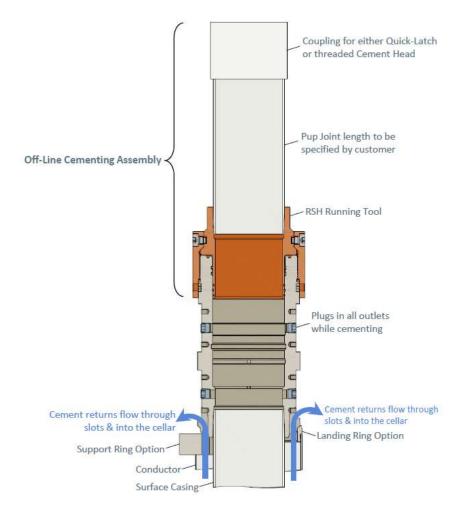


Figure 2. Vault 13 3/8" 5M offline cementing tool. Pressure rating limited by the lesser of 5M tool rating or the 13 3/8" pup joint and casing.



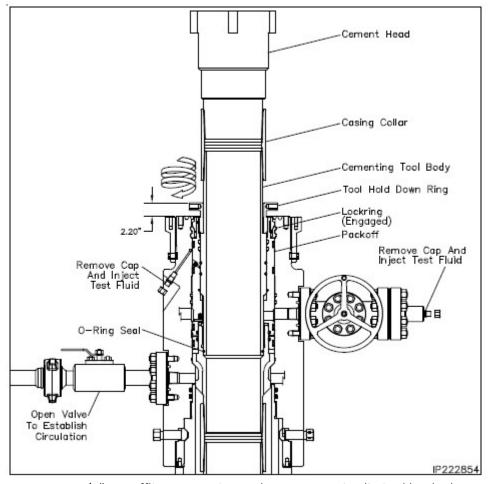


Figure 3. Cactus 9 5/8" 5M offline cementing tool. Pressure rating limited by the lesser of 5M tool rating or the 9 5/8" pup joint and casing.



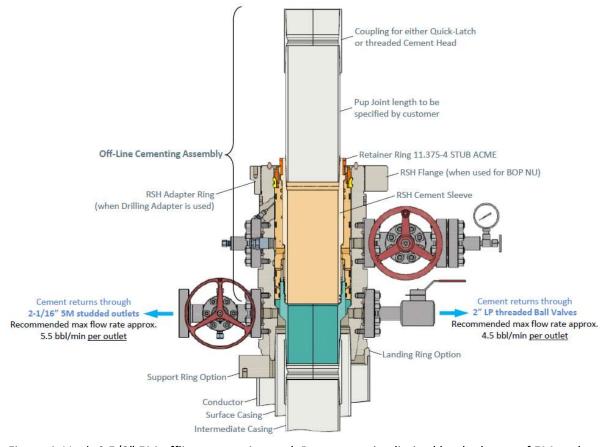


Figure 4. Vault 9 5/8" 5M offline cementing tool. Pressure rating limited by the lesser of 5M tool rating or the 9 5/8" pup joint and casing.



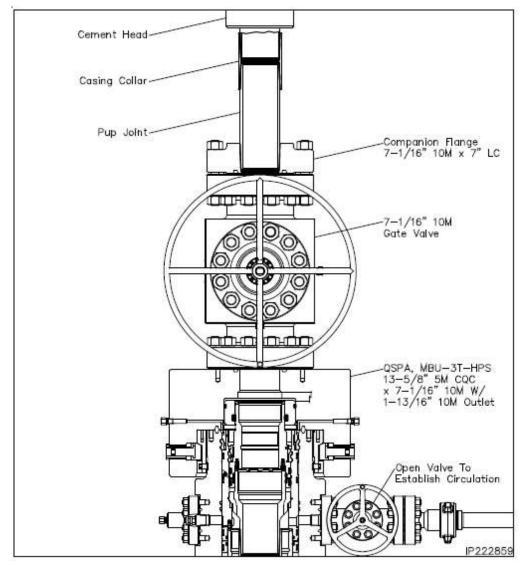


Figure 5. Cactus 7" 5M offline cementing tool. Pressure rating limited by the lesser of 5M tool rating or the 7" pup joint and casing.



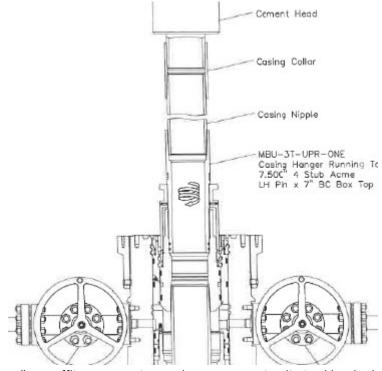


Figure 6. Cactus 7" 5M offline cementing tool. Pressure rating limited by the lesser of 5M tool rating or the 7" pup joint and casing.



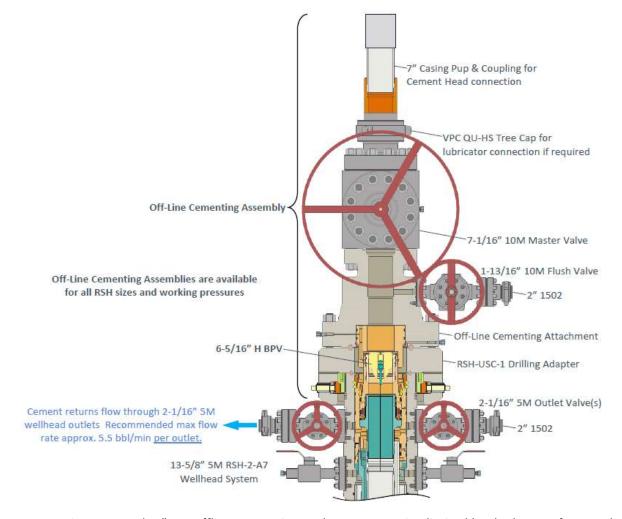


Figure 7. Vault 7" 5M offline cementing tool. Pressure rating limited by the lesser of 5M tool rating or the 7" pup joint and casing.



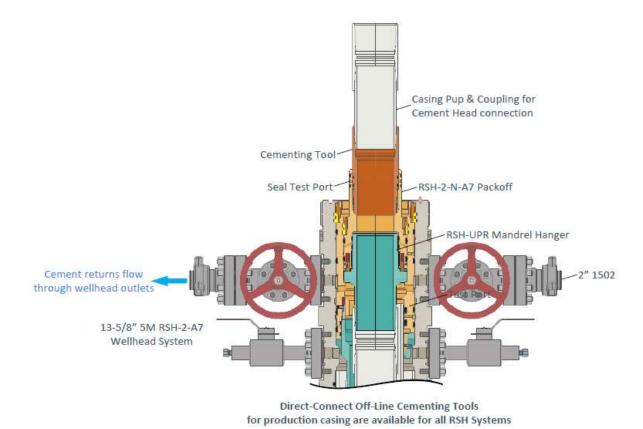


Figure 8. Vault 7" 5M offline cementing tool. Pressure rating limited by the lesser of 5M tool rating or the 7" pup joint and casing.



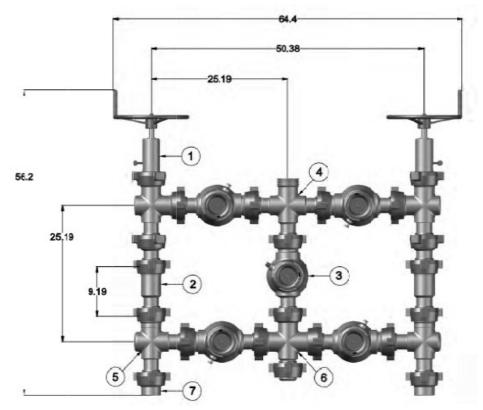


Figure 9. Five valve 15k choke manifold.

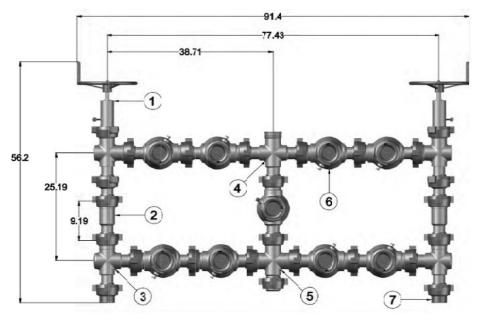


Figure 10. Nine valve 15k choke manifold.

District I
1625 N. French Dr., Hobbs, NM 88240
Phone: (575) 393-6161 Fax: (575) 393-0720

District II 811 S. First St., Artesia, NM 88210 Phone:(575) 748-1283 Fax:(575) 748-9720

District III 1000 Rio Brazos Rd., Aztec, NM 87410 Phone:(505) 334-6178 Fax:(505) 334-6170

1220 S. St Francis Dr., Santa Fe, NM 87505 Phone:(505) 476-3470 Fax:(505) 476-3462

**State of New Mexico Energy, Minerals and Natural Resources Oil Conservation Division** 1220 S. St Francis Dr. **Santa Fe, NM 87505** 

CONDITIONS

Action 377030

#### **CONDITIONS**

Operator:	OGRID:
MEWBOURNE OIL CO	14744
P.O. Box 5270	Action Number:
Hobbs, NM 88241	377030
	Action Type:
	[C-103] NOI Change of Plans (C-103A)

#### CONDITIONS

Created By		Condition Date
pkautz	ALL PREVIOUS COA's APPLY	9/14/2024