Form 3160-5 (June 2015)

## **UNITED STATES** DEPARTMENT OF THE INTERIOR

FORM APPROVED
OMB No. 1004-0137
Expires: January 31, 2013

BUR	EAU OF LAND MANAGEMEN	5. Lease Serial No. NMNM-0164650				
Do not use this t	IOTICES AND REPORTS ON form for proposals to drill or Use Form 3160-3 (APD) for s	to re-enter ar		6. If Indian, Allottee or	Tribe Name	
SUBMIT IN	TRIPLICATE - Other instructions on p	age 2		7. If Unit of CA/Agreer	nent, Name and/or No.	
1. Type of Well Gas W	Vell Other			8. Well Name and No.	JENNIFER CHAVEROO SA #001	
2. Name of Operator RIDGEWAY AR	IZONA OIL CORP.			9. API Well No. 30-041-10639		
3a. Address 575 N. Dary Ashford, St 77079	las as as	o. (include area cod	le)	10. Field and Pool or Exploratory Area CHAVEROO;SAN ANDRES		
4. Location of Well (Footage, Sec., T., R O-18-07S-34E 660 FSL 215	R.,M., or Survey Description) in FEL		11. Country or Parish, State Roosevelt			
12. CHE	CK THE APPROPRIATE BOX(ES) TO I	NDICATE NATUR	E OF NOTI	CE, REPORT OR OTHE	ER DATA	
TYPE OF SUBMISSION		TY	PE OF AC	TION		
✓ Notice of Intent		eepen /draulic Fracturing	=	uction (Start/Resume)	Water Shut-Off Well Integrity	
Subsequent Report		ew Construction ug and Abandon	=	omplete porarily Abandon	Other	
Final Abandonment Notice	Convert to Injection Plu	ug Back	Wate	r Disposal		
is ready for final inspection.)  BLM and NMOCD plan to plug  14. I hereby certify that the foregoing is	this well in accordance with the attact	ned procedure and	I any agree	ed modifications thereto	<b>5</b> .	
	**	Title				
Signature Date			Date			
	THE SPACE FOR FE	DERAL OR ST	TATE OF	ICE USE		
Approved by JENNIFER SANCHEZ	Digitally signed by JENNIFER SANCHEZ Date: 2024.10.30 10:42:55 -06'00'	77.4				
Conditions of approval, if any, are attach	ned. Approval of this notice does not warr quitable title to those rights in the subject			Da		
	B U.S.C Section 1212, make it a crime for ents or representations as to any matter wi		gly and will	fully to make to any depart	artment or agency of the United States	

(Instructions on page 2)

#### GENERAL INSTRUCTIONS

This form is designed for submitting proposals to perform certain well operations and reports of such operations when completed as indicated on Federal and Indian lands pursuant to applicable Federal law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local area or regional procedures and practices, are either shown below, will be issued by or may be obtained from the local Federal office.

#### SPECIFIC INSTRUCTIONS

Item 4 - Locations on Federal or Indian land should be described in accordance with Federal requirements. Consult the local Federal office for specific instructions.

Item 13: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by the local Federal office. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to the top of any tubing left in the hole; method of closing top of well and date well site conditioned for final inspection looking for approval of the abandonment. If the proposal will involve **hydraulic fracturing operations**, you must comply with 43 CFR 3162.3-3, including providing information about the protection of usable water. Operators should provide the best available information about all formations containing water and their depths. This information could include data and interpretation of resistivity logs run on nearby wells. Information may also be obtained from state or tribal regulatory agencies and from local BLM offices.

#### **NOTICES**

The privacy Act of 1974 and the regulation in 43 CFR 2.48(d) provide that you be furnished the following information in connection with information required by this application.

AUTHORITY: 30 U.S.C. 181 et seq., 351 et seq., 25 U.S.C. 396; 43 CFR 3160.

PRINCIPAL PURPOSE: The information is used to: (1) Evaluate, when appropriate, approve applications, and report completion of subsequent well operations, on a Federal or Indian lease; and (2) document for administrative use, information for the management, disposal and use of National Resource lands and resources, such as: (a) evaluating the equipment and procedures to be used during a proposed subsequent well operation and reviewing the completed well operations for compliance with the approved plan; (b) requesting and granting approval to perform those actions covered by 43 CFR 3162.3-2, 3162.3-3, and 3162.3-4; (c) reporting the beginning or resumption of production, as required by 43 CFR 3162.4-1(c)and (d) analyzing future applications to drill or modify operations in light of data obtained and methods used.

ROUTINE USES: Information from the record and/or the record will be transferred to appropriate Federal, State, local or foreign agencies, when relevant to civil, criminal or regulatory investigations or prosecutions in connection with congressional inquiries or to consumer reporting agencies to facilitate collection of debts owed the Government.

EFFECT OF NOT PROVIDING THE INFORMATION: Filing of this notice and report and disclosure of the information is mandatory for those subsequent well operations specified in 43 CFR 3162.3-2, 3162.3-4.

The Paperwork Reduction Act of 1995 requires us to inform you that:

The BLM collects this information to evaluate proposed and/or completed subsequent well operations on Federal or Indian oil and gas leases.

Response to this request is mandatory.

The BLM would like you to know that you do not have to respond to this or any other Federal agency-sponsored information collection unless it displays a currently valid OMB control number.

BURDEN HOURS STATEMENT: Public reporting burden for this form is estimated to average 8 hours per response, including the time for reviewing instructions, gathering and maintaining data, and completing and reviewing the form. Direct comments regarding the burden estimate or any other aspect of this form to U.S. Department of the Interior, Bureau of Land Management (1004-0137), Bureau Information Collection Clearance Officer (WO-630), 1849 C St., N.W., Mail Stop 401 LS, Washington, D.C. 20240

### Jennifer Chaveroo Unit 1 30-041-10639 Ridgeway Arizona Oil Corporation April 13, 2023 Conditions of Approval

- 1. Operator shall place CIBP at 4,010' (50'-100' above top most perf) and place 25 sx of Class C cement on top. WOC and TAG.
- 2. Operator shall place a balanced class C cement plug from 3,498' to 3,368' as proposed. WOC and TAG.
- 3. Operator shall place a balanced class C cement plug from 2,245' to 2,070' to seal the top of the Yates formation and bottom of the Salt. WOC and TAG.
- 4. Operator shall perf at 1,960' and squeeze class C cement to 1,810' to seal the top of the Salt. WOC and TAG.
- 5. Operator shall perf at 500' and squeeze class c cement to surface to seal the 8-5/8' casing shoe.
- 6. Dry hole marker must be below ground.
- 7. Surface reclamation will need to be completed once the well bore has been plugged. Please contact <a href="mailto:rflores@blm.gov">rflores@blm.gov</a> for additional information.
- 8. This approval will be good for 12 months ending 04/13/2024 instead of the 90 days stated in the general plugging stipulations. If operator needs an extension past 04/13/2024 they will need to submit a sundry notice requesting the extension with reasoning for needing it.
- 9. See Attached for general plugging stipulations.

JAM 04132023

#### RIDGEWAY ARIZONA OIL CORP.

Plug And Abandonment Procedure

IENNIFER CHAVEROO SA UNIT #001

660' FSL & 2151' FEL, Section 18, 07S, 34E

Roosevelt County, NM / API 30-041-10639

LPCH: YES

- 1. Hold pre-job safety meeting. Comply with all NMOCD, BLM safety and environmental regulations. Test rig anchors prior to moving in rig if not rigged to base beam.
- 2. Perform spiral gas check. Check casing, tubing, and Bradenhead pressures.
- 3. Remove existing piping on casing valve. RU blow lines from casing valves and begin blowing down casing pressure. Preform mandatory 40 bbls well kill. If a different fluid or amount is required kill well as necessary. Ensure well is dead or on a vacuum.
- 4. ND wellhead and NU BOP. Function test BOP.
- 5. P/U 4-1/2" bit or casing scraper on 2-3/8" work string and round trip as deep as possible above top perforation at 4,064'.
- 6. P/U 4-1/2" CR, TIH and set CR at +/- 4,014'. Pressure test tubing to 1000 psi. Sting out of CR. Load hole, and pressure test casing to 800 psi. If casing does not test, then spot or tag subsequent plugs as appropriate. POOH w/ tubing.
- 7. RU wireline and run CBL with 500 psi on casing from CR at 4,014' to surface to identify TOC. Adjust plugs as necessary for new TOC. Email log copy to

Loren Diede at <a href="loren.diede@emnrd.nm.gov">loren.diede@emnrd.nm.gov</a>, Jennifer Sanchez at <a href="jlsanchez@blm.gov">jlsanchez@blm.gov</a>, and to Gilbert Cordero at <a href="gilbert.cordero@emnrd.nm.gov">gilbert.cordero@emnrd.nm.gov</a> upon completions of logging operations.

- 8. Rig up to pump cement down tubing. Pump water to establish rate down tubing.
- 9. Circulate wellbore.

NOTE: All Plugs Include 50' excess.

10. Plug 1 (Perforations, 4,014'-3,619', 25 Sacks Type I/II Cement)

Mix 25 sx Type I/II cement and spot a balanced plug inside casing to cover the perforations.

11. Plug 2 (San Andres and Queen Formation Tops, 3,498'-2,790', 55 Sacks Type I/II Cement)

Mix 55 sx Type I/II cement and spot a balanced plug inside casing to cover the San Andres and Queen formation tops.

12. Plug 3 (Yates, Base Salt, and Rustler Formation Tops, 2,312'-1,765', 43 Sacks Type I/II Cement)

Mix 43 sx Type I/II cement and spot a balanced plug inside casing to cover the Yates, Base Salt, and Rustler formation tops.

13. Plug 4 (Surface Casing Shoe 500'-Surface, 101 Sacks Type I/II Cement)

Verify TOC via CBL. Perforate at the appropriate depth (Approx 300'). TIH to 500'. Shut in casing valve. Pump from cement from 500' to surface filling annulus from perforations to surface. Shut BH valve and open casing valve. Continue pumping cement filing 4.5" casing to surface.

14. ND cementing valves and cut off wellhead. Fill annuli with cement as necessary. Install P&A marker to comply with regulations. Record GPS

coordinate for P&A marker on tower report. Photograph P&A marker in place. RD, MOL and restore location per BLM stipulations.

# **Existing Wellbore Diagram**

RIDGEWAY ARIZONA OIL CORP.
Jennifer Chaveroo SA UNIT #001
API: 30-041-10639
Roosevelt County, New Mexico

#### **Surface Casing**

8.625" 24# @ 450 ft OH: 12.25' Cemented W/ 300 sx


#### **Estimated Formations**

Rustler - 1865 feet Base Salt - 2120 feet Yates - 2195 feet Queen - 2890 feet San Andres - 3325 feet

Estimated TOC: 300'

Perforations 4064 feet - 4269 feet

Production Casing 4.5" 9.5# @ 4340 feet OH: 7.875" Cemented W/ 800 sx

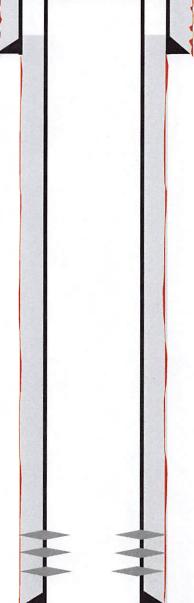

# **Proposed Wellbore Diagram**

RIDGEWAY ARIZONA OIL CORP.
Jennifer Chaveroo SA UNIT #001
API: 30-041-10639
Roosevelt County, New Mexico
LPCH: YES

#### **Surface Casing**

8.625" 24# @ 450 ft OH: 12.25' Cemented W/ 300 sx

#### Plug 4

500 feet - Surface 500 foot plug 101 Sacks of Type I/II Cement

#### Plug 3

2312 feet - 1765 feet 547 foot plug 43 Sacks of Type I/II Cement

#### Plug 2

3498 feet - 2790 feet 708 foot plug 55 Sacks of Type I/II Cement

#### Plug 1

4014 feet - 3619 feet 323 foot plug 25 sacks of Type I/II Cement

#### **Estimated Formations**

Rustler - 1865 feet Base Salt - 2120 feet Yates - 2195 feet Queen - 2890 feet San Andres - 3325 feet

Estimate TOC: 300'

Type I/II Cement 15.6 PPG 1.18 cf/sx


Retainer @ 4014 feet

### <u>Perforations</u>

4064 feet - 4269 feet

#### Production Casing 4.5" 9.5# @ 4340 feet OH: 7.875"

Cemented W/ 800 sx 0.0912 cf/ft

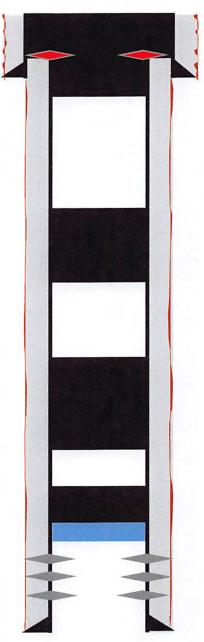

# State of New Mexico Energy, Minerals and Natural Resources Department Oil Conservation Division Standard Plugging Conditions



This document provides OCD's general plugging conditions of approval. It should be noted that the list below may not cover special plugging programs in unique and unusual cases, and OCD expressly reserves the right to impose additional requirements to the extent dictated by project conditions. The OCD also reserves the right to approve deviations from the below conditions if field conditions warrant a change. A C-103F NOI to P&A must be approved prior to plugging operations. Failure to comply with the conditions attached to a plugging approval may result in a violation of 19.15.5.11 NMAC, which may result in enforcement actions, including but not limited to penalties and a requirement that the well be re-plugged as necessary.

- 1. Notify OCD office at least 24 hours before beginning work and seek prior approval to implementing any changes to the C-103 NOI to PA.
  - North Contact, Monica Kuehling, 505-320-0243, monica.kuehling@emnrd.nm.gov
  - South Contact, Gilbert Cordero, 575-626-0830, gilbert.cordero@emnrd.nm.gov
- A Cement Bond Log is required to ensure strata isolation of producing formations, protection of
  water and correlative rights. A CBL must be run or be on file that can be used to properly
  evaluate the cement behind the casing.

Note: Logs must be submitted to OCD via OCD permitting. A copy of the log may be emailed to OCD inspector for faster review times, but emailing does not relieve the operators obligation to submit through OCD permitting.

- 3. Once Plugging operations have commenced, the rig must not rig down until the well is fully plugged without OCD approval. If gap in plugging operations exceeds 30 days, the Operator must file a subsequent sundry of work performed and revised NOI for approval on work remaining. At no time shall the rig be removed from location if it will result in waste or contamination of fresh water.
- 4. Insure all bradenheads have been exposed, identified and valves are operational prior to rig up.
- 5. Fluids must be placed between all cement plugs mixed at 25 sacks per 100 bbls of water.
  - North, water or mud laden fluids
  - South, mud laden fluids
- 6. Closed loop system is to be used for entire plugging operation. Upon completion, contents of steel pits are to be hauled to an OCD permitted disposal facility.

7. Class of cement shall be used in accordance with the below table for depth allowed.

Class	TVD Lower Limit (feet)
Class A/B	6,000
Class I/II	6,000
Class C or III	6,000
Class G and H	8,000
Class D	10,000
Class E	14,000
Class F	16,000

- 8. After cutting the well head any "top off cement jobs" must remain static for 30 minutes. Any gas bubbles or flow during this 30 minutes shall be reported to the OCD for approval of next steps.
- 9. Trucking companies being used to haul oilfield waste fluids (Commercial or Private) to a disposal facility shall have an approved OCD C-133 permit.
  - A copy of this permit shall be available in each truck used to haul waste products.
  - It is the responsibility of the Operator and Contractor to verify that this permit is in place prior to performing work.
  - Drivers shall be able to produce a copy upon request of an OCD Compliance Officer.
- 10. Filing a [C-103] Sub. Plugging (C-103P) will serve as notification that the well has been plugged.
- 11. A [C-103] Sub. Release After P&A (C-103Q) shall be filed no later than a year after plugging and a site inspection by OCD Compliance officer to determine if the location is satisfactorily cleaned, all equipment, electric poles and trash has been removed to meet OCD standards before bonding can be released.
- 12. Produced water or brine-based fluids may not be used during any part of plugging operations without prior OCD approval.

#### 13. Cementing;

- All cement plugs will be neat cement and a minimum of 100' in length. 50' of calculated cement excess required for inside casing plugs and 100% calculated cement excess required on outside casing plugs.
- If cement does not exist between or behind the casing strings at recommended formation depths, the casing perforations will be shot at 50' below the formation top and the cement retainer shall be set no more than 50' from the perforations.
- WOC (Wait on Cement) time will be:
  - o 4 hours for accelerated (calcium chloride) cement.
  - o 6 hours on regular cement.
- Operator must tag all cement plugs unless it meets the below condition.
  - The operator has a passing pressure test for the casing annulus and the plug is only an inside plug.
- If perforations are made operator must tag all plugs using the work string to tag unless given approval to tag with wireline by the correct contact from COA #1 of this document.
  - This includes plugs pumped underneath a cement retainer to ensure retainer seats properly after cement is pumped.
- Cement can only be bull-headed with specific prior approval.
- Squeeze pressures are not to exceed the exposed formations frac gradient or the burst pressure of the casing.

- 14. A cement plug is required to be set from 50' below to 50' above (straddling) formation tops, casing shoes, casing stubs, any attempted casing cut offs, anywhere the casing is perforated, DV tools.
  - Perforation/Formation top plug. (When there is less than 100ft between the top
    perforation to the formation top.) These plugs are required to be started no greater than
    50ft from the top perforation. However, the plug should be set below the formation top
    or as close to the formation top as possible for the maximum isolation between the
    formations. The plug is required to be a 100ft cement plug plus excess.
  - Perforation Plug when a formation top is not included. These plugs are required to be started within 50ft of the top perforation. The plug is required to be a 100ft cement plug plus excess.
  - Cement caps on top of bridge plugs or cement retainers for perforation plugs, that are not straddling a formation top, may be set using a bailer with a minimum of 35' of cement in lieu of the 100' plug. The bridge plug or retainer must be set within 50ft of the perforations.
  - Perforations are required below the surface casing shoe if cement does not exist behind
    the casing, a 30-minute minimum wait time will be required immediately after
    perforating to determine if gas and/or water flows are present. If flow is present, the
    well will be shut-in for a minimum of one hour and the pressure recorded. If gas is
    detected contact the OCD office for directions.
- 15. No more than 3000 feet is allowed between cement plugs in cased hole and no more than 2000 feet is allowed in open hole.
- 16. Formation Tops to be isolated with cement plugs, but not limited to are:
  - Northwest See Figure A
  - South (Artesia) See Figure B
  - Potash See Figure C
    - O In the R-111-P (Or as subsequently revised) Area a solid cement plug must be set across the salt section. Fluid used to mix the cement shall be saturated with the salts that are common to the section penetrated and in suitable proportions, not more than 3% calcium chloride (by weight of cement) will be considered the desired mixture whenever possible, woe 4 hours and tag, this plug will be 50' below the bottom and 50' above the top of the Formation.
  - South (Hobbs) See Figure D1 and D2
  - Areas not provided above will need to be reviewed with the OCD on a case by case basis.

#### 17. Markers

- Dry hole marker requirements 19.15.25.10.
   The operator shall mark the exact location of plugged and abandoned wells with a steel marker not less than four inches in diameter set in cement and extending at least four feet above mean ground level. The marker must include the below information:
  - 1. Operator name
  - 2. Lease name and well number
  - 3. API number
  - 4. Unit letter
  - 5. Section, Township and Range

- AGRICULTURE (Below grade markers)
   In Agricultural areas a request can be made for a below ground marker. For a below ground marker the operator must file their request on a C-103 notice of intent, and it must include the following;
  - A) Aerial photo showing the agricultural area
  - B) Request from the landowner for the below ground marker.
  - C) Subsequent plugging report for a well using a below ground marker must have an updated C-102 signed by a certified surveyor for SHL.

Note: A below ground marker is required with all pertinent information mentioned above on a plate, set 3' below ground level, a picture of the plate will be supplied to OCD for record, the exact location of the marker (longitude and latitude by GPS) will be provided to OCD. OCD requires a current survey to verify the location of the below ground marker, however OCD will accept a GPS coordinate that were taken with a GPS that has an accuracy of within 15 feet.

18. If work has not commenced within 1 year of the approval of this procedure, the approval is automatically expired. After 1 year a new [C-103] NOI Plugging (C-103F) must be submitted and approved prior to work.

#### Figure A

#### North Formations to be isolated with cement plugs are:

- San Jose
- Nacimiento
- Ojo Alamo
- Kirtland
- Fruitland
- Picture Cliffs
- Chacra (if below the Chacra Line)
- Mesa Verde Group
- Mancos
- Gallup
- Basin Dakota (plugged at the top of the Graneros)
- Deeper formations will be reviewed on a case-by-case basis

#### Figure B

#### South (Artesia) Formations to be isolated with cement plugs are:

- Fusselman
- Montoya
- Devonian
- Morrow
- Strawn
- Atoka
- Permo-Penn
- Wolfcamp
- Bone Springs
- Delaware, in certain areas where the Delaware is subdivided into;
  - 1. Bell Canyon
  - 2. Cherry Canyon
  - 3. Brushy Canyon
- Any salt sections
- Abo
- Yeso
- Glorieta
- San Andres
- Greyburg
- Queen
- Yates

#### Figure C

#### Potash Area R-111-P

T 18S - R 30E

Sec 10 Unit P. Sec 11 Unit M,N. Sec 13 Unit L,M,N. Sec 14 Unit C -P. Sec 15 Unit A G,H,I,J,K,N,O,P. Sec 22 Unit All

except for M. Sec 23, Sec 24 Unit C,D,E,L, Sec 26 Unit A-G, Sec 27 Unit A,B,C

T 19S - R 29E

Sec 11 Unit P. Sec 12 Unit H-P. Sec 13. Sec 14 Unit A,B,F-P. Sec 15 Unit P. Sec 22 Unit A,B,C,F,G,H,I,J K,N,O,P. Sec 23.

Sec 24. Sec 25 Unit D. Sec 26 Unit A- F. Sec 27 Unit A,B,C,F,G,H.

T 19S - R 30E

Sec 2 Unit K,L,M,N. Sec 3 Unit I,L,M,N,O,P. Sec 4 Unit C,D,E,F,G,I-P. Sec 5 Unit A,B,C,E-P. Sec 6 Unit I,O,P. Sec 7 – Sec

10. Sec 11 Unit D, G—P. Sec 12 Unit A,B,E-P. Sec 13 Unit A-O. Sec 14-Sec 18. Sec 19 Unit A-L, P. Sec 20 – Sec 23. Sec

24 Unit C,D,E,F,L,M,N. Sec 25 Unit D. Sec 26 Unit A-G, I-P. Sec 27, Sec 28, Sec 29 Unit A,B,C,D,F,G,H,I,J,O,P. Sec 32

Unit A,B,G,H,I,J,N,O,P. Sec 33. Sec 34. Sec 35. Sec 36 Unit D,E,F,I-P.

T 19S - R 31E

Sec 7 Unit C,D,E,F,L. Sec 18 Unit C,D,E,F,G,K,L. Sec 31 Unit M. Sec 34 Unit P. Sec 35 Unit M,N,O. Sec 36 Unit O,P.

T 20S - R 29E

Sec 1 Unit H,I,P. Sec 13 Unit E,L,M,N. Sec 14 Unit B-P. Sec 15 Unit A,H,I,J,N,O,P. Sec 22 Unit A,B,C,F,G,H,I,J,O,P. Sec

23. Sec 24 Unit C,D,E,F,G,J-P. Sec 25 Unit A-O. Sec 26. Sec 27 Unit A,B,G,H,I,J,O,P. Sec 34 Unit A,B,G,H. Sec 35 Unit

A-H. Sec 36 Unit B-G.

T 20S - R 30E

Sec 1 – Sec 4. Sec 5 Unit A,B,C,E-P. Sec 6 Unit E,G-P. Sec 7 Unit A-H,I,J,O,P. Sec 8 – 17. Sec 18 Unit A,B,G,H,I,J,O,P.

Sec 19 Unit A,B,G,H,I,J,O,P. Sec 20 – 29. Sec 30 Unit A-L,N,O,P. Sec 31 Unit A,B,G,H,I,P. Sec 32 – Sec 36.

T 20S - R 31E

Sec 1 Unit A,B,C,E-P. Sec 2. Sec 3 Unit A,B,G,H,I,J,O,P. Sec 6 Unit D,E,F,J-P. Sec 7. Sec 8 Unit E-P. Sec 9 Unit E,F,J-P.

Sec 10 Unit A,B,G-P. Sec 11 – Sec 36.

T 21S - R 29E

Sec 1 – Sec 3. Sec 4 Unit L1 – L16,I,J,K,O,P. Sec 5 Unit L1. Sec 10 Unit A,B,H,P. Sec 11 – Sec 14. Sec 15 Unit A,H,I. Sec

23 Unit A,B. Sec 24 Unit A,B,C,D,F,G,H,I,J,O,P. Sec 25 Unit A,O,P. Sec 35 Unit G,H,I,J,K,N,O,P. Sec 36 A,B,C,F – P.

T 21S - R 30E

Sec 1 – Sec 36

T 21S - R 31E

Sec 1 – Sec 36

T 22S - R 28E

Sec 36 Unit A,H,I,P.

T 22S - R 29E

Sec 1. Sec 2. Sec 3 Unit I,J,N,O,P. Sec 9 Unit G – P. Sec 10 – Sec 16. Sec 19 Unit H,I,J. Sec 20 – Sec 28. Sec 29 Unit

A,B,C,D,G,H,I,J,O,P. Sec 30 Unit A. Section 31 Unit C – P. Sec 32 – Sec 36

T 22S – R 30E

Sec 1 - Sec 36

T 22S - R 31E

Sec 1 – Sec 11. Sec 12 Unit B,C,D,E,F,L. Sec 13 Unit E,F,K,L,M,N. Sec 14 – Sec 23. Sec 24 Unit C,D,E,F,K,L,M,N. Sec 25

Unit A,B,C,D. Sec 26 Unit A,BC,D,G,H. Sec 27 – Sec 34.

T 23S - R 28E

Sec 1 Unit A

T 23S - R 29E

Sec 1 – Sec 5. Sec 6 Unit A – I, N,O,P. Sec 7 Unit A,B,C,G,H,I,P. Sec 8 Unit A – L, N,O,P. Sec 9 – Sec 16. Sec 17 Unit

A,B,G,H,I,P. Sec 21 – Sec 23. Sec 24 Unit A – N. Sec 25 Unit D,E,L. Sec 26. Sec 27. Sec 28 Unit A – J, N,O,P. Sec 33

Unit A,B,C. Sec 34 Unit A,B,C,D,F,G,H. Sec 35. Sec 36 Unit B,C,D,E,F,G,K,L.

T 23S - R 30E

Sec 1 – Sec 18. Sec 19 Unit A – I,N,O,P. Sec 20, Sec 21. Sec 22 Unit A – N, P. Sec 23, Sec 24, Sec 25. Sec 26 Unit

A,B,F-P. Sec 27 Unit C,D,E,I,N,O,P. Sec 28 Unit A – H, K,L,M,N. Sec 29 Unit A – J, O,P. Sec 30 Unit A,B. Sec 32 A,B. Sec

33 Unit C,D,H,I,O,P. Sec 34, Sec 35, Sec 36.

T 23S - R 31E

Sec 2 Unit D,E,J,O. Sec 3 – Sec 7. Sec 8 Unit A – G, K – N. Sec 9 Unit A,B,C,D. Sec 10 Unit D,P. Sec 11 Unit G,H,I,J,M,N,O,P. Sec 12 Unit E,L,K,M,N. Sec 13 Unit C,D,E,F,G,J,K,L,M,N,O. Sec 14. Sec 15 Unit A,B,E – P. Sec 16 Unit

I, K – P. Sec 17 Unit B,C,D,E, I – P. Sec 18 – Sec 23. Sec 24 Unit B – G, K,L,M,N. Sec 25 Unit B – G, J,K,L. Sec 26 – Sec

34. Sec 35 Unit C,D,E.

T 24S – R 29E

Sec 2 Unit A, B, C, D. Sec 3 Unit A

T 24S – R 30E

Sec 1 Unit A – H, J – N. Sec 2, Sec 3. Sec 4 Unit A,B,F – K, M,N,O,P. Sec 9 Unit A – L. Sec 10 Unit A – L, O,P. Sec 11.

Sec 12 Unit D,E,L. Sec 14 Unit B – G. Sec 15 Unit A,B,G,H.

T 24S – R 31E Sec 3 Unit B – G, J – O. Sec 4. Sec 5 Unit A – L, P. Sec 6 Unit A – L. Sec 9 Unit A – J, O,P. Sec 10 Unit B – G, K – N. Sec 35 Unit E – P. Sec 36 Unit E,K,L,M,N.

T 25S – R 31E Sec 1 Unit C,D,E,F. Sec 2 Unit A – H.

Figure D1 and D2

South (Hobbs) Formations to be isolated with cement plugs are:

The plugging requirements in the Hobbs Area are based on the well location within specific areas of the Area (See Figure D1). The Formations in the Hobbs Area to be isolated with cement plugs are (see Figure D2)

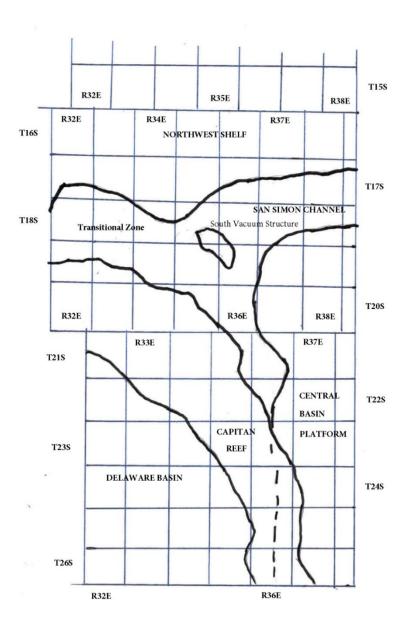


Figure D1 Map

# Figure D2 Formation Table

	100'	P'lug to isolate upper a	nd lower fresh water	zones (typiailly 2.50' to	350')	
ND!rthwest Shelf	C;iptan Reef Are <a< th=""><th>Trani5ition Zone</th><th>San Simon Oh.annel</th><th>South \lacJUUm Structure</th><th>Delaware Basin</th><th>Ce<n,tiral basin="" platform<="" th=""></n,tiral></th></a<>	Trani5ition Zone	San Simon Oh.annel	South \lacJUUm Structure	Delaware Basin	Ce <n,tiral basin="" platform<="" th=""></n,tiral>
Granit \./ash (Detrital basement material and fractured pre-Cambrian basement rock)	Siluro-Devonian	Morrow	Siluro-Devonian	Ellenburger	Siluro-Devonian	Granit \./ash (Detrital basement material, fractured pre-Cambrian basement rock and fracture Mafic Volcanic intrusives).
Montoya	Mississippian	Atoka	Morrow	Mckee	Morrow	Ellenburger
Fusselman	Morrow	Strawn	\./olfcamp	Siluro-Devonian	Atoka	Connell
Woodford	Atoka	Cisco	Abo Reef	Woodford	Strawn	Waddell
Siluro-Devonian	Strawn	Pennsylvanian	Bone Spring	Mississippian	Pennsylvanian	Mckee
Chester	Pennsylvanian	\./olfcamp	Delaware	Barnett Shale	Low er \./olfcamp	Simpson Group
Austin	\./olfcamp	Bone Spring	San Andres	Morrow	Upper \./olfcamp	Montoya
Mississippian	Abo Reef, if present	Delaware	Queen	Atoka	\./olfcamp	Fusselman
Morrow	Abo, if present	San Andres	Yates	Strawn	Third Bone Spring Sand (Top of \./olfbone)	Silurian
Atoka	Queen, if present	Grayburg-San Andres	Base of Salt	Canyon	First Bone Spring Sand (Top of Lower Bone Spring)	Devonian
Lower Pennsylvanian	Bone Spring	Queen	Rustler	Pennsylvanian	Bone Spring	Strawn
Cisco-Canyon	Delaware	Seven Rivers		Blinebry	Brushy Canyon	Pennsylvanian
Pennsylvanian	Base Capitan Reef	Yates		Bone Spring	Delaw are (Base of Salt)	\./olfcamp
Bough	Seven Rivers	Base of Salt		San Andres	Rustler	Abo
\./olfcamp	Yates	Rustler		Queen		Abo Reef
Abo	Top Capitan Reef			Base of Salt		Drinkard
Abo Reef, if present	Base of Salt			Rustler		Tubb
Yeso (Township 15 South to Township 17 South)	Rustler					Blinebry
Drinkard or Low er Y eso (Township 15 South to Township 17 South)						Paddock
Tubb (Township 15 South to Township 17 South)						Glorieta
Blinebry (Township 15 South to Township 17 South)						San Andres
Pad dock (Township 15 South to Township 17 South)						Grayburg
Glorieta						Grayburg-San Andres
San Andres						Queen
Queen (Township 15 South to Township 17 South)						Seven Rivers
Seven Rivers (Township 15 South to Township 17 South)						Yates
Yates (Township 15 South to Township 17 South)						Base of Salt
Base of Salt						Rustler
Rustler						

District I
1625 N. French Dr., Hobbs, NM 88240
Phone: (575) 393-6161 Fax: (575) 393-0720 District II

811 S. First St., Artesia, NM 88210 Phone:(575) 748-1283 Fax:(575) 748-9720 District III

1000 Rio Brazos Rd., Aztec, NM 87410 Phone:(505) 334-6178 Fax:(505) 334-6170

1220 S. St Francis Dr., Santa Fe, NM 87505 Phone:(505) 476-3470 Fax:(505) 476-3462

**State of New Mexico Energy, Minerals and Natural Resources Oil Conservation Division** 1220 S. St Francis Dr. **Santa Fe, NM 87505** 

CONDITIONS

Action 397775

#### **CONDITIONS**

Operator:	OGRID:
J.A. Drake Well Service Inc.	330485
607 W Pinon	Action Number:
Farmington, NM 87401	397775
	Action Type:
	[C-103] NOI Plug & Abandon (C-103F)

#### CONDITIONS

Created By	Condition	Condition Date
loren.diede	Notify the OCD inspection supervisor via email 24 hours prior to beginning Plug & Abandon (P&A) operations.	11/4/2024
loren.diede	Submit Cement Bond Logs (CBL) prior to submittal of C-103P.	11/4/2024