


Operator Heartland Energy Corp.
 Well Froelich Fed. #1
 Unit H Section 24 Township 18 Range 21
 API # 30-015-23552

TOPS

T. Salt _____
 B. Salt _____
 Yates _____
 Glorieta 1590
~~Delaware~~ Chickadee 2300
 Bone Sp. Tubb 2910
 Abo 3415
 Wolfcamp 4410
 Morrow _____
 Devonian _____
 Fusselman _____
 Other _____

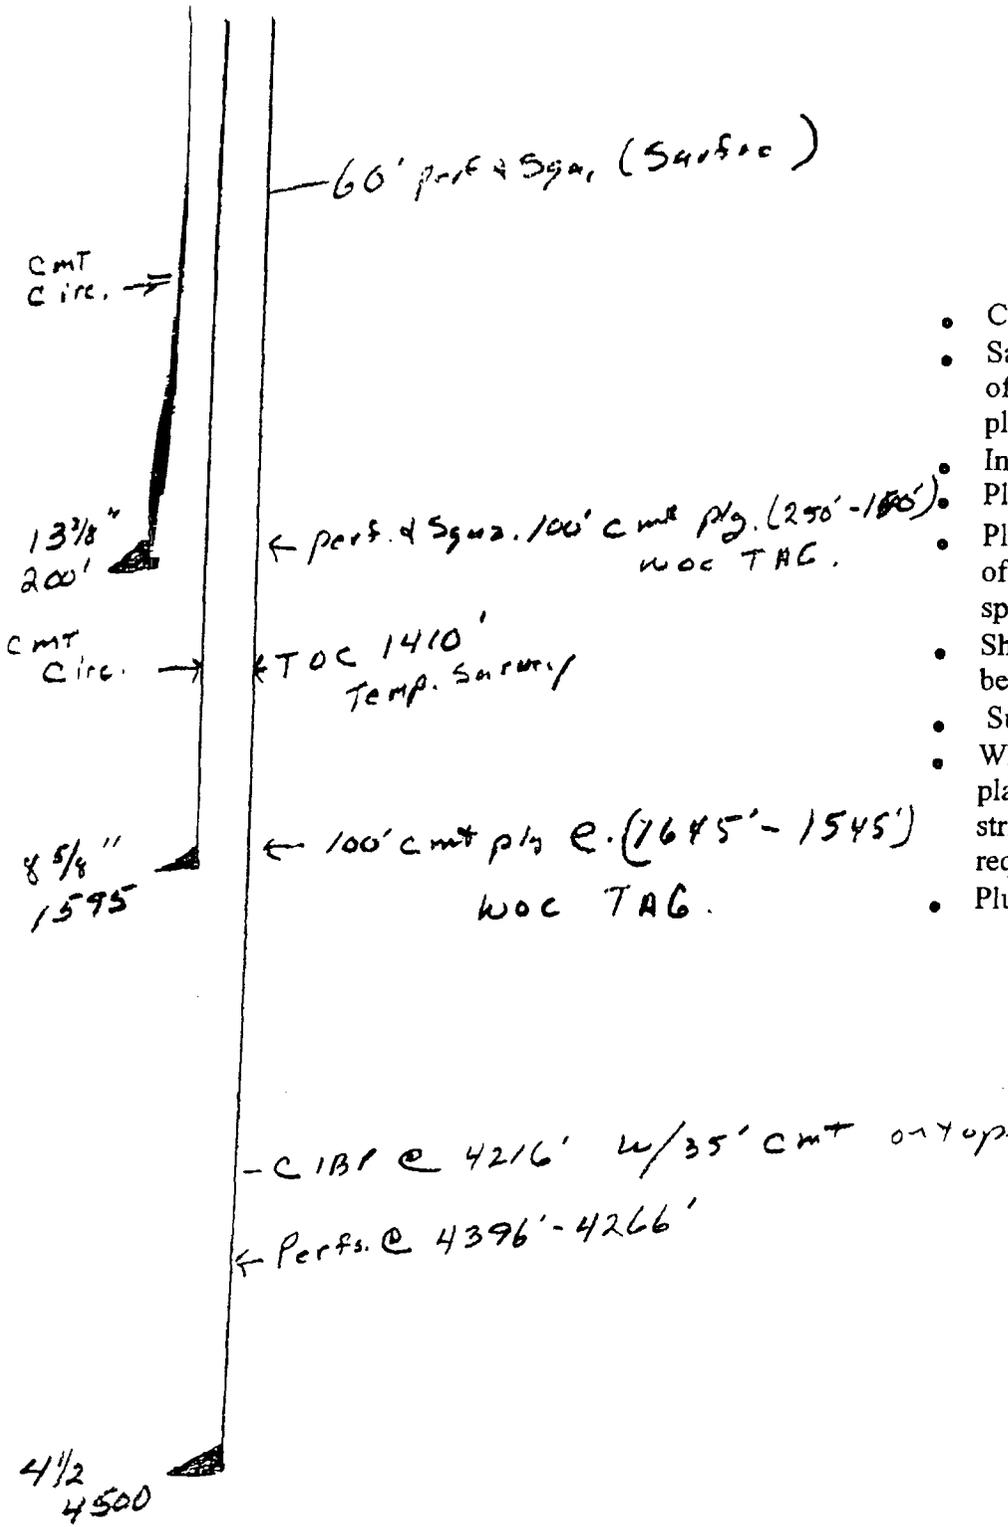

- Contact OCD 24 hrs. prior to any work done
- Salt gel mud consisting of 10# brine with 25% of gel per barrel must be placed between each plug
- Install dry hole marker as per rule 202.B.2
- Plugs are to be set from point indicated up.
- Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
- Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- Surface plug will be from 0' - 60'
- Where plugs are required cement must be placed inside and outside of all casing string(s), in the correct footage or sacks required, if no cement exists.
- Plugs to be tagged will be indicated.

OCD Exhibit 7
 Case 13712
 June 8 2006