

JAMES BRUCE

ATTORNEY AT LAW

POST OFFICE BOX 1056
SANTA FE, NEW MEXICO 87504

324 MCKENZIE STREET
SANTA FE, NEW MEXICO 87501

(505) 982-2043
(505) 982-2151 (FAX)

AL COLLECTION DE

12 AUG -5 PM 2:22

August 1, 2002


Lori Wrotenbery
Oil Conservation Division
1220 South St. Francis Drive
Santa Fe, New Mexico 87505

Re: Case No. 12757 (de novo)

Dear Ms. Wrotenbery:

Enclosed are three copies of the Marks and Garner Production, Ltd.
Co. log book which the Commission requested at hearing.

Very truly yours,

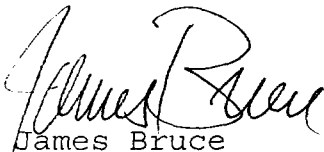

James Bruce

Attorney for Marks and Garner Production, Ltd. Co.

cc: David K. Brooks (w/encl.)

9-1-00 - Rig up PU on Red 12 hole 2. Pull Pals & tubing - SD

9-4-00 Find hole in tubing Run tubing Back in hole. Test tubing. OK Run Pals Put back on. SD

9-5-00 RA & go to CPU # 32. Rig up ~~RA~~ Put swab mandrel on a Run $4\frac{1}{2}$ " swab in hole to 2400' Made 1 Run recovered 2 BBIs oil & 4 BBIs water with gas kick. RD Pulling unit move to CPU # 14. Rig up Pulling Run in hole with $4\frac{1}{2}$ " swab. Run to 2400' come out of hole recovered 2 BBIs oil & 5 BBIs water. SD

9-6-00 - RD Pulling unit go to CPU # 3 RA PU Run in hole with swab Run to 2400' COH & recovered 1 BBI oil & 3 BBIs water. RD Pulling unit 2 go to CPU # 16. RA PU go in hole with swab to 2400' COH & rec. 3 BBIs oil & 4 BBIs water. RD PU & go to CPU # 41 RA PU & go in hole with swab to 2400' COH with swab & rec. 3 BBIs oil & 5 BBIs water. SD

41
51
53
#

Mon 9-7-00

RD Pu gate CP#451 & Ru Pu run swab
in hole to 2700 & spec 2 BBIs oil
& 2 BBIs water. RD Pu go to CP#453 &
Ru Pu run in hole with swab to spec cap
with rec. 2 BBIs oil & 2 BBIs water. RA Pu
& soda ~~production~~ CP#453. Ru Pu SD

Fri 9-8-00

pull rods & tubing find holes in tubing between
tubing & run drill in hole so in hole with
rods & put back on. RD SD

Mon 9-11-00

Go to Lewis & pull rods top & put part
go in hole & fix rods hang back on &
start pumping. RD Pu SD

Mon 9-12-00

Ru Pu on hole & pull rods & fix
rod part join hole with fish & rec.
Rods put back on & start pumping.

RD Pu Go to CP#419 & start Alcon engine D.

Wed 9-13-00

Move to CP#62 & pull rods & tubing. Find
numerous holes in tubing. Replace tubing &
run in hole. Run rods in hole & start
pumping. SD.

Thur 9-14-00 - RD Pulling unit & move to C Act 52. RU PU & Pull Rods. Find Rods Parted deep go Back in hole & Fish Rod came back out of hole w/ rods & replace Broken rod go in hole & put Back to Pumping. SD.

Fri 9-15-00 RD PU move to CPA Battery & Begin to replace water log & remove water from Bottom of oil rec 7 BDI water on Bottom of tank, replace pump packing, check rest of wells. SD.

Sat 9-16-00 - Move PU to Double X go to Han B #2 & RU PU Pull rods & pump. Replace Pump & run back in hole. Put Back to Pumping. SD.

Sun 9-17-00 RD PU & move to Han B #1 Pulled Rods & Find Deep rod part. Put on Fish & GTH & let on Fish Pull Pump & looked till - go Back in hole. Started Pumping. SD.

Mon 9-20-00 RD PU & move to Smelling & RU & Pull Pump. Find Pump is Bad wait on Pump to be delivered. Pump arrived & GTH with Pump. Put Back to Pumping & Pumping good. SD.

Thurs 9-21-00 - RD PU + go to Bradley RU PA + Pull Rods
Find that Rods Parted go in hole with Fish
+ rec. Rods Pull + Replace Rod + go in hole
+ Put Back to Pumping. SD

Fri 9-22-00 - RD PU + move to GH. RU PU + Find
that Rods Parted. GH + Fish Rods Replace
Rod + Put Back to Pumping. RD SP.

Sat 9-23-00 - Move PA to Hnd 2 RU PU Find that
rods Parted go in hole + Fish Replace Rod
+ Put Back to Pumping. RD PU SD.

Sun 9-24-00 - Move PA to Day Canyon 36. RU SD.

Wed 9-27-00 - Go in hole with 2" snob + rec 4 BBs
water. First Run + 5 BBs sec. Run.
+ the go in Third time + rec 3 BBs. Well
started to show more blow. Make one
more run + rec 2 BBs water + well
Kicked off. SP.

Thurs 9-28-00 - RD PU + move to Day Canyon 37.
RU PU + make a snob run + rec
6 BBs water. GH again + rec 6 BBs water.
SD.

Fri 9-29-00 - GHA w/ swab & rec 5 BBLs water 5 ft H again
& rec 4 BBLs water well started to kick.
Let well flow & flowed 3 BBLs water & kicked
off. RD PU. SD.

Mon 10-2-00

Move PU to CPU & Rig up on
~~CPU~~ CPU # 53. Run swab in hole & rec.
1 BBL oil & 2 BBLs water. RD PU & move
to CPU # 51. RU PU & swab. Rec 1 BBL
oil & 3 BBL water. RD PU SD.

Tue 10-3-00

Move to CPU # 41 swab well & rec. 1 BBL
oil & 2 BBLs water. RD PU & move to
CPU # 4 RU PU & swab rec 1 BBL oil &
3 BBL water. RD PU & move to CPU # 16
& RU PU & swab 3 BBL oil & 2 BBL water.
SD.

Wed 10-4-00

RD PU & move to CPU # 14 swab & rec.
1 BBL oil & 2 BBL water. RD PU & move
to CPU # 32 RU PU & swab 1 BBL oil
& 3 BBL water. RD SD.

Tha 10-5-66 -

Move pu to CPU #3 & Switch rec (BO)
oil & 2 BO's water. ROPu Take
elec meter to CPU #1

~~Turned on~~ Started to pump. Move
~~Portabie~~ Portabie Pumping unit to CPU.

19 & start Ajax started Pumping. SD
move Portabie Pumping unit to Cave St.
#4 & started Ajax. Move elec meter
off CPU #1 to CPU #30, started
Pumping. SD

10-6-66

Mon 10-7-66 -

Check CPU #30 Pumped OFF Turned
OFF. Check rest of wells.

● move elec meter to corest #7 SD.

Mon 10-9-66 -

Move pu to Levers #16. Run Roly
& pump. started Ajax & well started
Pumping. SD.

Tues 10-10-66 -

ROPu 2 move to Cave St #5.

Mon 10-5-00 -

Move PU to CPU #3 & Switch on 1 BR
oil & 2 BRs water. RDPu. Take
elec meter to CPU #1

Turned on started to pump. Move

Portable Pumping unit to CPU

#1 & Start Ajax started Pumping. SD

Tue 10-6-00

move Portable Pumping unit to Cave St,

#4 & started Ajax. Move elec meter

off CPU #1 to CPU #30. started

Pumping. SD

Wed 10-7-00

Check CPU #30 Pumped off Turned

off. Check rest of wells.

move elec meter to Cave St #3 SD.

Mon 10-9-00

Move PU to Levers #6. Run Rods

& pump. started Ajax & well started

Pumping. SD.

Tues 10-10-00

RDPu & move to Cave St #5.

RUPu & Pull Rods & Pump. Replace

pump & Rod. Put well back on

Production. RDPu. Move to

Levers #7. RUPu. SD.

Wed 10-11-00 - Pull Rods on Lev 7 Find that Rods
Ported. GPH w/ Fish & rec. Rods
Perhaps Broken Rod & Hang Broken. Starts
Pumping. RDPu & move to Rod 12
Fed #1. RUPu SD.

Thurs 10-12-00 Pull Rods & Find Ported rods. Run
in hole with Fish & rec. Broken Rod
Replace rod & Hang Broken. RDPu. SD

Fri 10-13-00 - Pu SD check wells SD.

Sat 10-14-00 - Motor in Pu going Bad. Working
on engine. Motor was out of oil &
water. SD

Sun 10-15-00 - Pull motor on Pu. SD.

Mon 10-16-00 - Waiting on motor for Pu. check wells
looks ok. SD.

Tues 10-17-00 - Still waiting on motor for Pu.

Fri 10-20-00 - No motor. check wells find that
Cave 51 & 5 Not Pumping. Test of wells
OK. Have elec motor from ~~Cave 51 & 5~~ ^{Cave 51 & 3}
to State #2. started to pump. SD

Mon 10-23-00 - Turn state #2 OFF. Still waiting on motor for PU. SD

Tue 10-24-00 - Get motor for PU. Put motor in. SD.

Wed 10-25-00 - Finish putting motor in PU. Everything sounds & looks OK. move PU to Rod 12 Rod #12. SD.

Thurs 10-26-00 - Run PU on Rod #12 for 2 & Pull Rods & tubing. Find that Tubing has a hole. Replace tubing & Rods. Started pumping. RD PU SD.

Fri 10-27-00 - Move PU to CPU #12. Run PU & Pull Rods & tubing. Have about 10 jts. But Replace jts & Rods started pumping. RD PU SD.

Sat 10-28-00 - no floorhand for PU SD.

Sun 10-29-00 - no floorhand for PU SD.

Wed 11-1-00 - Find floorhand move PU to CPU #3 Run PU & swab 4 BBL oil & 5 BBL water. RD PU & move to CPU #12 Run PU & swab 6 BBL oil & 10 BBL water. RD PU SD.

July 11-2-00 - move PU to CPU #14 RUPU & sub 7 BBI
oil & 18 BBI water. ROPU move to CPU #16
RUPU & sub 5 BBI oil & 11 BBI water.
RUPU & SD.

July 11-3-00 - move PU to CPU #32 RUPU & sub 4 BBI
oil & 12 BBI water. ROPU & move to CPU #41,
RUPU & sub 4 BBI oil & 18 BBI water.
RUPU & SD.

July 11-6-00 - move to CPU 51 & RUPU sub 4 BBI oil
& 14 BBI water. ROPU & move to CPU #53
RUPU & sub 3 BBI oil & 9 BBI water.
ROPU & move Portable Pumping unit to CPU
71 started NINE & started Pumping. SD.

July 11-7-00 - Go to CPU 30 ^{water} turn on started Pumping.
check rest of wells OK. Turn off CPU 50.

July 11-8-00 - Go to CPU 30 & Turn off take elec meter
to CPU #1 & started Pumping. SD

July 11-9-00 - CPU 1 Pumped off. Turn off & move elec meter to
CPU #3. check rest of wells. OK
SD.

July 11-10-00 - move Portable Pumping Unit From CPU 19 to Case #4

I move Elec meter to state at 2. Started Pumping.
SD.

Sat 11-13-00 - check state at 2 not Pumping. Turned off.
check rest of wells on SD.

Sun 11-13-00 - move Elec meter to Hedges Ford, Mon
Pa to Kennitz. R & D SD.

Tues 11-14-00 - Pull Rods on Kennitz take Pump in to
be checked SD.

Wed 11-15-00 - ~~Run~~ Drop SV & attempt to Press. up
on tubing never catch Press. Start to
come out of hole with tubing. Get
around SD stands out SD.

Thurs 11-16-00 - Pull part of pipe find that hole is
lost SD.

Fri 11-17-00 - Run 2 new its & GHT with tubing.
SD

Sat 11-20-00 - no Floorboard or Derrick land. SD PA.

Sun 11-21-00 - no Floorboard or Derrick land. SD PA.

Wed 11-23-00 - Find Floorboard & Derrick man. Run rest
of pipe in hole & Drop SV. Press.
up on tubing. Caught Press up to

600 Psi hold for 10 min. SD.

Thu 11-23-00 - Rec JV & GTH with Regs. SD

Fri 11-24-00 - Finish GTH with Rucks started Pumping.
RDPu. SD.

Mon 11-27-00 - Move Pu to Baum Field & Rig up on
Baum E #2. SD

Tue 11-28-00 - Pull Rucks on Baum E #2 & find that
pump was bad. Send pump in & SD Pu.

Wed 11-29-00 - Got new pump. RTH with pump &
Hing Buck on started pumping. RDPu &
move to Baum F #1. SD

Thurs 11-30-00 - Pull rods find shallow Rod Point & fish
rod. Replace rod & Put Buck on
production. RDPu & move Pu to GTH. SD

Fri 12-1-00 - SD

Mon 12-4-00 - RDPu on CPu #3 Run swab 2 BBH oil & 3
BBH water. Leave Pu RU & move portable
pumpjack from lowest #4 to CPu #1 started
Ajax & left pumping. Move elec meter from
Hedges to CPu #1 started pumping.

Tue 12-5-00 - Run swab on CPu #2 Rec 2 BBH oil & 3 BBH water

water, SP Pu.

12-6-00 - Swab CPU #3 & rec 4 BBls oil & 4 BBls water
& move this water from CPU #11 in CPU #3
& test Pumpj. RD Pu & move to CPU #12 Ru
Pu & swab 4 BBls oil & 7 BBls water. SD

12-7-00 - Swab CPU #12 & rec 5 BBls oil & 8 BBls water.
RD Pu & move to CPU #14 Ru Pu & swab
4 BBls oil & 7 BBls water. SD.

12-8-00 - Swab CPU #14 & rec 4 BBls oil & 7 BBls
water. Weather got bad SP.

12-9-00 - Swab CPU #14 & rec 3 BBls oil & 11 BBls
water. RD Pu & move to CPU 16 Ru Pu &
swab 3 BBls oil & 5 BBls water. SD

12-11-00 - Swab CPU #16 & rec 3 BBls oil & 5 BBls water.
SD

12-12-00 - Move Pumpjack off CPU #14 to Cam 5 & 4
& Swab CPU #16 & rec 3 BBls oil & 5 BBls water.
SD

12-13-00 - Swab CPU 16 rec 4 BBls oil & 9 BBls water
RD Pu & move to CPU #53 Alpha & rec
3 BBls oil & 8 BBls water. SD

12-14-00 - sub ^{CP} 53 & rec 3 BB's oil & 10 BB's water.
RDPu & move to ^{CP} 451. Ru Pu & sub
rec 3 BB's oil & 9 BB's water. RDPu &
SD

12-15-00 - move to ^{CP} #32 Ru Pu & sub 4 BB's oil
& 4 BB's water. RDPu & move to ^{CP} 451
Ru Pu & sub 4 BB's oil & 4 BB's water
SD.

12-18-00 - RDPu & move to ^{CP} #1 Ru Pu & ~~sub~~
Pull Rods. Replace Broken rod & hang
back on started pumping. SD RDPu

12-19-00 - move ^{motor} ~~RDPu~~ off ^{CP} #32 to Cave #11
B. started to pump.

12-20-00 - move elec motor to State 2 started pumping
Move Pa to ^{CP} tank Battery. SD

12-21-00 - move electric motor to Cave St #3. start