

Submit I Copy To Appropriate District	State of New	v Mexico	Form C-103
Office	Energy, Minerals and		Revised July 18, 2013
<u>District 1</u> ~ (575) 393-6161 1625 N. French Dr., Hobbs, NM 88240 <u>District II</u> ~ (575) 748-1283			WELL API NO. 30-025-28422
811 S. First St., Artesia, NM 88210	OIL CONSERVAT		5. Indicate Type of Lease
<u>District III</u> - (505) 334-6178 1000 Rio Brazos Rd., Aztec, NM 87410	1220 South St.	. Francis Dr.	STATE STATE
District IV - (505) 476-3460	Santa Fe, N	M 87505	6. State Oil & Gas Lease No.
1220 S. St. Francis Dr., Santa Fe, NM			
87505 SUNDRY NOT (DO NOT USE THIS FORM FOR PROPO DIFFERENT RESERVOIR. USE "APPL PROPOSALS.) 1. Type of Well: Oil Well 2. Name of Operator	ICES AND REPORTS ON W DSALS TO DRILL OR TO DEEPEN	ELLS or plug back to a	7. Lease Name or Unit Agreement Name C.E. Brooks
DIFFERENT RESERVOIR. USE "APPL	CATION FOR PERMIT" (FORM C-	101) FOR SUCH	8. Well Number
Type of Well: Oil Well 🕅	Gas Well 🗍 Other	"UBRo	1
2. Name of Operator		~~0	COGRID Number
	Ring Energy, Inc.	JAN 20	328599
3. Address of Operator			
P.O. Box	11350 Midland, TX 79702	RECE	Knowles; Devonian, South
4. Well Location	· · · · · · · · · · · · · · · · · · ·	RECEIVED	
Unit Letter L :	1980 feet from the So	uth line and	660 feet from the West line
Section 18	Township 17-S	Range 39-E	NMPM County Lea
	11. Elevation (Show whethe		
		3668' GR	
12. Check	Appropriate Box to Indica		Report or Other Data
	N.9 L	•	•
	NTENTION TO:		SEQUENT REPORT OF:
TEMPORARILY ABANDON			ILLING OPNS. P AND A
PULL OR ALTER CASING		CASING/CEMEN	T JOB
DOWNHOLE COMMINGLE			
CLOSED-LOOP SYSTEM			_
OTHER:			<u> </u>
	ork). SEE RULE 19.15.7.14 N		d give pertinent dates, including estimated date mpletions: Attach wellbore diagram of
I. MIRU. ND WH, NU BOP. POOH w/ Prod Equip.			
2. Set CIBP @ 12,027'. Circ hole w/ MLF. Pressure test casing. Cap BP w/ 25sx H cmt to 11,927'			
3. Spot 25sx H cmt @ 10,762' - 10,662'			
4. Spot 25sx H cmt @ 8,			See Attached
	4' – 5,304'. WOC-Tag		Conditions of Approval
6. Spot 25sx cmt @ 5,06			Conditions of Approval
8. Perf/Sqz 50sx cmt @ 3,742' – 3,527'. WOC-Tag 9. Perf/Sqz 40sx cmt @ 2,450' – 2,285'. WOC-Tag			
 Perf/Circ 110sx cmt @ 2,450 - 2,265 . WOC-Tag Perf/Circ 110sx cmt @ 450' to surface. RDMO. Clean location. Cut off WH & anchors. Install DH marker 			
to: Tellene Tross entre		an iocation. Cut off with	e anchors, mistan Dri marker
A closed-loop system	will be used for all fluids from t	his wellbore and disposed (of required by OCD Rule 19.15.17
		•	
]		
Spud Date:	Rig Relea	ase Date:	
	;:	L	
I hereby certify that the information	above is true and complete to	the best of my knowledg	e and belief.
	2/	, ,	
SIGNATURE)	Agent – Basic Energy Se	ervicesDATE1/29/20
Type or print nameGreg Bry	ant E-mail address:		PHONE: 432-563-3355
For State Use Only	~		Λ
ADDROVED BY SALL I	TITLE (0	A DATE 1-29-20
APPROVED BY: New J	TITLE C		DATE -21-20
Conditions of Approval (if ony):			

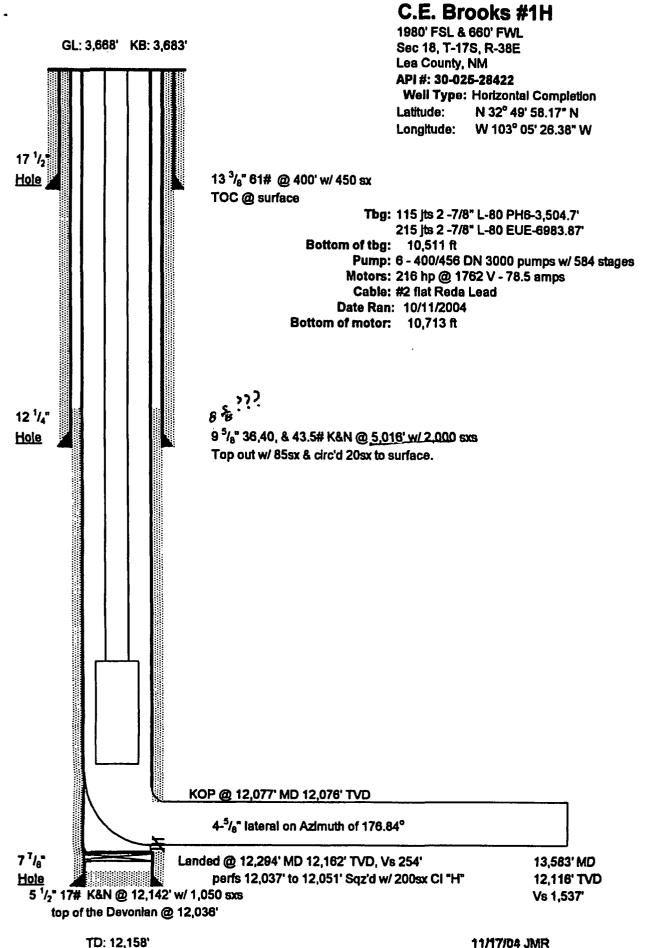

hortz

C_E_Brooks_1_sec_18_lea.xds

JMR

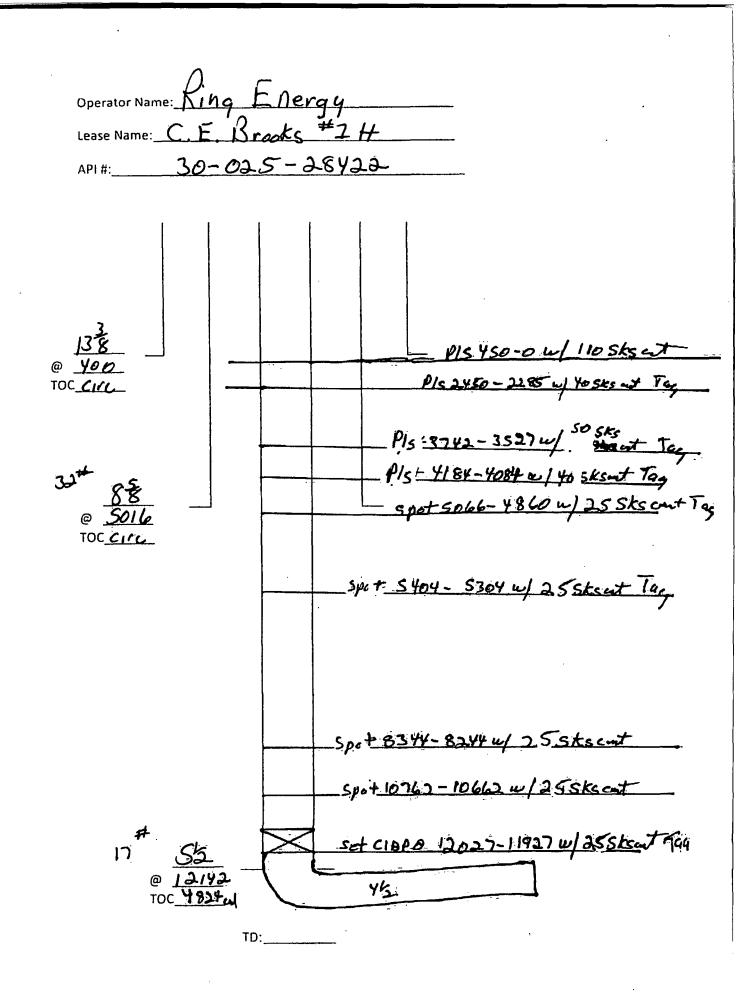

CONDITIONS FOR PLUGGING AND ABANDONMENT

OCD - Southern District

The following is a guide or checklist in preparation of a plugging program, this is not all inclusive and care must be exercised in establishing special plugging programs in unique and unusual cases, Notify NMOCD District Office I (Hobbs) at (575)-399-3221 at least 24 hours before beginning work. After MIRU rig will remain on well until it is plugged to surface. OCD is to be notified before rig down. Company representative will be on location during plugging procedures.

- 1. A notice of intent to plug and abandon a wellbore is required to be approved before plugging operations are conducted. A cement evaluation tool is required in order to ensure isolation of producing formations, protection of water and correlative rights. A cement bond log or other accepted cement evaluation tool is to be provided to the division for evaluation if one has not been previously run or if the well did not have cement circulated to surface during the original casing cementing job or subsequent cementing jobs. Insure all bradenheads have been exposed, identified and valves are operational prior to rig up.
- 2. Closed loop system is to be used for entire plugging operation. Upon completion, contents of steel pits are to be hauled to a permitted disposal location.
- 3. Trucking companies being used to haul oilfield waste fluids to a disposal commercial or private shall have an approved NMOCD C-133 permit. A copy of this permit shall be available in each truck used to haul waste products. It is the responsibility of the operator as well as the contractor, to verify that this permit is in place prior to performing work. Drivers shall be able to produce a copy upon request of an NMOCD Field inspector.
- 4. Filing a subsequent C-103 will serve as notification that the well has been plugged.
- 5. A final C-103 shall be filed (and a site inspection by NMOCD Inspector to determine if the location is satisfactorily cleaned, all equipment, electric poles and trash has been removed to Meet NMOCD standards) before bonding can be released.
- 6. If work has not begun within 1 Year of the approval of this procedure, an extension request must be file stating the reason the well has not been plugged.
- 7. Squeeze pressures are not to exceed 500 psi, unless approval is given by NMOCD.
- 8. Produced water will not be used during any part of the plugging operation.
- 9. Mud laden fluids must be placed between all cement plugs mixed at 25 sacks per 100 bbis of water.
- 10. All cement plugs will be a minimum of 100' in length or a minimum of 25 sacks of cement, whichever is greater. 50' of calculated cement excess required for inside casing plugs and 100% calculated cement excess required on outside casing plugs.
- 11. Class 'C' cement will be used above 7500 feet.
- 12, Class 'H' cement will be used below 7500 feet.
- 13. A cement plug is required to be set 50' above and 50' below, casing stubs, DV tools, attempted casing cut offs, cement tops outside casing, salt sections and anywhere the casing is perforated, these plugs require a 4 hour WOC and then will be tagged
- 14. All Casing Shoes Will Be Perforated 50' below shoe depth and Attempted to be Squeezed, cement needs to be 50' above and 50' Below Casing Shoe inside the Production Casing.

- 16. When setting the top out cement plug in production, intermediate and surface casing, wellbores should remain full at least 30 minutes after plugs are set
- 17. A CIBP is to be set within 100' of production perforations, capped with 100' of cement, WOC 4 hours and tag.
- 18. A CIBP with 35' of cement may be used in lieu of the 100' plug if set with a bailer. This plug will be placed within 100' of the top perforation, (WOC 4 hrs and tag).
- 19. No more than 3000' is allowed between cement plugs in cased hole and 2000' in open hole.
- 20. Some of the Formations to be isolated with cement plugs are: These plugs to be set to isolate formation tops
 - A) Fusselman
 - B) Devonian
 - C) Morrow
 - D) Wolfcamp
 - E)Bone Springs
 - F) Delaware
 - G) Any salt sections
 - H) Abo
 - I) Glorieta
 - J) Yates.
 - K) Potash--- (In the R-111-P Area (Potash Mine Area), a solid cement plug must be set across the salt section. Fluid used to mix the cement shall be saturated with the salts that are common to the section penetrated and in suitable proportions, not more than 3% calcium chloride (by weight of cement) will be considered the desired mixture whenever possible, WOC 4 hours and tag, this plug will be 50' below the bottom and 50' above the top of the Formation.
- 21. If cement does not exist behind casing strings at recommended formation depths, the casing can be cut and pulled with plugs set at recommended depths. If casing is not pulled, perforations will be shot and cement squeezed behind casing, WOC and tagged. These plugs will be set 50' below formation bottom to 50' above formation top inside the casing

DRY HOLE MARKER REQUIRMENTS

The operator shall mark the exact location of the plugged and abandoned well with a steel marker not less than four inches in diameter, 3' below ground level with a plate of at least %" welded to the top of the casing and the dry hole marker welded on the plate with the following information welded on the dry hole marker:

1. Operator name2. Lease and Well Number3. API Number4. Unit Letter5. QuarterSection (feet from the North, South, East or West)6. Section, Township and Range7. Plugging Date8. County(SPECIAL CASES)------AGRICULTURE OR PRARIE CHICKEN BREEDING AREAS

In these areas, a below ground marker is required with all pertinent information mentioned above on a plate, set 3' below ground level, a picture of the plate will be supplied to NMOCD for record, the exact location of the marker (longitude and latitude by GPS) will be provided to NMOCD (We typically require a current survey to verify the GPS)

SITE REMEDIATION DUE WITHIN ONE YEAR OF WELL PLUGGING COMPLETION