Submit 1 Copy To Appropriate District Office State of New Mexico	Form C-103
District I – (575) 393-6161 Energy, Minerals and Natural Resources	Revised July 18, 2013
1625 N. French Dr., Hobbs, NM 88240	WELL API NO.
District II - (575) 748-1283 811 S. First St. Artesia NM 88210 OIL CONSERVATION DIVISION	30-025-31114
811 S. First St., Artesia, NM 88210 District III - (505) 334-6178 1220 South St. Francis Dr.	5. Indicate Type of Lease
1000 Rio Brazos Rd., Aztec, NM 87410	STATE STATE
District IV - (505) 476-3460 Santa Fe, NM 87565	6. State Oil & Gas Lease No.
District IV - (505) 476-3460 1220 S. St. Francis Dr., Santa Fe, NM 87505	VB-698
1220 S. St. Francis Dr., Santa Fe, NM 87505 SUNDRY NOTICES AND REPORTS ON WELLS (DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUE BACK TO DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCHE PROPOSALS.) 1. Type of Well: Oil Well Gas Well Other 2. Name of Operator Mack Energy Corporation	7. Lease Name or Unit Agreement Name
(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PURE BACK TO	Dolphin State
DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH	8. Well Number #2
PROPOSALS.)	8. Well Mullibel #2
1. Type of Well: Off Well	0.000000
2. Name of Operator Mock Engage Comparation	9. OGRID Number
Mack Energy Corporation 3. Address of Operator	013837 10. Pool name or Wildcat
P.O. Box 960 Artesia,NM 88210	Wildcat San Andres
	White San Antres
4. Well Location	
Unit Letter J: 1980 feet from the S line and 1	980 feet from the <u>E</u> line
Section 16 Township 16S Range 33E	NMPM County Lea
11. Elevation (Show whether DR, RKB, RT, GR, etc.)	
4229' GR	
12. Check Appropriate Box to Indicate Nature of Notice,	Report or Other Data
12. Check rippropriate box to indicate statute of stotice,	Report of Other Data
NOTICE OF INTENTION TO: 17. SUB	SEQUENT REPORT OF:
PERFORM REMEDIAL WORK PLUG AND ABANDON REMEDIAL WOR	
TEMPORARILY ABANDON ☐ CHANGE PLANS ☐ COMMENCE DRI	_
	
PULL OR ALTER CASING DI MULTIPI E COMPI DI L'CASING/CEMEN'	T.IOR [7]
PULL OR ALTER CASING MULTIPLE COMPL CASING/CEMEN	T JOB
DOWNHOLE COMMINGLE	T JOB
DOWNHOLE COMMINGLE CLOSED-LOOP SYSTEM	r Job 🔲
DOWNHOLE COMMINGLE CLOSED-LOOP SYSTEM COTHER:	
DOWNHOLE COMMINGLE CLOSED-LOOP SYSTEM OTHER: 13. Describe proposed or completed operations. (Clearly state all pertinent details, and	d give pertinent dates, including estimated date
DOWNHOLE COMMINGLE CLOSED-LOOP SYSTEM COTHER:	d give pertinent dates, including estimated date
DOWNHOLE COMMINGLE CLOSED-LOOP SYSTEM COTHER: 13. Describe proposed or completed operations. (Clearly state all pertinent details, and of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Content of Starting and Proposed Work).	d give pertinent dates, including estimated date
DOWNHOLE COMMINGLE CLOSED-LOOP SYSTEM COTHER: 13. Describe proposed or completed operations. (Clearly state all pertinent details, and of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Content of Starting and Proposed Work).	d give pertinent dates, including estimated date npletions: Attach wellbore diagram of
DOWNHOLE COMMINGLE CLOSED-LOOP SYSTEM COTHER: CTHER: CTHER	d give pertinent dates, including estimated date npletions: Attach wellbore diagram of emt @ 4966-4766'.
DOWNHOLE COMMINGLE CLOSED-LOOP SYSTEM OTHER: 13. Describe proposed or completed operations. (Clearly state all pertinent details, and of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Comproposed completion or recompletion. 1. Set 5 ½" CIBP @ 4966'. Circ hole w/ MLF. Pressure test csg. Spot 25 sx completion.	d give pertinent dates, including estimated date npletions: Attach wellbore diagram of emt @ 4966-4766'.
DOWNHOLE COMMINGLE CLOSED-LOOP SYSTEM OTHER: 13. Describe proposed or completed operations. (Clearly state all pertinent details, and of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Comproposed completion or recompletion. 1. Set 5 ½" CIBP @ 4966". Circ hole w/ MLF. Pressure test csg. Spot 25 sx cs. 2. Perf & Sqz 50 sx cmt @ 4548-4348". WOC & Tag (8 5/8" Shoe & Yates) 3. Spot 25 sx cmt @ 2612-2412". WOC & Tag (B/Salt) 4. Spot 25 sx cmt @ 1658-1458". WOC & Tag (T/Salt)	d give pertinent dates, including estimated date npletions: Attach wellbore diagram of emt @ 4966-4766'.
DOWNHOLE COMMINGLE CLOSED-LOOP SYSTEM OTHER: 13. Describe proposed or completed operations. (Clearly state all pertinent details, and of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Comproposed completion or recompletion. 1. Set 5 ½" CIBP @ 4966'. Circ hole w/ MLF. Pressure test csg. Spot 25 sx cs. 2. Perf & Sqz 50 sx cmt @ 4548-4348'. WOC & Tag (8 5/8" Shoe & Yates) 3. Spot 25 sx cmt @ 2612-2412'. WOC & Tag (B/Salt) 4. Spot 25 sx cmt @ 1658-1458'. WOC & Tag (T/Salt) 5. Perf & Sqz 100 sx cmt @ 475' to surface.	d give pertinent dates, including estimated date npletions: Attach wellbore diagram of emt @ 4966-4766'.
DOWNHOLE COMMINGLE CLOSED-LOOP SYSTEM OTHER: 13. Describe proposed or completed operations. (Clearly state all pertinent details, and of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Comproposed completion or recompletion. 1. Set 5 ½" CIBP @ 4966". Circ hole w/ MLF. Pressure test csg. Spot 25 sx cs. 2. Perf & Sqz 50 sx cmt @ 4548-4348". WOC & Tag (8 5/8" Shoe & Yates) 3. Spot 25 sx cmt @ 2612-2412". WOC & Tag (B/Salt) 4. Spot 25 sx cmt @ 1658-1458". WOC & Tag (T/Salt)	d give pertinent dates, including estimated date npletions: Attach wellbore diagram of emt @ 4966-4766'.
DOWNHOLE COMMINGLE CLOSED-LOOP SYSTEM OTHER: 13. Describe proposed or completed operations. (Clearly state all pertinent details, and of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Comproposed completion or recompletion. 1. Set 5 ½" CIBP @ 4966'. Circ hole w/ MLF. Pressure test csg. Spot 25 sx cs. 2. Perf & Sqz 50 sx cmt @ 4548-4348'. WOC & Tag (8 5/8" Shoe & Yates) 3. Spot 25 sx cmt @ 2612-2412'. WOC & Tag (B/Salt) 4. Spot 25 sx cmt @ 1658-1458'. WOC & Tag (T/Salt) 5. Perf & Sqz 100 sx cmt @ 475' to surface.	d give pertinent dates, including estimated date npletions: Attach wellbore diagram of emt @ 4966-4766'.
DOWNHOLE COMMINGLE CLOSED-LOOP SYSTEM OTHER: 13. Describe proposed or completed operations. (Clearly state all pertinent details, and of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Comproposed completion or recompletion. 1. Set 5 ½" CIBP @ 4966'. Circ hole w/ MLF. Pressure test csg. Spot 25 sx cs. 2. Perf & Sqz 50 sx cmt @ 4548-4348'. WOC & Tag (8 5/8" Shoe & Yates) 3. Spot 25 sx cmt @ 2612-2412'. WOC & Tag (B/Salt) 4. Spot 25 sx cmt @ 1658-1458'. WOC & Tag (T/Salt) 5. Perf & Sqz 100 sx cmt @ 475' to surface.	d give pertinent dates, including estimated date npletions: Attach wellbore diagram of emt @ 4966-4766'.
DOWNHOLE COMMINGLE CLOSED-LOOP SYSTEM OTHER: 13. Describe proposed or completed operations. (Clearly state all pertinent details, and of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Comproposed completion or recompletion. 1. Set 5 ½" CIBP @ 4966'. Circ hole w/ MLF. Pressure test csg. Spot 25 sx cs. 2. Perf & Sqz 50 sx cmt @ 4548-4348'. WOC & Tag (8 5/8" Shoe & Yates) 3. Spot 25 sx cmt @ 2612-2412'. WOC & Tag (B/Salt) 4. Spot 25 sx cmt @ 1658-1458'. WOC & Tag (T/Salt) 5. Perf & Sqz 100 sx cmt @ 475' to surface.	d give pertinent dates, including estimated date npletions: Attach wellbore diagram of emt @ 4966-4766'.
DOWNHOLE COMMINGLE CLOSED-LOOP SYSTEM OTHER: 13. Describe proposed or completed operations. (Clearly state all pertinent details, and of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Comproposed completion or recompletion. 1. Set 5 ½" CIBP @ 4966'. Circ hole w/ MLF. Pressure test csg. Spot 25 sx cs. 2. Perf & Sqz 50 sx cmt @ 4548-4348'. WOC & Tag (8 5/8" Shoe & Yates) 3. Spot 25 sx cmt @ 2612-2412'. WOC & Tag (B/Salt) 4. Spot 25 sx cmt @ 1658-1458'. WOC & Tag (T/Salt) 5. Perf & Sqz 100 sx cmt @ 475' to surface.	d give pertinent dates, including estimated date npletions: Attach wellbore diagram of emt @ 4966-4766'.
DOWNHOLE COMMINGLE CLOSED-LOOP SYSTEM OTHER: 13. Describe proposed or completed operations. (Clearly state all pertinent details, and of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Comproposed completion or recompletion. 1. Set 5 ½" CIBP @ 4966'. Circ hole w/ MLF. Pressure test csg. Spot 25 sx ct. 2. Perf & Sqz 50 sx cmt @ 4548-4348'. WOC & Tag (8 5/8" Shoe & Yates) 3. Spot 25 sx cmt @ 2612-2412'. WOC & Tag (B/Salt) 4. Spot 25 sx cmt @ 1658-1458'. WOC & Tag (T/Salt) 5. Perf & Sqz 100 sx cmt @ 475' to surface. 6. Cut off well head, verify cmt to surface, weld on Dry Hole Marker.	d give pertinent dates, including estimated date npletions: Attach wellbore diagram of emt @ 4966-4766'.
DOWNHOLE COMMINGLE CLOSED-LOOP SYSTEM OTHER: 13. Describe proposed or completed operations. (Clearly state all pertinent details, and of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Comproposed completion or recompletion. 1. Set 5 ½" CIBP @ 4966'. Circ hole w/ MLF. Pressure test csg. Spot 25 sx cs. 2. Perf & Sqz 50 sx cmt @ 4548-4348'. WOC & Tag (8 5/8" Shoe & Yates) 3. Spot 25 sx cmt @ 2612-2412'. WOC & Tag (B/Salt) 4. Spot 25 sx cmt @ 1658-1458'. WOC & Tag (T/Salt) 5. Perf & Sqz 100 sx cmt @ 475' to surface.	d give pertinent dates, including estimated date npletions: Attach wellbore diagram of emt @ 4966-4766'.
DOWNHOLE COMMINGLE CLOSED-LOOP SYSTEM OTHER: 13. Describe proposed or completed operations. (Clearly state all pertinent details, and of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Comproposed completion or recompletion. 1. Set 5 ½" CIBP @ 4966'. Circ hole w/ MLF. Pressure test csg. Spot 25 sx ct. 2. Perf & Sqz 50 sx cmt @ 4548-4348'. WOC & Tag (8 5/8" Shoe & Yates) 3. Spot 25 sx cmt @ 2612-2412'. WOC & Tag (B/Salt) 4. Spot 25 sx cmt @ 1658-1458'. WOC & Tag (T/Salt) 5. Perf & Sqz 100 sx cmt @ 475' to surface. 6. Cut off well head, verify cmt to surface, weld on Dry Hole Marker.	d give pertinent dates, including estimated date npletions: Attach wellbore diagram of
DOWNHOLE COMMINGLE CLOSED-LOOP SYSTEM OTHER: 13. Describe proposed or completed operations. (Clearly state all pertinent details, and of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Comproposed completion or recompletion. 1. Set 5 ½" CIBP @ 4966'. Circ hole w/ MLF. Pressure test csg. Spot 25 sx cs. 2. Perf & Sqz 50 sx cmt @ 4548-4348'. WOC & Tag (8 5/8" Shoe & Yates) 3. Spot 25 sx cmt @ 2612-2412'. WOC & Tag (B/Salt) 4. Spot 25 sx cmt @ 1658-1458'. WOC & Tag (T/Salt) 5. Perf & Sqz 100 sx cmt @ 475' to surface. 6. Cut off well head, verify cmt to surface, weld on Dry Hole Marker. Spud Date: Rig Release Date:	d give pertinent dates, including estimated date impletions: Attach wellbore diagram of emt @ 4966-4766'.
DOWNHOLE COMMINGLE CLOSED-LOOP SYSTEM OTHER: 13. Describe proposed or completed operations. (Clearly state all pertinent details, and of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Comproposed completion or recompletion. 1. Set 5 ½" CIBP @ 4966'. Circ hole w/ MLF. Pressure test csg. Spot 25 sx ct. 2. Perf & Sqz 50 sx cmt @ 4548-4348'. WOC & Tag (8 5/8" Shoe & Yates) 3. Spot 25 sx cmt @ 2612-2412'. WOC & Tag (B/Salt) 4. Spot 25 sx cmt @ 1658-1458'. WOC & Tag (T/Salt) 5. Perf & Sqz 100 sx cmt @ 475' to surface. 6. Cut off well head, verify cmt to surface, weld on Dry Hole Marker.	d give pertinent dates, including estimated date impletions: Attach wellbore diagram of emt @ 4966-4766'.
DOWNHOLE COMMINGLE CLOSED-LOOP SYSTEM OTHER: 13. Describe proposed or completed operations. (Clearly state all pertinent details, and of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Comproposed completion or recompletion. 1. Set 5 ½" CIBP @ 4966'. Circ hole w/ MLF. Pressure test csg. Spot 25 sx cs. 2. Perf & Sqz 50 sx cmt @ 4548-4348'. WOC & Tag (8 5/8" Shoe & Yates) 3. Spot 25 sx cmt @ 2612-2412'. WOC & Tag (B/Salt) 4. Spot 25 sx cmt @ 1658-1458'. WOC & Tag (T/Salt) 5. Perf & Sqz 100 sx cmt @ 475' to surface. 6. Cut off well head, verify cmt to surface, weld on Dry Hole Marker. Spud Date: Rig Release Date:	d give pertinent dates, including estimated date impletions: Attach wellbore diagram of emt @ 4966-4766'.
DOWNHOLE COMMINGLE CLOSED-LOOP SYSTEM OTHER: 13. Describe proposed or completed operations. (Clearly state all pertinent details, and of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Comproposed completion or recompletion. 1. Set 5 ½" CIBP @ 4966'. Circ hole w/ MLF. Pressure test csg. Spot 25 sx ct. 2. Perf & Sqz 50 sx cmt @ 4548-4348'. WOC & Tag (8 5/8" Shoe & Yates) 3. Spot 25 sx cmt @ 2612-2412'. WOC & Tag (B/Salt) 4. Spot 25 sx cmt @ 1658-1458'. WOC & Tag (T/Salt) 5. Perf & Sqz 100 sx cmt @ 475' to surface. 6. Cut off well head, verify cmt to surface, weld on Dry Hole Marker. Spud Date: Rig Release Date:	d give pertinent dates, including estimated date impletions: Attach wellbore diagram of temt @ 4966-4766. Conditions of Absorbactions of Abso
DOWNHOLE COMMINGLE CLOSED-LOOP SYSTEM OTHER: 13. Describe proposed or completed operations. (Clearly state all pertinent details, and of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Comproposed completion or recompletion. 1. Set 5 ½" CIBP @ 4966'. Circ hole w/ MLF. Pressure test csg. Spot 25 sx ct. 2. Perf & Sqz 50 sx cmt @ 4548-4348'. WOC & Tag (8 5/8" Shoe & Yates) 3. Spot 25 sx cmt @ 2612-2412'. WOC & Tag (B/Salt) 4. Spot 25 sx cmt @ 1658-1458'. WOC & Tag (T/Salt) 5. Perf & Sqz 100 sx cmt @ 475' to surface. 6. Cut off well head, verify cmt to surface, weld on Dry Hole Marker. Spud Date: Rig Release Date: I hereby certify that the information above is true and complete to the best of my knowledge. SIGNATURE Abagaal Adventure. TITLE Regulatory	d give pertinent dates, including estimated date impletions: Attach wellbore diagram of time (a) 4966-4766. Conditions of Absorbacions of Abs
DOWNHOLE COMMINGLE CLOSED-LOOP SYSTEM OTHER: 13. Describe proposed or completed operations. (Clearly state all pertinent details, and of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Comproposed completion or recompletion. 1. Set 5 ½" CIBP @ 4966'. Circ hole w/ MLF. Pressure test csg. Spot 25 sx ct. 2. Perf & Sqz 50 sx cmt @ 4548-4348'. WOC & Tag (8 5/8" Shoe & Yates) 3. Spot 25 sx cmt @ 2612-2412'. WOC & Tag (B/Salt) 4. Spot 25 sx cmt @ 1658-1458'. WOC & Tag (T/Salt) 5. Perf & Sqz 100 sx cmt @ 475' to surface. 6. Cut off well head, verify cmt to surface, weld on Dry Hole Marker. Spud Date: Rig Release Date: I hereby certify that the information above is true and complete to the best of my knowledge. SIGNATURE Abagaal Adventure. TITLE Regulatory	d give pertinent dates, including estimated date impletions: Attach wellbore diagram of time (a) 4966-4766. Conditions of Absorbacions of Abs
DOWNHOLE COMMINGLE CLOSED-LOOP SYSTEM OTHER: 13. Describe proposed or completed operations. (Clearly state all pertinent details, and of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Comproposed completion or recompletion. 1. Set 5 ½" CIBP @ 4966'. Circ hole w/ MLF. Pressure test csg. Spot 25 sx cc. 2. Perf & Sqz 50 sx cmt @ 4548-4348'. WOC & Tag (8 5/8" Shoe & Yates) 3. Spot 25 sx cmt @ 2612-2412'. WOC & Tag (B/Salt) 4. Spot 25 sx cmt @ 1658-1458'. WOC & Tag (T/Salt) 5. Perf & Sqz 100 sx cmt @ 475' to surface. 6. Cut off well head, verify cmt to surface, weld on Dry Hole Marker. Spud Date: Rig Release Date: Title Regulatory Type or print name Abiogal Angerson E-mail address:	d give pertinent dates, including estimated date impletions: Attach wellbore diagram of temt @ 4966-4766. Conditions of Absorbactions of Abso
DOWNHOLE COMMINGLE CLOSED-LOOP SYSTEM OTHER: 13. Describe proposed or completed operations. (Clearly state all pertinent details, and of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Comproposed completion or recompletion. 1. Set 5 ½" CIBP @ 4966'. Circ hole w/ MLF. Pressure test csg. Spot 25 sx ct. 2. Perf & Sqz 50 sx cmt @ 4548-4348'. WOC & Tag (8 5/8" Shoe & Yates) 3. Spot 25 sx cmt @ 2612-2412'. WOC & Tag (B/Salt) 4. Spot 25 sx cmt @ 1658-1458'. WOC & Tag (T/Salt) 5. Perf & Sqz 100 sx cmt @ 475' to surface. 6. Cut off well head, verify cmt to surface, weld on Dry Hole Marker. Spud Date: Rig Release Date: I hereby certify that the information above is true and complete to the best of my knowledge. SIGNATURE Abagaal Adventure. TITLE Regulatory	d give pertinent dates, including estimated date impletions: Attach wellbore diagram of time (a) 4966-4766. Conditions of Albacian and belief. DATE 03/03/2020
DOWNHOLE COMMINGLE CLOSED-LOOP SYSTEM OTHER: 13. Describe proposed or completed operations. (Clearly state all pertinent details, and of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Comproposed completion or recompletion. 1. Set 5 ½" CIBP @ 4966'. Circ hole w/ MLF. Pressure test csg. Spot 25 sx ctg. 2. Perf & Sqz 50 sx cmt @ 4548-4348'. WOC & Tag (8 5/8" Shoe & Yates) 3. Spot 25 sx cmt @ 2612-2412'. WOC & Tag (B/Salt) 4. Spot 25 sx cmt @ 1658-1458'. WOC & Tag (T/Salt) 5. Perf & Sqz 100 sx cmt @ 475' to surface. 6. Cut off well head, verify cmt to surface, weld on Dry Hole Marker. Spud Date: Rig Release Date: Title Regulatory Type or print name Abiga: Anderson E-mail address: E-mail address:	d give pertinent dates, including estimated date impletions: Attach wellbore diagram of time (a) 4966-4766. Conditions of Abbroka, e and belief. DATE 03/03/2020 Jassaciales com PHONE: 432-580-7/6/
DOWNHOLE COMMINGLE CLOSED-LOOP SYSTEM OTHER: 13. Describe proposed or completed operations. (Clearly state all pertinent details, and of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Comproposed completion or recompletion. 1. Set 5 ½" CIBP @ 4966'. Circ hole w/ MLF. Pressure test csg. Spot 25 sx cc. 2. Perf & Sqz 50 sx cmt @ 4548-4348'. WOC & Tag (8 5/8" Shoe & Yates) 3. Spot 25 sx cmt @ 2612-2412'. WOC & Tag (B/Salt) 4. Spot 25 sx cmt @ 1658-1458'. WOC & Tag (T/Salt) 5. Perf & Sqz 100 sx cmt @ 475' to surface. 6. Cut off well head, verify cmt to surface, weld on Dry Hole Marker. Spud Date: Rig Release Date: Title Regulatory Type or print name Abiogal Angerson E-mail address:	d give pertinent dates, including estimated date impletions: Attach wellbore diagram of time (a) 4966-4766. Conditions of Absorbacions of Abs


Mack Ene	ergy	 	
Author:	BCM & Associates, INC		
Well Name	Dolphin State	Well No.	#2
Field	Wildcat San Andres	API#:	30-025-31114
County	Lea	Location:	Sec 16, T16S, R33E
State	NM		1980 FSL, 1980 FEL
Spud Date	8/1/2003		
GI	4229		

Description	O.D.	Grade	Weight	Depth	Hole	Cmt Sx	TOC
Surface Csg	13 3/8	J55	54.5#	428	17/2	400	0
Inter Csg	8 5/8	S80-J55	32#	4,498	11	1,700	0
Prod Csg	5 1/2	L80	17#	5,738	77/8	1,500	0

422¶		
	13 3/8 J55 54.5# CSG @ 428	
	8 5/8 S80~ 32# CSG @ 4,498	T/Salt-1608 B/Salt-2562 Vates - 2748 Queen - 3621 San Andres - 4428
	Perfs @ 5016.5-5302.5 5 1/2 L80 17# CSG @ 5,738	
	Plug 3 @ 9554-9654' w/ 35 sx Plug 2 @ 12408-12508' w/ 60 sx Plug 1 @ 12600-12700' w/ 35 sx Open hole- 7 7/8" @ 13700'	32.9199486 -103.6662064

Mack Ene				
Author:	BCM & Associates, INC			
Well Name	Dolphin State	Well No.	#2	
Field	Wildcat San Andres	API#:	30-025-31114	
County	Lea	Location:	Sec 16, T16S, R33E	
State	NM		1980 FSL, 1980 FEL	
Spud Date	8/1/2003		· · · · · · · · · · · · · · · · · · ·	
GI	4229			

		·					
Description	O.D.	Grade	Weight	Depth	Hote	Cmt Sx	TOC
Surface Csg	13 3/8	J55	54.5#	428	17 1/2	400	
Inter Csg	8 5/8	S80-J55	32#	4,498	11	1,700	0
Prod Csg	5 1/2	L80	17#	5,738	7 7/8	1,500	0

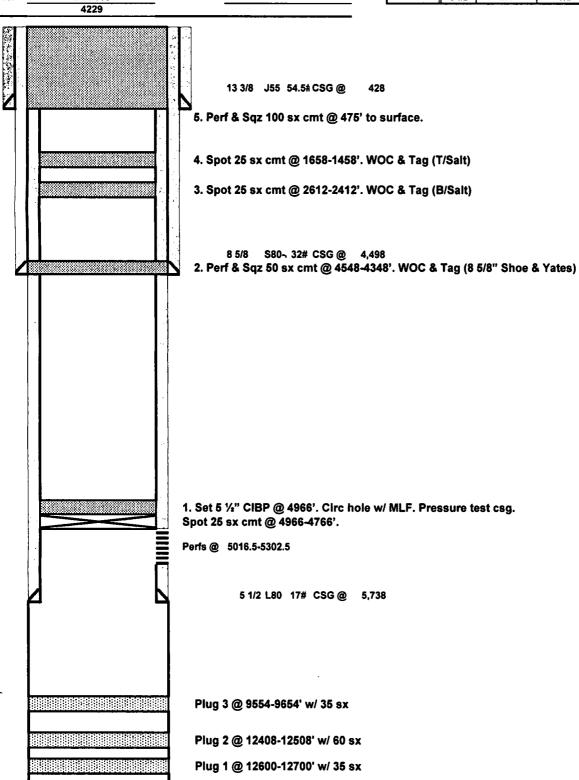

Open hole- 7 7/8" @ 13700'

CONDITIONS OF APPROVAL FOR PLUGGING AND ABANDONMENT OCD - Southern District

The following is a guide or checklist in preparation of a plugging program, this is not all inclusive and care must be exercised in establishing special plugging programs in unique and unusual cases, Notify NMOCD District Office I (Hobbs) at (575)-263-6633 at least 24 hours before beginning work. After MIRU rig will remain on well until it is plugged to surface. OCD is to be notified before rig down.

Company representative will be on location during plugging procedures.

- 1. A notice of intent to plug and abandon a wellbore is required to be approved before plugging operations are conducted. A cement evaluation tool is required in order to ensure isolation of producing formations, protection of water and correlative rights. A cement bond log or other accepted cement evaluation tool is to be provided to the division for evaluation if one has not been previously run or if the well did not have cement circulated to surface during the original casing cementing job or subsequent cementing jobs. Insure all bradenheads have been exposed, identified and valves are operational prior to rig up.
- 2. Closed loop system is to be used for entire plugging operation. Upon completion, contents of steel pits are to be hauled to a permitted disposal location.
- 3. Trucking companies being used to haul oilfield waste fluids to a disposal commercial or private- shall have an approved NMOCD C-133 permit. A copy of this permit shall be available in each truck used to haul waste products. It is the responsibility of the operator as well as the contractor, to verify that this permit is in place prior to performing work. Drivers shall be able to produce a copy upon request of an NMOCD Field inspector.
- 4. Filing a subsequent C-103 will serve as notification that the well has been plugged.
- 5. A final C-103 shall be filed (and a site inspection by NMOCD Inspector to determine if the location is satisfactorily cleaned, all equipment, electric poles and trash has been removed to Meet NMOCD standards) before bonding can be released.
- 6. If work has not begun within 1 Year of the approval of this procedure, an extension request must be file stating the reason the well has not been plugged.
- 7. Squeeze pressures are not to exceed 500 psi, unless approval is given by NMOCD.
- 8. Produced water will not be used during any part of the plugging operation.
- 9. Mud laden fluids must be placed between all cement plugs mixed at 25 sacks per 100 bbls of water.
- 10. All cement plugs will be a minimum of 100' in length or a minimum of 25 sacks of cement, whichever is greater. 50' of calculated cement excess required for inside casing plugs and 100% calculated cement excess required on outside casing plugs.
- 11. Class 'C' cement will be used above 7500 feet.
- 12. Class 'H' cement will be used below 7500 feet.
- 13. A cement plug is required to be set 50' above and 50' below, casing stubs, DV tools, attempted casing cut offs, cement tops outside casing, salt sections and anywhere the casing is perforated, these plugs require a 4 hour WOC and then will be tagged
- 14. All Casing Shoes Will Be Perforated 50' below shoe depth and Attempted to be Squeezed, cement needs to be 50' above and 50' Below Casing Shoe inside the Production Casing.
- 16. When setting the top out cement plug in production, intermediate and surface casing, wellbores should remain full at least 30 minutes after plugs are set
- 17. A CIBP is to be set within 100' of production perforations, capped with 100' of cement, WOC 4 hours and tag.
- 18. A CIBP with 35' of cement may be used in lieu of the 100' plug if set with a bailer. This plug will be placed within 100' of the top perforation, (WOC 4 hrs and tag).

- 19. No more than 3000' is allowed between cement plugs in cased hole and 2000' in open hole.
- 20. Some of the Formations to be isolated with cement plugs are: These plugs to be set to isolate formation tops
- A) Fusselman
- B) Devonian
- C) Morrow
- D) Wolfcamp
- E) Bone Springs
- F) Delaware
- G) Any salt sections
- H) Abo
- I) Glorieta
- J) Yates.
- K) Potash---(In the R-111-P Area (Potash Mine Area),

A solid cement plug must be set across the salt section. Fluid used to mix the cement shall be saturated with the salts that are common to the section penetrated and in suitable proportions, not more than 3% calcium chloride (by weight of cement) will be considered the desired mixture whenever possible, woe 4 hours and tag, this plug will be SO' below the bottom and 50' above the top of the Formation.

21. If cement does not exist behind casing strings at recommended formation depths, the casing can be cut and pulled with plugs set at recommended depths. If casing is not pulled, perforations will be shot and cement squeezed behind casing, woe and tagged. These plugs will be set SO' below formation bottom to 50' above formation top inside the casing

DRY HOLE MARKER REQ.UIRMENTS

The operator shall mark the exact location of the plugged and abandoned well with a steel marker not less than four inches in diameter, 3' below ground level with a plate of at least¼" welded to the top of the casing and the dry hole marker welded on the plate with the following information welded on the dry hole marker:

- 1. Operator name
- 2. Lease and Well Number
- 3. API Number
- 4. Unit letter
- 5. Quarter Section (feet from the North, South, East or West)
- 6. Section, Township and Range
- 7. Plugging Date
- 8. County

SPECIAL CASES ----AGRICULTURE OR PRARIE CHICKEN BREEDING AREAS

In these areas, a below ground marker is required with all pertinent information mentioned above on a plate, set 3' below ground level, a picture of the plate will be supplied to NMOCD for record, the exact location of the marker (longitude and latitude by GPS) will be provided to NMOCD (We typically require a current survey to verify the GPS)

SITE REMEDIATION DUE WITHIN ONE YEAR OF WELL PLUGGING COMPLETION

