

U.S. Department of the Interior BUREAU OF LAND MANAGEMENT

Sundry Print Report

Well Name: SAN JUAN 30-6 UNIT Well Location: T30N / R7W / SEC 27 / County or Parish/State: RIO

SWSW / 36.77895 / -107.56334 ARRIBA / NM

Well Number: 38 Type of Well: CONVENTIONAL GAS Allottee or Tribe Name:

WELL

Lease Number: NMSF079074 Unit or CA Name: SAN JUAN 30-6 UNIT Unit or CA Number:

--MV NMNM78420A

US Well Number: 3003909110 Well Status: Gas Well Shut In Operator: HILCORP ENERGY

COMPANY

Notice of Intent

Sundry ID: 2663839

Type of Submission: Notice of Intent

Type of Action: Plug and Abandonment

Date Sundry Submitted: 03/24/2022 Time Sundry Submitted: 01:49

Date proposed operation will begin: 04/07/2022

Procedure Description: Hilcorp Energy Company requests permission to P&A the subject well per the attached procedures, current and proposed wellbore schematics. The Pre-Disturbance Site Visit was held on 2/23/22 with Roger Herrera/BLM. The Re-Vegetation Plan is attached. A closed loop system will be used.

Surface Disturbance

Is any additional surface disturbance proposed?: No

NOI Attachments

Procedure Description

 $San_Juan_30_6_Unit_38_PA_Procedure_for_NOI_20220324134900.pdf$

SJ_30_6_38_Final_Reclamation_Plan_20220324134859.pdf

eived by OCD: 5/11/2022 9:51:02 AM Well Name: SAN JUAN 30-6 UNIT

Well Location: T30N / R7W / SEC 27 /

SWSW / 36.77895 / -107.56334

County or Parish/State: Rige 2 of

ARRIBA / NM

Well Number: 38

Type of Well: CONVENTIONAL GAS

Allottee or Tribe Name:

Lease Number: NMSF079074

Unit or CA Name: SAN JUAN 30-6 UNIT Unit or CA Number:

NMNM78420A

US Well Number: 3003909110

Well Status: Gas Well Shut In

Operator: HILCORP ENERGY

COMPANY

Zip:

Conditions of Approval

Additional

General_Requirement_PxA_20220511085945.pdf

2663839_NOIA_38_3003909110_KR_05112022_20220511085932.pdf

30N07W27MKmv_San_Juan_30_6_Unit_38_20220510085717.pdf

Operator

I certify that the foregoing is true and correct. Title 18 U.S.C. Section 1001 and Title 43 U.S.C. Section 1212, make it a crime for any person knowingly and willfully to make to any department or agency of the United States any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction. Electronic submission of Sundry Notices through this system satisfies regulations requiring a

Operator Electronic Signature: KANDIS ROLAND Signed on: MAR 24, 2022 01:49 PM

Name: HILCORP ENERGY COMPANY

Title: Operation Regulatory Tech Street Address: 382 Road 3100

City: Farmington State: NM

Phone: (505) 599-3400

Email address: kroland@hilcorp.com

Field

Representative Name:

Street Address:

City: State:

Phone:

Email address:

BLM Point of Contact

Signature: Kenneth Rennick

BLM POC Name: KENNETH G RENNICK BLM POC Title: Petroleum Engineer

BLM POC Phone: 5055647742 BLM POC Email Address: krennick@blm.gov

Disposition: Approved Disposition Date: 05/11/2022

Page 2 of 2



P&A Procedure

General Information					
Well Name	San Juan 30-6 #38	Date:	3/24/2022		
API:	30-039-09110	AFE#			
Field:	San Juan	County	Rio Arriba		
Status:	Well is ACOI				
Subject:	Permanently P&A wellbore				
By:	M. Wissing				

Well Data

Surface Casing: 9-5/8" 36# H-40 at 218'

Intermediate Casing: 5-1/2" J-55 15.5# at 5,440'

Production Casing: 2-3/8" 6.4# J-55 at 6,133'

Production Tubing: 1.66" J-55 2.3# at 6,033'

Current Perforations: 4,700'-4,730'; 5,780'-6,091'

Current PBTD: 6,113' (Cement)

CBL: 2-7/8" csg 6/2/1994

SICP = 0 psig; SIBP: 0 psi

Hold PJSM prior to begin all operations. Properly document all operations via the JSA process. Ensure that all personnel onsite abide by HEC safety protocol, including PPE, housekeeping, and standard guidelines. Verify cathodic protection is off and wellhead instrumentation is properly disconnected from the wellhead. Comply with all NMOCD, BLM, and HEC safety and environmental regulations. Verify there is no H2S present prior to beginning operations. If any H2S is present, take the necessary actions to ensure that the location is safe prior to beginning operations. Observe and record pressures across all strings daily, prior to beginning operations.

Remember to notify NMOCD & BLM 24 hours prior to starting operations on location. This procedure is contingent upon P&A sundry approval by the NMOCD & BLM.

P&A Rig Procedure: San Juan 30-6 Unit #38


- 1. MIRU P&A rig and equipment. Record pressures on all strings.
- 2. NU BOP & test. Release tbg hanger and TOOH with 1.66" production tbg.
- 3. RU E-line and MU 2-7/8" GR. RIH and clear csg to 4,675'. POOH.
- 4. MU 4.5" CICR and RIH. Set CICR at 4,650'. (Set with 1-1/4" work string or on E-line)
 - a. Top Mesa Verde perf at 4,700';
- 5. RIH with 1-1/4" work string.
- 6. Load wellbore full of water and pressure test the 2-7/8" casing to 500 psi to verify CICR is set and csg integrity.
- 7. Plug #1 (Top Mesa Verde perf at 4,700'): RU cementers and pump a 50' balanced cmt plug inside the 2-7/8" csg above CICR from 4,600'-4,650', using 0.6 bbls (3 sx) of 15.8+ ppg Class G cmt.
 - a. Use E-line bailer for cmt plug if needed.
- 8. RU E-line and DP perforation charges. RIH and perf 2-7/8" & 5-1/2" casings at 3,840'. Establish an injection rate into perforations. Attempt circulation up 2-7/8" x 5-1/2" annulus if able.
- 9. Plug #2 (PC top at 3,790', FRC top at 3,520'): RU cementers and pump a 370' inside/outside cmt plug inside the 2-7/8" csg and outside 5-1/2" csg from 3,470'-3,840', using 25.4 bbls (124 sx) of 15.8+ ppg Class G cmt.
 - a. If cement plug is pumped in early part of the day, set 2-7/8" CICR at 3,790'.
 - b. If cement plug is pumped at end of day, no CICR will be used. WOC overnight.
 - 10. RU E-line and DP perforation charges. RIH and perf 2-7/8" & 5-1/2" casings at 3,012'. Establish an injection rate into perforations. Attempt circulation up 2-7/8" x 5-1/2" annulus if able.
- 11. Plug #3 (Kirtland top at 2,962'; Ojo top at 2,756'): RU cementers and pump a 306' inside/outside cmt plug inside the 2-7/8" csg & outside 5-1/2" csg from 2,706'-3,012', using 21.3 bbls (104 sx) of 15.8+ ppg Class G cmt.
 - a. If cement plug is pumped in early part of the day, set 2-7/8" CICR at 2,926'.



- b. If cement plug is pumped at end of day, no CICR will be used. WOC overnight.
- 12. RU E-line and DP perforation charges. RIH and perf 2-7/8" & 5-1/2" casings at 898'. Establish an injection rate into perforations. Attempt circulation up 2-7/8" x 5-1/2" annulus if able.
- 13. Plug #3 (Nacimiento at 848'): RU cementers and pump a 100' inside/outside cmt plug inside the 2-7/8" csg, 2-7/8"x 5-1/2" annulus, & outside 5-1/2" csg from 798' 898', using 8.9 bbls (44 sx) of 15.8+ ppg Class G cmt.
 - a. If cement plug is pumped in early part of the day, set 2-7/8" CICR at 848'.
 - b. If cement plug is pumped at end of day, no CICR will be used. WOC overnight.
- 14. RU E-line and MU DP charges. RIH and perforate 2-7/8" csg & 5-1/2" csg at 268'. POOH. Establish circulation rate into perforations back to surface. Attempt circulation up 2-7/8" x 5-1/2" annulus if able.
- 15. Plug #4 (Surface & Surface casing shoe at 218'): RU cementers and pump a 268' cmt plug inside the 2-7/8" csg, 2-7/8"x 5-1/2" annulus, & outside 5-1/2" csg from 0' 268', using 18.6 bbls (91 sx) of 15.8+ ppg Class G cmt.
- 16. Verify all pressures on all strings are at 0 psi.
- 17. ND BOP. Tag cmt and top off wellbore as needed. Cutoff wellhead at surface and weld on P&A marker.
- 18. RDMO P&A rig.




CURRENT WELLBORE SCHEMATIC

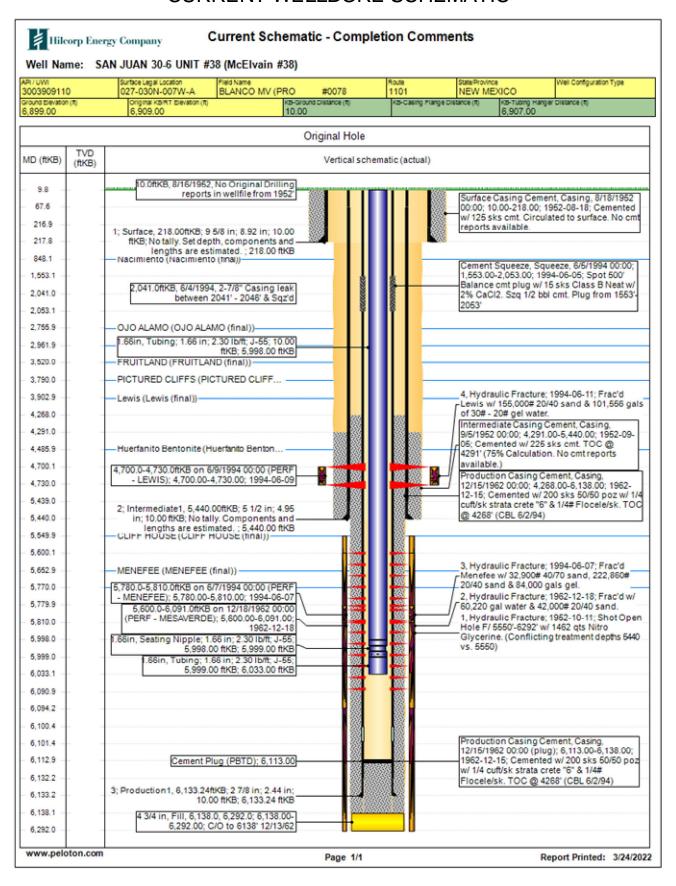



PROPOSED WELLBORE SCHEMATIC

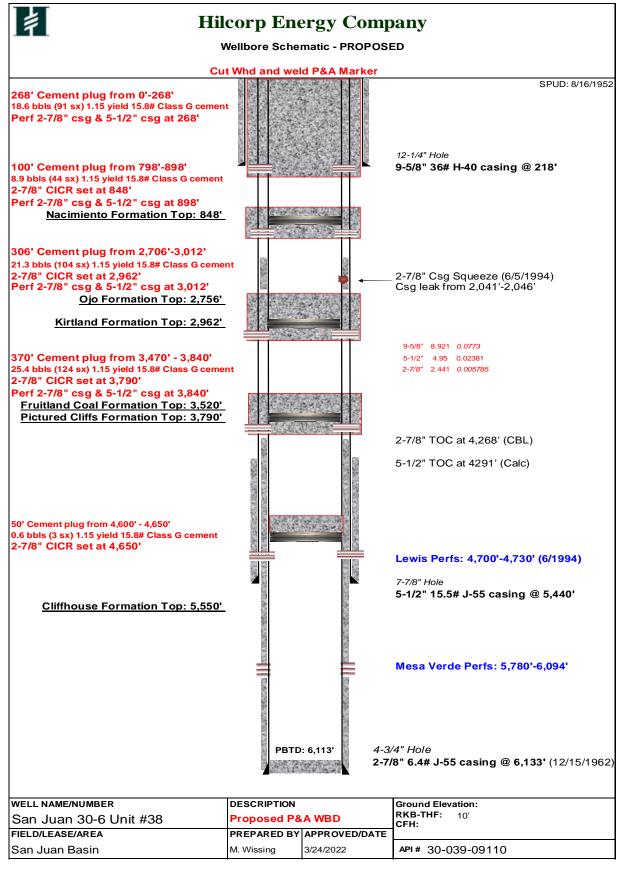



Hilcorp Energy

San Juan 30-6 Unit 38

36.77901, -107.56527


API-30-039-09110

30N-07W SEC 27

Final Reclamation Plan

Onsite Completed on 2/23/2022 with Roger Herrera

- 1. Pick up and remove all trash, metal, cable, and any foreign debris within 100' of location.
- 2. Remove anchors.
- 3. Strip equipment off of facility.
- 4. Remove piping and cables.
- 5. Enterprise to remove meter run and piping back to dog leg.
- 6. Leave existing road on northwest side of location that enables access producing location.
- 7. Place gravel from pit and tank area on the road entering location.
- 8. Use fill from south of location to fill pit.
- 9. Rip compacted soil.
- 10. Re-seed all disturbed areas. Drill where applicable at rate per acre defined by seed mix, and broadcast seed and harrow, at double the rate, all other disturbed areas. Pinion/Juniper seed mix will be used.

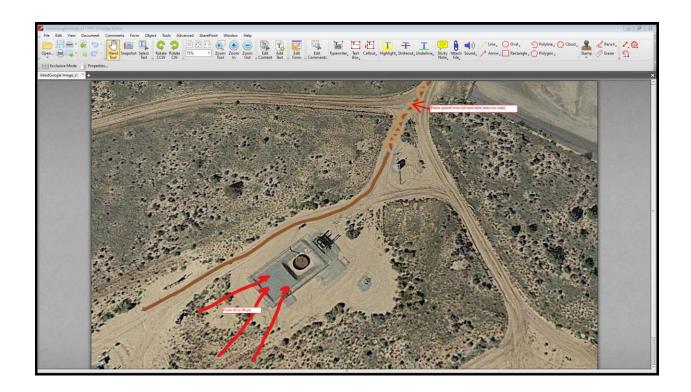

GENERAL REQUIREMENTS FOR PERMANENT ABANDONMENT OF WELLS ON FEDERAL AND INDIAN LEASES FARMINGTON FIELD OFFICE

- 1.0 The approved plugging plans may contain variances from the following <u>minimum general</u> requirements.
 - 1.1 Modification of the approved plugging procedure is allowed only with the prior approval of the Authorized Officer, Farmington Field Office.
 - 1.2 Requirements may be added to address specific well conditions.
- 2.0 Materials used must be accurately measured. (densometer/scales)
- 3.0 A tank or lined pit must be used for containment of any fluids from the wellbore during plugging operations and all pits are to be fenced with woven wire. These pits will be fenced on three sides and once the rig leaves location, the fourth side will be fenced.
 - 3.1 Pits are not to be used for disposal of any hydrocarbons. If hydrocarbons are present in the pit, the fluids must be removed prior to filling in.
- 4.0 All cement plugs are to be placed through a work string. Cement may be bull-headed down the casing with prior approval. Cement caps on top of bridge plugs or cement retainers may be placed by dump bailer.
 - 4.1 The cement shall be as specified in the approved plugging plan.
 - 4.2 All cement plugs placed inside casing shall have sufficient volume to fill a minimum of 100' of the casing, or annular void(s) between casings, plus an excess volume sufficient to provide for 50 linear feet of fill above the plug.
 - 4.3 Surface plugs may be no less than 50' in length.
 - 4.4 All cement plugs placed to fill annular void(s) between casing and the formation shall be of sufficient volume to fill a minimum of 100' of the annular space plus 100% excess, calculated using the bit size, or 100' of annular capacity, determined from a caliper log, plus an excess volume sufficient to provide for 50 linear feet of fill above the plug.
 - 4.5 All cement plugs placed to fill an open hole shall be of sufficient volume to fill a minimum of 100' of hole, as calculated from a caliper log, plus an excess volume sufficient to provide for 50 linear feet of fill above the plug. In the absence of a caliper log, an excess of 100% shall be required.
 - 4.6 A cement bond log or other accepted cement evaluation tool is required to be run if one had not been previously ran or cement did not circulate to surface during the original casing cementing job or subsequent cementing jobs.

2

- 5.1 The top of any cement plug verified by tagging must be at or above the depth specified in the approved plan, without regard to any excess.
- 5.2 Testing will not be required for any cement plug that is mechanically contained by use of a bridge plug and/or cement retainer, if casing integrity has been established.
- 5.3 Any cement plug which is the only isolating medium, for a fresh water interval or a zone containing a prospectively valuable deposit of minerals, shall be tested by tagging.
- 5.4 If perforations are required below the surface casing shoe, a 30 minute minimum wait time will be required to determine if gas and/or water flows are present. If flow is present, the well will be shut-in for a minimum of one hour and the pressure recorded. Short or long term venting may be necessary to evacuate trapped gas. If only a water flow occurs with no associated gas, shut well in and record the pressures. Contact the Engineer as it may be necessary to change the cement weight and additives.
- 6.0 Before setting any cement plugs the hole needs to be rolled. All wells are to be controlled by means of a fluid that is to be of a weight and consistency necessary to stabilize the wellbore. This fluid shall be left in place as filler between all plugs.
 - 6.1 Drilling mud may be used as the wellbore fluid in open hole plugging operations.
 - 6.2 The wellbore fluid used in cased holes shall be of sufficient weight to balance known pore pressures in all exposed formations.
- 7.0 A blowout preventer and related equipment (BOPE) shall be installed and tested prior to working in a wellbore with any exposed zone(s); (1) that are over pressured, (2) where the pressures are unknown, or (3) known to contain H_2S .
- 8.0 Within 30 days after plugging work is completed, file a Sundry Notice, Subsequent Report of Abandonment (Form 3160-5), five copies, with the Field Manager, Bureau of Land Management, 6251 College Blvd., Suite A, Farmington, NM 87402. The report should show the manner in which the plugging work was carried out, the extent, by depth(s), of cement plugs placed, and the size and location, by depth(s), of casing left in the well. Show date well was plugged.
- 9.0 All permanently abandoned wells are to be marked with a permanent monument as specified in 43 CFR 3162.6(d). Unless otherwise approved.
- 10.0 If this well is located in a Specially Designated Area (SDA), compliance with the appropriate seasonal closure requirements will be necessary.

All of the above are minimum requirements. Failure to comply with the above conditions of approval may result in an assessment for noncompliance and/or a Shut-in Order being issued pursuant to 43 CFR 3163.1. You are further advised that any instructions, orders or decisions issued by the Bureau of Land Management are subject to administrative review pursuant to 43 CFR 3165.3 and appeal pursuant to 43 CFR 3165.4 and 43 CFR 4.700.

(October 2012 Revision)

UNITED STATES DEPARTMENT OF THE INTERIOR BUREAU OF LAND MANAGEMENT FARMINGTON DISTRICT OFFICE

6251 COLLEGE BLVD. FARMINGTON, NEW MEXICO 87402

AFMSS 2 Sundry ID 2663839

Attachment to notice of Intention to Abandon

Well: San Juan 30-6 Unit 38

CONDITIONS OF APPROVAL

- 1. Plugging operations authorized are subject to the attached "General Requirements for Permanent Abandonment of Wells on Federal and Indian Lease."
- 2. The following modifications to your plugging program are to be made:
- a) Add a plug to cover the Mesaverde perfs (5780') and Cliff House formation top (5550').
- 3. Farmington Office is to be notified at least 24 hours before the plugging operations commence at (505) 564-7750.

You are also required to place cement excesses per 4.2 and 4.4 of the attached General Requirements.

Office Hours: 7:45 a.m. to 4:30 p.m.

K. Rennick 5/11/2022

BLM FLUID MINERALS P&A Geologic Report

Date Completed: 05/10/2022

Well No. San Juan 30-6 Unit #38 (A	Location	990	FSL	&	990	FWL	
Lease No. NMSF-079074	Sec. 27	T30N			R07W		
Operator Hilcorp Energy Company		County	Rio Arriba		State	New Mexico	
Total Depth 6292'	PBTD 6113'	Formation	Mesaverde				
Elevation (GL) 6899'	Elevation (KI	Elevation (KB) 6909'					

Geologic Formations	Est. Top	Est. Bottom	Log Top	Log Bottom	Remarks
San Jose Fm			Surface	852	Surface/possible freshwater sands
Nacimiento Fm			852	2756	Possible fresh/usable water
Ojo Alamo Ss			2756	2962	Aquifer (possible freshwater)
Kirtland Shale			2962	3520	
Fruitland Fm			3520	3790	Coal/Gas/Water
Pictured Cliffs Ss			3790	3902	Probable Gas
Lewis Shale			3902	4810	
Chacra			4810	5550	
Cliff House Ss			5550	5653	Water/gas
Menefee Fm			5653	5770	Coal/Ss/Water/gas
Point Lookout Ss			5770	PBTD	Probable water/gas
Mancos Shale					
Gallup					
Greenhorn					
Graneros Shale					
Dakota Ss					
Morrison Formation					

Remarks:

P & A

Add a plug to cover the Mesaverde perfs (5780') and Cliff House formation top (5550').

Reference Well:
1) Formation Tops
Same

- The plugs proposed in the P&A procedure will adequately protect any freshwater sands in this well bore.
- Lewis perfs 4700' 4730'.
- Mesaverde perfs 5780' 6094'.

District I
1625 N. French Dr., Hobbs, NM 88240
Phone: (575) 393-6161 Fax: (575) 393-0720

District II 811 S. First St., Artesia, NM 88210 Phone: (575) 748-1283 Fax: (575) 748-9720

District III 1000 Rio Brazos Rd., Aztec, NM 87410 Phone:(505) 334-6178 Fax:(505) 334-6170

1220 S. St Francis Dr., Santa Fe, NM 87505 Phone:(505) 476-3470 Fax:(505) 476-3462

State of New Mexico Energy, Minerals and Natural Resources Oil Conservation Division 1220 S. St Francis Dr. **Santa Fe, NM 87505**

CONDITIONS

Action 105937

CONDITIONS

Operator:	OGRID:
HILCORP ENERGY COMPANY	372171
1111 Travis Street	Action Number:
Houston, TX 77002	105937
	Action Type:
	[C-103] NOI Plug & Abandon (C-103F)

CONDITIONS

Created By	Condition	Condition Date
kpickford	CBL required	5/13/2022
kpickford	Notify NMOCD 24 Hours Prior to beginning operations	5/13/2022
kpickford	Adhere to BLM approved COAs and plugs. See GEO report.	5/13/2022