ceived by Copy To	Appropriate District	S	tate of New M	lexico		Form C-103
Office District I – (575) 3	393-6161	Energy, M	linerals and Na	tural Resources		Revised July 18, 2013
	r., Hobbs, NM 88240	2,7			WELL API NO.	
<u>District II</u> – (575)		OII COI	NSERVATIO	N DIVISION		15-05020
811 S. First St., As <u>District III</u> – (505)					5. Indicate Type of	
1000 Rio Brazos F	Rd., Aztec, NM 87410		0 South St. Fr		STATE 🔀	FEE
District IV – (505)	) 476-3460	S	Santa Fe, NM	87505	6. State Oil & Gas	Lease No.
	s Dr., Santa Fe, NM				E	E-5300
87505	CLINIDDA NO	OTICES AND REPO	DTC ON WELL	C	7 Laga Nama ar l	Unit Agreement Name
(DO NOT USE T		POSALS TO DRILL OF				onstate
\		PLICATION FOR PERM				
PROPOSALS.)					8. Well Number	#2
1. Type of We		Gas Well 🔲 C	Other			
2. Name of O <sub>1</sub>		0			9. OGRID Number	
2 4 11 6		over Operating, LLO	C			71484
3. Address of		. D1 G. 200 D	11 TX 75050		10. Pool name or V	
		ston Rd., Ste. 300 Da	allas, 1X /5252		(28509) Grayburg J	Jackson; SR-Q-G-SA
4. Well Locati	ion					
Unit I	Letter <u>E</u>	: <u>1980</u> feet from	the <u>North</u>	line and <u>660</u>	feet from the	West line
Section	on 36	Townsl	 hip		NMPM	County Eddy
			1	R, RKB, RT, GR, etc.)		
		11. Elevation (		8' GL		
			,	<u> </u>		
	10 01 1			T. CAT.: D	. 0.1 D	
	12. Check	Appropriate Box	x to Indicate N	Vature of Notice, R	eport or Other Da	ata
	NOTICE OF	INITENITIONI TO	٦.	l CLID		ODT OF:
	_	INTENTION TO			SEQUENT REP	
	EMEDIAL WORK [		· <del></del>	REMEDIAL WORK		ALTERING CASING
TEMPORARIL		CHANGE PLA		COMMENCE DRIL		P AND A
PULL OR ALT	=	MULTIPLE CO	MPL	CASING/CEMENT	JOB 📙	
DOWNHOLE (					Notify OCD 24 hrs	s. prior to any work
CLOSED-LOO	P SYSTEM [				done	
				l OTHER:		
OTHER:	1	1 . 1	(Cl. 1 + 11			. 1 1' .' . 1 1 .
13. Describe				pertinent details, and g		including estimated date
13. Describe of starting	ng any proposed w	vork). SEE RULE 1				
13. Describe of starting		vork). SEE RULE 1		pertinent details, and g		
13. Describe of startin proposed	ng any proposed w d completion or re	vork). SEE RULE 1	9.15.7.14 NMA	pertinent details, and g C. For Multiple Comp	bletions: Attach well	bore diagram of
13. Describe of startin proposed	ng any proposed w d completion or re	vork). SEE RULE 1	9.15.7.14 NMA	pertinent details, and g	bletions: Attach well	bore diagram of
13. Describe of startin proposed	ng any proposed w d completion or re	vork). SEE RULE 1	9.15.7.14 NMA	pertinent details, and g C. For Multiple Comp	bletions: Attach well	bore diagram of
13. Describe of startin proposed  1. Prep loc. N down.	ng any proposed we dompletion or re	vork). SEE RULE 1 ecompletion.  7 rods and pump	9.15.7.14 NMA	pertinent details, and g C. For Multiple Comp ND WH. NU BOP.	Release TAC, PO	bore diagram of
13. Describe of startin proposed  1. Prep loc. N down.  2. RU Wirelin	ng any proposed we dompletion or remains white MIRU, POOH w/	vork). SEE RULE 1 completion.  rods and pump	9.15.7.14 NMA	pertinent details, and g C. For Multiple Comp ND WH. NU BOP.	Release TAC, PO	bore diagram of
13. Describe of startin proposed  1. Prep loc. N down.  2. RU Wirelin	ng any proposed we dompletion or remains white MIRU, POOH w/	vork). SEE RULE 1 completion.  rods and pump	9.15.7.14 NMA	pertinent details, and g C. For Multiple Comp ND WH. NU BOP.	Release TAC, PO	bore diagram of
13. Describe of startin proposed  1. Prep loc. N down.  2. RU Wirelin  3. Set 5-1/2"	ng any proposed we dompletion or remains white MIRU, POOH w/	work). SEE RULE 1 ccompletion.  Trods and pump  Te ring.  w/35' cmt, circ w	9.15.7.14 NMA	pertinent details, and g C. For Multiple Comp ND WH. NU BOP.	Release TAC, PO	bore diagram of
13. Describe of startin proposed  1. Prep loc. N down.  2. RU Wirelin  3. Set 5-1/2"  4. 40 sx 2113	ng any proposed we dompletion or remaining any proposed with the distribution of the management of the	work). SEE RULE 1 completion.  Trods and pump  Ee ring.  W/35' cmt, circ w  TAG.	9.15.7.14 NMA , laying down, v/ P&A mud, t	pertinent details, and g C. For Multiple Comp ND WH. NU BOP. Run CBI	Release TAC, PO	bore diagram of
13. Describe of starting proposed.  1. Prep loc. No down.  2. RU Wireling. 3. Set 5-1/2" 4. 40 sx 2113 5. 40 sx 754'	ng any proposed w d completion or re MIRU, POOH w/ ne, RIH w/ gaug CIBP @ 3674' v 3' – 2213', P.S. & T	work). SEE RULE 1 ccompletion.  Trods and pump  Te ring.  W/35' cmt, circ w  TAG.  80 sx cm	9.15.7.14 NMA , laying down, v/ P&A mud, t nt 754' - 962' -	pertinent details, and g C. For Multiple Comp ND WH. NU BOP. Run CBI rest to 500 psi. WC	Release TAC, PO	bore diagram of
13. Describe of starting proposed.  1. Prep loc. No down.  2. RU Wireling. 3. Set 5-1/2" 4. 40 sx 2113 5. 40 sx 754'	ng any proposed w d completion or re MIRU, POOH w/ ne, RIH w/ gaug CIBP @ 3674' v 3' – 2213', P.S. & T	work). SEE RULE 1 completion.  Trods and pump  Ee ring.  W/35' cmt, circ w  TAG.	9.15.7.14 NMA , laying down, v/ P&A mud, t nt 754' - 962' -	pertinent details, and g C. For Multiple Comp ND WH. NU BOP. Run CBI rest to 500 psi. WC	Release TAC, PO	bore diagram of
13. Describe of startin proposed  1. Prep loc. No down.  2. RU Wirelin  3. Set 5-1/2"  4. 40 sx 2113  5. 40 sx 754'  6. 100 sx 469	ng any proposed we discompletion or reduced with the proposed with	work). SEE RULE 1 ccompletion.  Trods and pump ge ring.  w/35' cmt, circ was TAG.  AG.  80 sx cm	9.15.7.14 NMA , laying down, v/ P&A mud, t nt 754' - 962' - nt to surface. \	pertinent details, and good. For Multiple Composition ND WH. NU BOP.  Run CBluest to 500 psi. WC  T Salt Verify ND BOP.	Release TAC, POO  to surface.  C & TAG.	bore diagram of
13. Describe of startin proposed  1. Prep loc. No down.  2. RU Wirelin  3. Set 5-1/2"  4. 40 sx 2113  5. 40 sx 754'  6. 100 sx 469	ng any proposed we discompletion or reduced with the proposed with	work). SEE RULE 1 ccompletion.  Trods and pump ge ring.  w/35' cmt, circ was TAG.  AG.  80 sx cm	9.15.7.14 NMA , laying down, v/ P&A mud, t nt 754' - 962' - nt to surface. \	pertinent details, and g C. For Multiple Comp ND WH. NU BOP. Run CBI rest to 500 psi. WC	Release TAC, POO  to surface.  C & TAG.	bore diagram of
13. Describe of startin proposed  1. Prep loc. No down.  2. RU Wirelin  3. Set 5-1/2"  4. 40 sx 2113  5. 40 sx 754'  6. 100 sx 469	ng any proposed we discompletion or reduced with the proposed with	work). SEE RULE 1 ccompletion.  Trods and pump ge ring.  w/35' cmt, circ was TAG.  AG.  80 sx cm	9.15.7.14 NMA , laying down, v/ P&A mud, t nt 754' - 962' - nt to surface. \	pertinent details, and good. For Multiple Composition ND WH. NU BOP.  Run CBluest to 500 psi. WC  T Salt Verify ND BOP.	Release TAC, POO  to surface.  C & TAG.	bore diagram of
13. Describe of startin proposed  1. Prep loc. No down.  2. RU Wirelin  3. Set 5-1/2"  4. 40 sx 2113  5. 40 sx 754'  6. 100 sx 469	ng any proposed we discompletion or reduced with the proposed with	work). SEE RULE 1 ccompletion.  Trods and pump ge ring.  w/35' cmt, circ was TAG.  AG.  80 sx cm	9.15.7.14 NMA , laying down, v/ P&A mud, t nt 754' - 962' - nt to surface. \	pertinent details, and good. For Multiple Composition ND WH. NU BOP.  Run CBluest to 500 psi. WC  T Salt Verify ND BOP.	Release TAC, POO  to surface.  C & TAG.	bore diagram of
13. Describe of startin proposed  1. Prep loc. No down.  2. RU Wirelin  3. Set 5-1/2"  4. 40 sx 2113  5. 40 sx 754'  6. 100 sx 469	ng any proposed we discompletion or reduced with the completion of the completion	work). SEE RULE 1 ccompletion.  Trods and pump ge ring.  W/35' cmt, circ w and the circ was a cmulated and the circ cmulated and the	9.15.7.14 NMA , laying down, v/ P&A mud, t nt 754' - 962' - nt to surface. \	pertinent details, and good. For Multiple Composition ND WH. NU BOP.  Run CBluest to 500 psi. WC  T Salt Verify ND BOP.	Release TAC, POO  to surface.  C & TAG.	bore diagram of
13. Describe of startin proposed  1. Prep loc. No down.  2. RU Wirelin  3. Set 5-1/2"  4. 40 sx 2113  5. 40 sx 754'  6. 100 sx 469	ng any proposed we discompletion or reduced with the proposed with	work). SEE RULE 1 ccompletion.  Trods and pump ge ring.  W/35' cmt, circ w and the circ was a cmulated and the circ cmulated and the	9.15.7.14 NMA , laying down, v/ P&A mud, t nt 754' - 962' - nt to surface. \	pertinent details, and g C. For Multiple Comp ND WH. NU BOP. Run CBI rest to 500 psi. WC T Salt Verify ND BOP.	Release TAC, POO  to surface.  C & TAG.	bore diagram of
13. Describe of starting proposed.  1. Prep loc. No. down.  2. RU Wireling. 3. Set 5-1/2" 4. 40 sx 2113 5. 40 sx 754' 6. 100 sx 469 7. Cut off Wh	ng any proposed we discompletion or reduced with the completion of the completion	work). SEE RULE 1 ccompletion.  Trods and pump ge ring.  W/35' cmt, circ w & TAG.  TAG.  Stempt to circ cm nstall DHM. Cut	y/ P&A mud, to to surface. Note that to surface. Note that the total mast anches is the surface.	pertinent details, and g C. For Multiple Comp ND WH. NU BOP. Run CBI rest to 500 psi. WC T Salt Verify ND BOP.	Release TAC, POO  to surface.  C & TAG.	bore diagram of
13. Describe of startin proposed  1. Prep loc. No down.  2. RU Wirelin  3. Set 5-1/2"  4. 40 sx 2113  5. 40 sx 754'  6. 100 sx 469  7. Cut off Wh	ng any proposed we discompletion or reduced with the completion of the completion	work). SEE RULE 1 secompletion.  7 rods and pump ge ring. w/35' cmt, circ w & TAG. FAG. 80 sx cm extempt to circ cm nstall DHM. Cut	y/ P&A mud, to to surface. Note that to surface. Note that the total mast anches is the surface.	pertinent details, and general C. For Multiple Component ND WH. NU BOP.  Run CBluest to 500 psi. WC  T Salt  Verify ND BOP.  Lors 3' below GL. Rester.	Release TAC, POO  to surface.  C & TAG.	bore diagram of
13. Describe of starting proposed.  1. Prep loc. No down.  2. RU Wirelin. 3. Set 5-1/2" 4. 40 sx 2113 5. 49 sx 754' 6. 100 sx 469 7. Cut off What Spud Date:	ng any proposed we decompletion or red with the completion of the completio	work). SEE RULE 1 ccompletion.  7 rods and pump ge ring. w/35' cmt, circ w & TAG. FAG. 80 sx cm getempt to circ cm nstall DHM. Cut	9.15.7.14 NMA  , laying down,  v/ P&A mud, to  t 754' - 962' -  nt to surface. Noff mast anch  Rig Release D	pertinent details, and gC. For Multiple Comp  ND WH. NU BOP.  Run CBl  rest to 500 psi. WC  T Salt  Verify ND BOP.  ors 3' below GL. R  ate:  Must be plugged	Release TAC, POO  to surface.  C & TAG.  D MO.	bore diagram of
13. Describe of starting proposed.  1. Prep loc. No down.  2. RU Wirelin. 3. Set 5-1/2" 4. 40 sx 2113 5. 49 sx 754' 6. 100 sx 469 7. Cut off What Spud Date:	ng any proposed we decompletion or red with the completion of the completio	work). SEE RULE 1 ccompletion.  7 rods and pump ge ring. w/35' cmt, circ w & TAG. FAG. 80 sx cm getempt to circ cm nstall DHM. Cut	9.15.7.14 NMA  , laying down,  v/ P&A mud, to  t 754' - 962' -  nt to surface. Noff mast anch  Rig Release D	pertinent details, and general C. For Multiple Component ND WH. NU BOP.  Run CBluest to 500 psi. WC  T Salt  Verify ND BOP.  Lors 3' below GL. Rester.	Release TAC, POO  to surface.  C & TAG.  D MO.	bore diagram of
13. Describe of starting proposed.  1. Prep loc. No down.  2. RU Wirelin. 3. Set 5-1/2" 4. 40 sx 2113 5. 49 sx 754' 6. 100 sx 469 7. Cut off What Spud Date:	ng any proposed we decompletion or red MIRU, POOH w/ ne, RIH w/ gaug CIBP @ 3674' v 2213', P.S. & T 2213', P.S. & T 3' – Surf, P.S. & T 3' below GL. I	work). SEE RULE 1 secompletion.  7 rods and pump ge ring. w/35' cmt, circ w & TAG. FAG. 80 sx cm stempt to circ cm nstall DHM. Cut	9.15.7.14 NMA  , laying down,  v/ P&A mud, to  t 754' - 962' -  nt to surface. Noff mast anch  Rig Release D	pertinent details, and gC. For Multiple Comp  ND WH. NU BOP.  Run CBl  rest to 500 psi. WC  T Salt  Verify ND BOP.  ors 3' below GL. R  ate:  Must be plugged	Release TAC, POO  to surface.  C & TAG.  D MO.	bore diagram of
13. Describe of starting proposed.  1. Prep loc. No down.  2. RU Wireling. 3. Set 5-1/2" 4. 40 sx 2113 5. 40 sx 754' 6. 100 sx 469 7. Cut off What was a speed of the second of the seco	ng any proposed we decompletion or red with the completion of the completio	work). SEE RULE 1 secompletion.  7 rods and pump ge ring. w/35' cmt, circ w & TAG. FAG. 80 sx cm stempt to circ cm nstall DHM. Cut	9.15.7.14 NMA  , laying down,  v/ P&A mud, to  t 754' - 962' -  nt to surface. Note to surface. Note to surface.  Rig Release Decomplete to the becomplete to the becomplete.	Pertinent details, and good. For Multiple Composition ND WH. NU BOP.  Run CBluest to 500 psi. WC  T Salt Verify ND BOP. Pors 3' below GL. Relate:  Must be plugged lest of my knowledge and select of my knowledge	Release TAC, POO  to surface.  C & TAG.  D MO.  by 6/28/2023  and belief.	bore diagram of  OH tubing, laying
13. Describe of starting proposed.  1. Prep loc. No down.  2. RU Wirelin. 3. Set 5-1/2" 4. 40 sx 2113 5. 49 sx 754' 6. 100 sx 469 7. Cut off What Spud Date:	ng any proposed we decompletion or red MIRU, POOH w/ ne, RIH w/ gaug CIBP @ 3674' v 2213', P.S. & T 2213', P.S. & T 3' – Surf, P.S. & T 3' below GL. I	work). SEE RULE 1 secompletion.  7 rods and pump ge ring. w/35' cmt, circ w & TAG. FAG. 80 sx cm stempt to circ cm nstall DHM. Cut	9.15.7.14 NMA  , laying down,  v/ P&A mud, to  t 754' - 962' -  nt to surface. Noff mast anch  Rig Release D	pertinent details, and gC. For Multiple Comp  ND WH. NU BOP.  Run CBl  rest to 500 psi. WC  T Salt  Verify ND BOP.  ors 3' below GL. R  ate:  Must be plugged	Release TAC, POO  to surface.  C & TAG.  D MO.  by 6/28/2023  and belief.	bore diagram of  OH tubing, laying
13. Describe of starting proposed.  1. Prep loc. No down.  2. RU Wirelin. 3. Set 5-1/2" 4. 40 sx 2113 5. 49 sx 754' 6. 100 sx 469 7. Cut off What was a sum of the second proposed by the sum of the second proposed by the sum of the sum of the sum of the second proposed by the sum of the	ng any proposed we decompletion or reduced the completion or reduced the completion or reduced the completion of reduced the completion of reduced the completion of reduced the completion of t	work). SEE RULE 1 completion.  I rods and pump ge ring.  W/35' cmt, circ was TAG.  TAG.  80 sx cm extempt to circ cm extempt to circ cm extempt to circ cm extended to	ig. 15.7.14 NMA  , laying down,  of P&A mud, to  tat 754' - 962' -  nt to surface. No  off mast anch  Rig Release D  complete to the be TITLE	pertinent details, and g C. For Multiple Comp  ND WH. NU BOP.  Run CBI  est to 500 psi. WC  T Salt  /erify ND BOP.  ors 3' below GL. R  ate:  Must be plugged  est of my knowledge a  Petroleum Engine	Release TAC, POO  to surface.  C & TAG.  D MO.  by 6/28/2023  and belief.	OH tubing, laying  E 6/16/2022
13. Describe of starting proposed.  1. Prep loc. No down.  2. RU Wirelin. 3. Set 5-1/2" 4. 40 sx 2113 5. 49 sx 754' 6. 100 sx 469 7. Cut off What with the sum of the	ng any proposed we decompletion or reduced to completion or reduced to the completion of the completion o	work). SEE RULE 1 completion.  I rods and pump ge ring.  W/35' cmt, circ was TAG.  TAG.  80 sx cm extempt to circ cm extempt to circ cm extempt to circ cm extended to	ig. 15.7.14 NMA  , laying down,  of P&A mud, to  tat 754' - 962' -  nt to surface. No  off mast anch  Rig Release D  complete to the be TITLE	Pertinent details, and good. For Multiple Composition ND WH. NU BOP.  Run CBluest to 500 psi. WC  T Salt Verify ND BOP. Pors 3' below GL. Relate:  Must be plugged lest of my knowledge and select of my knowledge	Release TAC, POO  to surface.  C & TAG.  D MO.  by 6/28/2023  and belief.	OH tubing, laying  E 6/16/2022
13. Describe of starting proposed.  1. Prep loc. No down.  2. RU Wirelin. 3. Set 5-1/2" 4. 40 sx 2113 5. 49 sx 754' 6. 100 sx 469 7. Cut off What was a sum of the second proposed by the sum of the second proposed by the sum of the sum of the sum of the second proposed by the sum of the	ng any proposed we decompletion or reduced to completion or reduced to the completion of the completion o	work). SEE RULE 1 completion.  I rods and pump ge ring.  W/35' cmt, circ was TAG.  TAG.  80 sx cm extempt to circ cm extempt to circ cm extempt to circ cm extended to	ig. 15.7.14 NMA  , laying down,  of P&A mud, to  tat 754' - 962' -  nt to surface. No  off mast anch  Rig Release D  complete to the be TITLE	pertinent details, and g C. For Multiple Comp  ND WH. NU BOP.  Run CBI  est to 500 psi. WC  T Salt  /erify ND BOP.  ors 3' below GL. R  ate:  Must be plugged  est of my knowledge a  Petroleum Engine	Release TAC, POO  to surface.  C & TAG.  D MO.  by 6/28/2023  and belief.	OH tubing, laying  E 6/16/2022
13. Describe of starting proposed.  1. Prep loc. No down.  2. RU Wirelin. 3. Set 5-1/2" 4. 40 sx 2113 5. 49 sx 754' 6. 100 sx 469 7. Cut off What with the sum of the	ng any proposed we decompletion or reduced to completion or reduced to the completion of the completion o	work). SEE RULE 1 completion.  I rods and pump ge ring.  W/35' cmt, circ was TAG.  TAG.  80 sx cm extempt to circ cm extempt to circ cm extempt to circ cm extended to	ignormal (19.15.7.14 NMA), laying down, w/ P&A mud, to the surface. Note to surface. Note that the surface of t	pertinent details, and g C. For Multiple Comp  ND WH. NU BOP.  Run CBI  est to 500 psi. WC  T Salt  /erify ND BOP.  ors 3' below GL. R  ate:  Must be plugged  est of my knowledge a  Petroleum Engine	PHON	E 6/16/2022 NE:214-234-9115

Conditions of Approval (if any):
Released to Imaging: 7/13/2022 3:01:43 PM

# CONDITIONS FOR PLUGGING AND ABANDONMENT

## OCD - Southern District

The following is a guide or checklist in preparation of a plugging program, this is not all inclusive and care must be exercised in establishing special plugging programs in unique and unusual cases, Notify NMOCD District Office II at (575)-748-1283 at least 24 hours before beginning work. After MIRU rig will remain on well until it is plugged to surface. OCD is to be notified before rig down. Company representative will be on location during plugging procedures.

- A notice of intent to plug and abandon a wellbore is required to be approved before plugging
  operations are conducted. A cement evaluation tool is required in order to ensure isolation of
  producing formations, protection of water and correlative rights. A cement bond log or other
  accepted cement evaluation tool is to be provided to the division for evaluation if one has not
  been previously run or if the well did not have cement circulated to surface during the original
  casing cementing job or subsequent cementing jobs. Insure all bradenheads have been
  exposed, identified and valves are operational prior to rig up.
- 2. Closed loop system is to be used for entire plugging operation. Upon completion, contents of steel pits are to be hauled to a permitted disposal location.
- 3. Trucking companies being used to haul oilfield waste fluids to a disposal commercial or private shall have an approved NMOCD C-133 permit. A copy of this permit shall be available in each truck used to haul waste products. It is the responsibility of the operator as well as the contractor, to verify that this permit is in place prior to performing work. Drivers shall be able to produce a copy upon request of an NMOCD Field inspector.
- 4. Filing a subsequent C-103 will serve as notification that the well has been plugged.
- 5. A final C-103 shall be filed (and a site inspection by NMOCD Inspector to determine if the location is satisfactorily cleaned, all equipment, electric poles and trash has been removed to Meet NMOCD standards) before bonding can be released.
- 6. If work has not begun within 1 Year of the approval of this procedure, an extension request must be file stating the reason the well has not been plugged.
- 7. Squeeze pressures are not to exceed 500 psi, unless approval is given by NMOCD.
- 8. Produced water will not be used during any part of the plugging operation.
- 9. Mud laden fluids must be placed between all cement plugs mixed at 25 sacks per 100 bbls of water.
- 10. All cement plugs will be a minimum of 100' in length or a minimum of 25 sacks of cement, whichever is greater. 50' of calculated cement excess required for inside casing plugs and 100% calculated cement excess required on outside casing plugs.
- 11. Class 'C' cement will be used above 7500 feet.
- 12. Class 'H' cement will be used below 7500 feet.
- 13. A cement plug is required to be set 50' above and 50' below, casing stubs, DV tools, attempted casing cut offs, cement tops outside casing, salt sections and anywhere the casing is perforated, these plugs require a 4 hour WOC and then will be tagged
- 14. All Casing Shoes Will Be Perforated 50' below shoe depth and Attempted to be Squeezed, cement needs to be 50' above and 50' Below Casing Shoe inside the Production Casing.

- 16. When setting the top out cement plug in production, intermediate and surface casing, wellbores should remain full at least 30 minutes after plugs are set
- 17. A CIBP is to be set within 100' of production perforations, capped with 100' of cement, WOC 4 hours and tag.
- 18. A CIBP with 35' of cement may be used in lieu of the 100' plug if set with a bailer. This plug will be placed within 100' of the top perforation, (WOC 4 hrs and tag).
- 19. No more than 3000' is allowed between cement plugs in cased hole and 2000' in open hole.
- 20. Some of the Formations to be isolated with cement plugs are: These plugs to be set to isolate formation tops
  - A) Fusselman
  - B) Devonian
  - C) Morrow
  - D) Wolfcamp
  - E)Bone Springs
  - F) Delaware
  - G) Any salt sections
  - H) Abo
  - I) Glorieta
  - J) Yates.
  - K)Potash---(In the R-111-P Area (Page 3 & 4), a solid cement plug must be set across the salt section. Fluid used to mix the cement shall be saturated with the salts that are common to the section penetrated and in suitable proportions, not more than 3% calcium chloride (by weight of cement) will be considered the desired mixture whenever possible, WOC 4 hours and tag, this plug will be 50' below the bottom and 50' above the top of the Formation.
- 21. If cement does not exist behind casing strings at recommended formation depths, the casing can be cut and pulled with plugs set at recommended depths. If casing is not pulled, perforations will be shot and cement squeezed behind casing, WOC and tagged. These plugs will be set 50' below formation bottom to 50' above formation top inside the casing

## **DRY HOLE MARKER REQUIRMENTS**

The operator shall mark the exact location of the plugged and abandoned well with a steel marker not less than four inches in diameter, 3' below ground level with a plate of at least ¼" welded to the top of the casing and the dry hole marker welded on the plate with the following information welded on the dry hole marker:

1. Operator name 2. Lease and Well Number 3.API Number 4. Unit Letter 5. Quarter Section (feet from the North, South, East or West) 6. Section, Township and Range 7. Plugging Date 8. County (SPECIAL CASES)------AGRICULTURE OR PRARIE CHICKEN BREEDING AREAS

In these areas, a below ground marker is required with all pertinent information mentioned above on a plate, set 3' below ground level, a picture of the plate will be supplied to NMOCD for record, the exact location of the marker (longitude and latitude by GPS) will be provided to NMOCD (We typically require a current survey to verify the GPS)

SITE REMEDIATION DUE WITHIN ONE YEAR OF WELL PLUGGING COMPLETION

# R-111-P Area

#### T 18S - R 30E

Sec 10 Unit P. Sec 11 Unit M,N. Sec 13 Unit L,M,N. Sec 14 Unit C -P. Sec 15 Unit A G,H,I,J,K,N,O,P. Sec 22 Unit All except for M. Sec 23, Sec 24 Unit C,D,E,L, Sec 26 Unit A-G, Sec 27 Unit A,B,C

## T 19S - R 29E

Sec 11 Unit P. Sec 12 Unit H-P. Sec 13. Sec 14 Unit A,B,F-P. Sec 15 Unit P. Sec 22 Unit A,B,C,F,G,H,I,J K,N,O,P. Sec 23. Sec 24. Sec 25 Unit D. Sec 26 Unit A-F. Sec 27 Unit A,B,C,F,G,H.

#### T 19S - R 30E

Sec 2 Unit K,L,M,N. Sec 3 Unit I,L,M,N,O,P. Sec 4 Unit C,D,E,F,G,I-P. Sec 5 Unit A,B,C,E-P. Sec 6 Unit I,O,P. Sec 7 – Sec 10. Sec 11 Unit D, G—P. Sec 12 Unit A,B,E-P. Sec 13 Unit A-O. Sec 14-Sec 18. Sec 19 Unit A-L, P. Sec 20 – Sec 23. Sec 24 Unit C,D,E,F,L,M,N. Sec 25 Unit D. Sec 26 Unit A-G, I-P. Sec 27, Sec 28, Sec 29 Unit A,B,C,D,F,G,H,I,J,O,P. Sec 32 Unit A,B,G,H,I,J,N,O,P. Sec 33. Sec 34. Sec 35. Sec 36 Unit D,E,F,I-P.

## T 19S - R 31E

Sec 7 Unit C,D,E,F,L. Sec 18 Unit C,D,E,F,G,K,L. Sec 31 Unit M. Sec 34 Unit P. Sec 35 Unit M,N,O. Sec 36 Unit O,P.

#### T 20S - R 29E

Sec 1 Unit H,I,P. Sec 13 Unit E,L,M,N. Sec 14 Unit B-P. Sec 15 Unit A,H,I,J,N,O,P. Sec 22 Unit A,B,C,F,G,H,I,J,O,P. Sec 23. Sec 24 Unit C,D,E,F,G,J-P. Sec 25 Unit A-O. Sec 26. Sec 27 Unit A,B,G,H,I,J,O,P. Sec 34 Unit A,B,G,H. Sec 35 Unit A-H. Sec 36 Unit B-G.

## T 20S - R 30E

Sec 1 – Sec 4. Sec 5 Unit A,B,C,E-P. Sec 6 Unit E,G-P. Sec 7 Unit A-H,I,J,O,P. Sec 8 – 17. Sec 18 Unit A,B,G,H,I,J,O,P. Sec 19 Unit A,B,G,H,I,J,O,P. Sec 30 Unit A-L,N,O,P. Sec 31 Unit A,B,G,H,I,P. Sec 32 – Sec 36.

# T 20S - R 31E

Sec 1 Unit A,B,C,E-P. Sec 2. Sec 3 Unit A,B,G,H,I,J,O,P. Sec 6 Unit D,E,F,J-P. Sec 7. Sec 8 Unit E-P. Sec 9 Unit E,F,J-P. Sec 10 Unit A,B,G-P. Sec 11 – Sec 36.

## T 21S - R 29E

Sec 1 – Sec 3. Sec 4 Unit L1 – L16,I,J,K,O,P. Sec 5 Unit L1. Sec 10 Unit A,B,H,P. Sec 11 – Sec 14. Sec 15 Unit A,H,I. Sec 23 Unit A,B. Sec 24 Unit A,B,C,D,F,G,H,I,J,O,P. Sec 25 Unit A,O,P. Sec 35 Unit G,H,I,J,K,N,O,P. Sec 36 A,B,C,F – P.

## T 21S - R 30E

Sec 1 – Sec 36

# T 21S - R 31E

Sec 1 – Sec 36

# T 22S - R 28E

Sec 36 Unit A,H,I,P.

## T 22S - R 29E

Sec 1. Sec2. Sec 3 Unit I,J,N,O,P. Sec 9 Unit G – P. Sec 10 – Sec 16. Sec 19 Unit H,I,J. Sec 20 – Sec 28. Sec 29 Unit A,B,C,D,G,H,I,J,O,P. Sec 30 Unit A. Section 31 Unit C – P. Sec 32 – Sec 36

## T 22S - R 30E

Sec 1 – Sec 36

## T 22S - R 31E

Sec 1 – Sec 11. Sec 12 Unit B,C,D,E,F,L. Sec 13 Unit E,F,K,L,M,N. Sec 14 – Sec 23. Sec 24 Unit C,D,E,F,K,L,M,N. Sec 25 Unit A,B,C,D. Sec 26 Unit A,BC,D,G,H. Sec 27 – Sec 34.

## T 23S - R 28E

Sec 1 Unit A

## T 23S - R 29E

Sec 1 – Sec 5. Sec 6 Unit A – I, N,O,P. Sec 7 Unit A,B,C,G,H,I,P. Sec 8 Unit A – L, N,O,P. Sec 9 – Sec 16. Sec 17 Unit A,B,G,H,I,P. Sec 21 – Sec 23. Sec 24 Unit A – N. Sec 25 Unit D,E,L. Sec 26. Sec 27. Sec 28 Unit A – J, N,O,P. Sec 33 Unit A,B,C. Sec 34 Unit A,B,C,D,F,G,H. Sec 35. Sec 36 Unit B,C,D,E,F,G,K,L.

#### T 23S - R 30E

Sec 1 – Sec 18. Sec 19 Unit A – I,N,O,P. Sec 20, Sec 21. Sec 22 Unit A – N, P. Sec 23, Sec 24, Sec 25. Sec 26 Unit A,B,F-P. Sec 27 Unit C,D,E,I,N,O,P. Sec 28 Unit A – H, K,L,M,N. Sec 29 Unit A – J, O,P. Sec 30 Unit A,B. Sec 32 A,B. Sec 33 Unit C,D,H,I,O,P. Sec 34, Sec 35, Sec 36.

## T 23S - R 31E

Sec 2 Unit D,E,J,O. Sec 3 – Sec 7. Sec 8 Unit A – G, K – N. Sec 9 Unit A,B,C,D. Sec 10 Unit D,P. Sec 11 Unit G,H,I,J,M,N,O,P. Sec 12 Unit E,L,K,M,N. Sec 13 Unit C,D,E,F,G,J,K,L,M,N,O. Sec 14. Sec 15 Unit A,B,E – P. Sec 16 Unit I, K – P. Sec 17 Unit B,C,D,E, I – P. Sec 18 – Sec 23. Sec 24 Unit B – G, K,L,M,N. Sec 25 Unit B – G, J,K,L. Sec 26 – Sec 34. Sec 35 Unit C,D,E.

## T 24S – R 29E

Sec 2 Unit A, B, C, D. Sec 3 Unit A

#### T 24S - R 30E

Sec 1 Unit A – H, J – N. Sec 2, Sec 3. Sec 4 Unit A,B,F – K, M,N,O,P. Sec 9 Unit A – L. Sec 10 Unit A – L, O,P. Sec 11. Sec 12 Unit D,E,L. Sec 14 Unit B – G. Sec 15 Unit A,B,G,H.

#### T 24S - R 31E

Sec 3 Unit B – G, J – O. Sec 4. Sec 5 Unit A – L, P. Sec 6 Unit A – L. Sec 9 Unit A – J, O,P. Sec 10 Unit B – G, K – N. Sec 35 Unit E – P. Sec 36 Unit E,K,L,M,N.

## T 25S - R 31E

Sec 1 Unit C,D,E,F. Sec 2 Unit A – H.

# WELLBORE DIAGRAM

**CONSTATE No. 2** Lease/Well No.: **ELEVATION, GL:** 4,098 ft 1,980' FNL & 660' FWL Location: UL: E, SEC: 36, T: 16-S, R:31-E FIELD: GRAYBURG-JACKSON; SR-QN-GB-SA EDDY County, NM LEASE No.: State Lse. E-5300 Spudded: 8/14/1961 API No.: 30-015-05020 Drlg Stopped: 9/1/1961 Completed: 9/22/1961 ROTARY TOOLS LAT: LONG: 12-1/4" HOLE **Tubing Details Formation Tops** 10' 2-3/8 sub Anhy 804' Surface Csg: 10' 2-3/8 sub Salt 912' 8 5/8" 24# J-55 419' 117 jts 2-3/8 Salt 2017' Csg Set @ 419' 5.5" x 2-3/8 TAC @ 3650' Yates 2163' Cmt'd w/ 150 sx 7 Rivers 9 jts 2-3/8 tbg 2246' TOC = Surface SN @ 3927' 3080' Queen circ'd Graynurg 3477' **Rod Details** San Andres 3828' 1.25" x 16' PR 112 x 3/4 rods 7-7/8" HOLE 44 x 5/8 rods 2" x 1.5" x 10' RWTC pump TOC Est'd @ 2,959' 1" x 6 " strainer Calucated (50% SF) PERFS: 3,724-3,727' **GRAYBURG** 4 spf - 12 holes **GRAYBURG** 4 spf - 24 holes 3,766-3,772' **SAN ANDRES** 4 spf - 36 holes 3,942-3,951' Production Csg: 3,970' PBTD 5 1/2" 15.5# J-55 3,975' TD Csg Set @ 3,975'

Cmt'd w/ 200 sx

804'

912'

2017'

2163'

2246'

3080'

3477'

3828'

# **WELLBORE DIAGRAM**

Lease/Well No.: CONSTATE No. 2 ELEVATION, GL: 4,098 ft

Location: 1,980' FNL & 660' FWL

UL: E, SEC: 36, T: 16-S, R:31-E FIELD: GRAYBURG-JACKSON; SR-QN-GB-SA

EDDY County, NM


LEASE No.: State Lse. E-5300 Spudded: API No.: **30-015-05020** Drlg Stopped:

rlg Stopped: 9/1/1961 Completed: 9/22/1961

8/14/1961

ROTARY TOOLS LAT:

LONG:

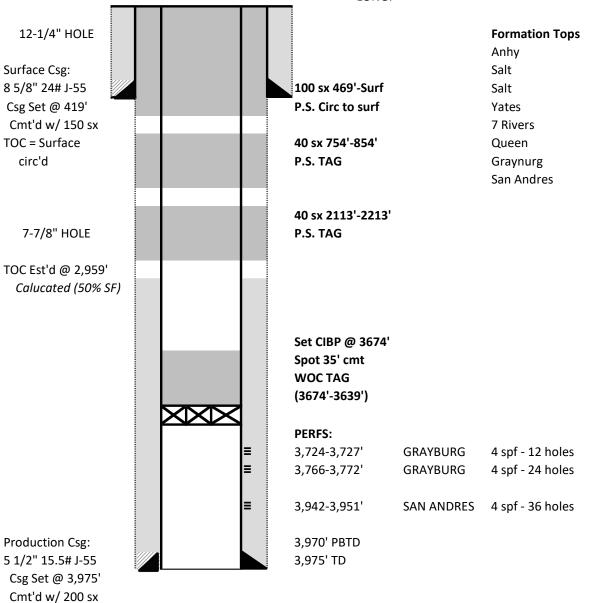

District I
1625 N. French Dr., Hobbs, NM 88240
Phone: (575) 393-6161 Fax: (575) 393-0720

District II 811 S. First St., Artesia, NM 88210 Phone:(575) 748-1283 Fax:(575) 748-9720

District III 1000 Rio Brazos Rd., Aztec, NM 87410 Phone:(505) 334-6178 Fax:(505) 334-6170

1220 S. St Francis Dr., Santa Fe, NM 87505 Phone:(505) 476-3470 Fax:(505) 476-3462

**State of New Mexico Energy, Minerals and Natural Resources Oil Conservation Division** 1220 S. St Francis Dr. **Santa Fe, NM 87505** 

COMMENTS

Action 118209

## **COMMENTS**

Operator:	OGRID:
ROVER OPERATING, LLC	371484
17304 Preston Road	Action Number:
Dallas, TX 75252	118209
	Action Type:
	[C-103] NOI Plug & Abandon (C-103F)

#### COMMENTS

Created By		Comment Date
plmartinez	DATA ENTRY PM	7/13/2022

District I
1625 N. French Dr., Hobbs, NM 88240
Phone: (575) 393-6161 Fax: (575) 393-0720

District II 811 S. First St., Artesia, NM 88210 Phone:(575) 748-1283 Fax:(575) 748-9720

District III 1000 Rio Brazos Rd., Aztec, NM 87410 Phone:(505) 334-6178 Fax:(505) 334-6170

1220 S. St Francis Dr., Santa Fe, NM 87505 Phone:(505) 476-3470 Fax:(505) 476-3462

**State of New Mexico Energy, Minerals and Natural Resources Oil Conservation Division** 1220 S. St Francis Dr. **Santa Fe, NM 87505** 

CONDITIONS

Action 118209

# **CONDITIONS**

Operator:	OGRID:
ROVER OPERATING, LLC	371484
17304 Preston Road	Action Number:
Dallas, TX 75252	118209
	Action Type:
	[C-103] NOI Plug & Abandon (C-103F)

#### CONDITIONS

Create	ed By	Condition	Condition Date
gcor	rdero	None	6/28/2022