

Submit 1 Copy To Appropriate District

Office

District I - (575) 393-6161

1625 N. French Dr., Hobbs, NM 88240

District II - (575) 748-1283

811 S. First St., Artesia, NM 88210

District III - (505) 334-6178

1000 Rio Brazos Rd., Aztec, NM 87410

District IV - (505) 476-3460

1220 S. St. Francis Dr., Santa Fe, NM

87505

State of New Mexico
Energy, Minerals and Natural ResourcesForm C-103
Revised July 18, 2013OIL CONSERVATION DIVISION
1220 South St. Francis Dr.
Santa Fe, NM 87505WELL API NO.
30-039-200855. Indicate Type of Lease
STATE ☐ FEE ☒

6. State Oil & Gas Lease No.

7. Lease Name or Unit Agreement Name
Cinco Diablos8. Well Number
#0099. OGRID Number
31369410. Pool name or Wildcat
SWD; Entrada

SUNDRY NOTICES AND REPORTS ON WELLS

(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH PROPOSALS.)

1. Type of Well: Oil Well ☒ Gas Well ☐ Other ☐2. Name of Operator
Schalk Development Co.3. Address of Operator
PO Box 25825, Albuquerque, NM 87125

4. Well Location

Unit Letter I 1650 feet from the South line and 790 feet from the East line

Section 08 Township 25N Range 07W NMPM San Juan County

11. Elevation (Show whether DR, RKB, RT, GR, etc.)
6363' GL

12. Check Appropriate Box to Indicate Nature of Notice, Report or Other Data

NOTICE OF INTENTION TO:

PERFORM REMEDIAL WORK ☐ PLUG AND ABANDON ☒
TEMPORARILY ABANDON ☐ CHANGE PLANS ☐
PULL OR ALTER CASING ☐ MULTIPLE COMPL ☐
DOWNHOLE COMMINGLE ☐
CLOSED-LOOP SYSTEM ☐
OTHER ☐

SUBSEQUENT REPORT OF:

REMEDIAL WORK ☐ ALTERING CASING ☐
COMMENCE DRILLING OPNS. ☐ P AND A ☐
CASING/CEMENT JOB ☐
OTHER: ☐

13. Describe proposed or completed operations. (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Completions: Attach wellbore diagram of proposed completion or recompletion.

Schalk Development is proposing to plug and abandon the Cinco Diablos #9, the P&A procedure and WBD are attached.

Spud Date:

Rig Release Date:

I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNATURE



TITLE: Regulatory

DATE 08/27/2025

Type or print name Arleen Smith E-mail address: arleen@walsheng.net PHONE: 505-327-4892

For State Use Only

APPROVED BY:

TITLE

DATE

Conditions of Approval (if any)

P&A Procedure
Shalk Development Co
Cinco Diablos #009
Ballard Pictured Cliffs
1650' FNL & 790' FEL, Section 8, T25N, R07W
Rio Arriba, New Mexico, API #30-039-20085

Plug & Abandonment Procedure:

Surface Casing: 8-5/8", 20 ppf set @ 112' with 75 sx cmt. Cement to Surface
Production Casing: 4-1/2", 9.5 ppf set @ 2279" with 53 sx cmt. Calculated TOC@980'
Production Tbg: 68 jnts 2-3/8" tbg. EOT landed at 2189.57' KB & SN at 2188' KB (Oct 21,2021) No scraper run.
Perforations: 2146'-2226'

Note: All cement volumes use 100% excess outside casing and minimum 50' excess inside pipe. Stabilizing wellbore fluid will be 8.34 ppg fresh water. All cement will be ASTM Class G neat 1.15 ft³/sk or equivalent. Cement volumes calculated to surface on surface casing. TOC calculated at 980' from primary cement job. Volumes calculated off 4-1/2" 9.5# casing.

Prior to Mobilization

1. Notify BLM & OCD 24-48 hrs prior to mobilization.
2. Verify all cement volumes based on actual slurry to be pumped. Calculations based on 1.15 ft³/sk.
3. Comply with all Conditions of Approval (COA) from BLM and OCD.
4. Ensure that the workover rigs BOP stack, and or wireline BOP stack has been tested within the last 2 months and that the workover rig company can show certification to that effect.
5. If at any time, downhole conditions dictate a change in this procedure, wellsite consultant should notify Walsh Eng.(Kyle Mason), and BLM to discuss options.

P&A Procedure

1. Conduct pre-job safety meeting and discuss JSA with everyone on location. JSA to be signed by everyone in attendance. Make sure everyone knows they have the right and obligation to stop operations at any point if they see something unsafe.
2. MIRU PU.
3. ND WH, NU BOP, RU rig floor and 2-3/8" handling tools.
4. POOH with 2-3/8" production tubing reported at 2188'
5. RIH 4-1/2", 9.50# scraper and 2-3/8" YB work string to 2125'. POOH with scraper.
6. RIH with 4-1/2" cmt retainer and 2-3/8" YB work string. Set cmt retainer at 2096'.

7. Roll hole w/ fresh water. Drop standing valve. PT tubing and casing to 500 psi. Casing mechanical integrity to be demonstrated by N.M.A.C. 19.15.25.14. Retrieve standing valve with sand line. POOH 2-2/3" YB work string.
8. Run CBL. Adjust cement plugs as necessary.
9. **Plug #1, 2096' – 1917' (Perforations: 2146'-2226'):** RIH 2-3/8" tbg open ended to CICR. Establish circulation. Mix and Pump 13 sxs (14.95 ft³) Class G Neat or equivalent in balanced plug. POOH 100' above cement and reverse circulate clean. WOC and tag if mechanical integrity test per N.M.A.C. 19.15.25.14. fails.
10. **Plug #2, 1554' – 1200' (Fruitland Top @ 1967', Kirtland Top @ 1604': 2146'-2226'):** RIH 2-3/8" tbg open ended to CICR. Establish circulation. Mix and Pump 40 sxs (46.0 ft³) Class G Neat or equivalent in balanced plug. POOH 100' above cement and reverse circulate clean. WOC and tag if mechanical integrity test per N.M.A.C. 19.15.25.14. fails.
11. **Plug #3, 162' – Surface':** RIH w/ WL and shoot 3 spf at 160'. Attempt to establish circulation.
 - a. If circulation is established @ a minimum of 1/2 bpm. Mix and bullhead 75 sxs (86.25 ft³) Class G Neat or equivalent or until cement circulates up 4-1/2" x 8-5/8" annulus. WOC and ensure no fall back.
 - b. Contact engineering and BLM on shooting perforations closer to surface if circulation is not established.
12. ND BOP and cut off wellhead below surface casing flange, top off casing and annulus as necessary. Install P&A marker and cut off and/or remove anchors. RD, MOL - Restore location per BLM stipulations. Take pictures from all cardinal directions. Ensure to notify project management of all remaining equipment on location once plugging is complete.

Kyle T. Mason
Operations Engineer
Walsh Engineering and Production



19.15.25.14 Demonstrating mechanical integrity:

- A. An operator may use the following methods of demonstrating internal casing integrity for wells to be placed in approved temporary abandonment:
- (1) the operator may set a cast iron bridge plug within 100 feet of uppermost perforations or production casing shoe, load the casing with inert fluid and pressure test to 500 psi surface pressure with a pressure drop of not more than 10 percent over a 30 minute period;

(2) the operator may run a retrievable bridge plug or packer to within 100 feet of uppermost perforations or production casing shoe, and test the well to 500 psi surface pressure for 30 minutes with a pressure drop of not greater than 10 percent over a 30 minute period; or

(3) the operator may demonstrate that the well has been completed for less than five years and has not been connected to a pipeline.

B. During the testing described in Paragraphs (1) and (2) of Subsection A of 19.15.25.14 NMAC the operator shall:

(1) open all casing valves during the internal pressure tests and report a flow or pressure change occurring immediately before, during or immediately after the 30 minute pressure test;

(2) top off the casing with inert fluid prior to leaving the location;

(3) report flow during the test in Paragraph (2) of Subsection A of 19.15.25.14 NMAC to the appropriate division district office prior to completion of the temporary abandonment operations; the division may require remediation of the flow prior to approving the well's temporary abandonment.

C. An operator may use any method approved by the EPA in 40 C.F.R. section 146.8(c) to demonstrate external casing and cement integrity for wells to be placed in approved temporary abandonment.

D. The division shall not accept mechanical integrity tests or logs conducted more than 12 months prior to submittal.

E. The operator shall record mechanical integrity tests on a chart recorder with a maximum two hour clock and maximum 1000 pound spring, which has been calibrated within the six months prior to conducting the test. Witnesses to the test shall sign the chart. The operator shall submit the chart with form C-103 requesting approved temporary abandonment.

F. The division may approve other testing methods the operator proposes if the operator demonstrates that the test satisfies the requirements of Subsection B of 19.15.25.13 NMAC.

[19.15.25.14 NMAC - Rp, 19.15.4.203 NMAC, 12/1/2008]

Released to Imaging: 8/28/2025 2:59:07 PM

Well/Facility:

Cinco Diablos #009

Operator:

Schalk Development Co

Lease/Op Agmt:

Field:

Ballard Pictured Cliffs

County:

Rio Arriba

State:

NM

Spud:

2/7/1968

Comp. Date:

2/21/1968

1st Prod:

Wellhead Conn:

Surface Loc:

1650' FSL & 790' FEL

Sec-Twn-Rge:

Sec 8 / T25N / R07W

Pumper:

Foreman:

Anchors Tested

Notes:

Well Status:

Producing

Orig Oper:

John K. Schalk

KB:

11'

API #:

30-039-20085

GR/KB:

6375' KB, 6364' GL

TD:

2280'

PBTD:

2230'

WI:

NRI:

Date Drawn:

July 25, 2025 (CM)

Plug #3

162'-Surface

75 sxs Class G Neat (86.25 cf)

Perf 3 spf @ 162'

Cal TOC @ 980'

Plug #2

1554'-1200'

40 sxs Class G Neat (46 cf)

Plug #1

2096'-1917"

13 sxs Class G Neat (14.95 cf)

Set retainer @ 2,096"

Date:

History:

10/21/21

EOT landed at 2189.57'KB, SN at 2188'KB. ND BOP. Installed pack-off rubbers & WH bonnet. Plumbed tbg flowline back in. Turned tbg to sales.

10/20/21

Pulled 2 jts, picked up a 4-1/2" RBP w/ unloader and on/off tool (float sub above on/off tool). RIH and set RBP at ~65'KB, LD 2jts of tbg.

10/20/21

RIH w/ retrieving head, latch onto RBP and let equalize, blow down csg, released RBP and allow residual gas to blow off. TOH with RBP. Picked up original tbg then RIH on 1 extra jt. Tagged fill 3' below where tbg was landed, LD extra jt. Tally out of hole with 68jts of 2-3/8" tubing, SN, 31' tailjoint and notched collar. all tubing looked good. Tago filled @ 2224'KB

10/19/21

Lease operator discovered that csg was leaking below wellhead. Drove to loc and inspected 4-1/2" csg, bell nipple & wellhead, Order parts from WSI & Select Oil tools, lined up KCE to repair roads and dig out wellhead.

Deviation

MD

Inclination

Geologic Markers

MD

Formation

115'

0.00

1250'

Ojo Alamo

505'

1.00

1604'

Kirtland

1000'

2.00

1967'

Fruitland

1500'

2.00

2140'

Pictured Cliffs

2280'

2.00

Production Tubing Detail

KB Adjustment

Length

WT

Top

Bottom

Tail joint w/ NC

4" perf sub

SN w/ notched collar

2188' KB

2-3/8" tubing

68 ea

4.70

J55 EUE

2189.57' KB

Rod Detail - UNK

Top

Bottom

Pump details - UNK

Pumping Unit:

API Designation:

Samson Post SN:

Gear Box SN:

Structural Unbalance:

Power:

Power SN:

Sheave Size:

Gear Sheave:

Stroke Length:

Gear Ratio:

SPM:

Horse Power:

Volts:

Amps:

Belts:

State of New Mexico
Energy, Minerals and Natural Resources Department
Oil Conservation Division
Standard Plugging Conditions



This document provides OCD's general plugging conditions of approval. It should be noted that the list below may not cover special plugging programs in unique and unusual cases, and OCD expressly reserves the right to impose additional requirements to the extent dictated by project conditions. The OCD also reserves the right to approve deviations from the below conditions if field conditions warrant a change. A C-103F NOI to P&A must be approved prior to plugging operations. Failure to comply with the conditions attached to a plugging approval may result in a violation of 19.15.5.11 NMAC, which may result in enforcement actions, including but not limited to penalties and a requirement that the well be re-plugged as necessary.

1. Notify OCD office at least 24 hours before beginning work and seek prior approval to implementing any changes to the C-103 NOI to PA.
 - North Contact, Monica Kuehling, 505-320-0243, monica.kuehling@emnrd.nm.gov
 - South Contact, Gilbert Cordero, 575-626-0830, gilbert.cordero@emnrd.nm.gov
2. A Cement Bond Log is required to ensure strata isolation of producing formations, protection of water and correlative rights. A CBL must be run or be on file that can be used to properly evaluate the cement behind the casing.

Note: Logs must be submitted to OCD via OCD permitting. A copy of the log may be emailed to OCD inspector for faster review times, but emailing does not relieve the operators obligation to submit through OCD permitting.

3. Once Plugging operations have commenced, the rig must not rig down until the well is fully plugged without OCD approval. If gap in plugging operations exceeds 30 days, the Operator must file a subsequent sundry of work performed and revised NOI for approval on work remaining. At no time shall the rig be removed from location if it will result in waste or contamination of fresh water.
4. Insure all bradenheads have been exposed, identified and valves are operational prior to rig up.
5. Fluids must be placed between all cement plugs mixed at 25 sacks per 100 bbls of water.
 - North, water or mud laden fluids
 - South, mud laden fluids
6. Closed loop system is to be used for entire plugging operation. Upon completion, contents of steel pits are to be hauled to an OCD permitted disposal facility.

7. Class of cement shall be used in accordance with the below table for depth allowed.

Class	TVD Lower Limit (feet)
Class A/B	6,000
Class I/II	6,000
Class C or III	6,000
Class G and H	8,000
Class D	10,000
Class E	14,000
Class F	16,000

8. After cutting the well head any “top off cement jobs” must remain static for 30 minutes. Any gas bubbles or flow during this 30 minutes shall be reported to the OCD for approval of next steps.
9. Trucking companies being used to haul oilfield waste fluids (Commercial or Private) to a disposal facility shall have an approved OCD C-133 permit.
- A copy of this permit shall be available in each truck used to haul waste products.
 - It is the responsibility of the Operator and Contractor to verify that this permit is in place prior to performing work.
 - Drivers shall be able to produce a copy upon request of an OCD Compliance Officer.
10. Filing a [C-103] Sub. Plugging (C-103P) will serve as notification that the well has been plugged.
11. A [C-103] Sub. Release After P&A (C-103Q) shall be filed no later than a year after plugging and a site inspection by OCD Compliance officer to determine if the location is satisfactorily cleaned, all equipment, electric poles and trash has been removed to meet OCD standards before bonding can be released.
12. Produced water or brine-based fluids **may not** be used during any part of plugging operations without **prior OCD approval**.
13. Cementing;
- All cement plugs will be neat cement and a minimum of 100’ in length. 50’ of calculated cement excess required for inside casing plugs and 100% calculated cement excess required on outside casing plugs.
 - If cement does not exist between or behind the casing strings at recommended formation depths, the casing perforations will be shot at 50’ below the formation top and the cement retainer shall be set no more than 50’ from the perforations.
 - WOC (Wait on Cement) time will be:
 - 4 hours for accelerated (calcium chloride) cement.
 - 6 hours on regular cement.
 - Operator must tag all cement plugs unless it meets the below condition.
 - The operator has a passing pressure test for the casing annulus and the plug is only an inside plug.
 - If perforations are made operator must tag all plugs using the work string to tag unless given approval to tag with wireline by the correct contact from COA #1 of this document.
 - This includes plugs pumped underneath a cement retainer to ensure retainer seats properly after cement is pumped.
 - Cement can only be bull-headed with specific prior approval.
 - Squeeze pressures are not to exceed the exposed formations frac gradient or the burst pressure of the casing.

14. A cement plug is required to be set from 50' below to 50' above (straddling) formation tops, casing shoes, casing stubs, any attempted casing cut offs, anywhere the casing is perforated, DV tools.
- Perforation/Formation top plug. (When there is less than 100ft between the top perforation to the formation top.) These plugs are required to be started no greater than 50ft from the top perforation. However, the plug should be set below the formation top or as close to the formation top as possible for the maximum isolation between the formations. The plug is required to be a 100ft cement plug plus excess.
 - Perforation Plug when a formation top is not included. These plugs are required to be started within 50ft of the top perforation. The plug is required to be a 100ft cement plug plus excess.
 - Cement caps on top of bridge plugs or cement retainers for perforation plugs, that are not straddling a formation top, may be set using a bailer with a minimum of 35' of cement in lieu of the 100' plug. The bridge plug or retainer must be set within 50ft of the perforations.
 - Perforations are required below the surface casing shoe if cement does not exist behind the casing, a 30-minute minimum wait time will be required immediately after perforating to determine if gas and/or water flows are present. If flow is present, the well will be shut-in for a minimum of one hour and the pressure recorded. If gas is detected contact the OCD office for directions.
15. No more than 3000 feet is allowed between cement plugs in cased hole and no more than 2000 feet is allowed in open hole.
16. Formation Tops to be isolated with cement plugs, but not limited to are:
- Northwest See Figure A
 - South (Artesia) See Figure B
 - Potash See Figure C
 - In the R-111-P (Or as subsequently revised) Area a solid cement plug must be set across the salt section. Fluid used to mix the cement shall be saturated with the salts that are common to the section penetrated and in suitable proportions, not more than 3% calcium chloride (by weight of cement) will be considered the desired mixture whenever possible, woe 4 hours and tag, this plug will be 50' below the bottom and 50' above the top of the Formation.
 - South (Hobbs) See Figure D1 and D2
 - Areas not provided above will need to be reviewed with the OCD on a case by case basis.
17. Markers
- Dry hole marker requirements 19.15.25.10.
The operator shall mark the exact location of plugged and abandoned wells with a steel marker not less than four inches in diameter set in cement and extending at least four feet above mean ground level. The marker must include the below information:
 1. Operator name
 2. Lease name and well number
 3. API number
 4. Unit letter
 5. Section, Township and Range

- AGRICULTURE (Below grade markers)

In Agricultural areas a request can be made for a below ground marker. For a below ground marker the operator must file their request on a C-103 notice of intent, and it must include the following;

- A) Aerial photo showing the agricultural area
- B) Request from the landowner for the below ground marker.
- C) Subsequent plugging report for a well using a below ground marker must have an updated C-102 signed by a certified surveyor for SHL.

Note: A below ground marker is required with all pertinent information mentioned above on a plate, set 3' below ground level, a picture of the plate will be supplied to OCD for record, the exact location of the marker (longitude and latitude by GPS) will be provided to OCD. OCD requires a current survey to verify the location of the below ground marker, however OCD will accept a GPS coordinate that were taken with a GPS that has an accuracy of within 15 feet.

18. If work has not commenced within 1 year of the approval of this procedure, the approval is automatically expired. After 1 year a new [C-103] NOI Plugging (C-103F) must be submitted and approved prior to work.

Figure A

North Formations to be isolated with cement plugs are:

- San Jose
- Nacimiento
- Ojo Alamo
- Kirtland
- Fruitland
- Picture Cliffs
- Chacra (if below the Chacra Line)
- Mesa Verde Group
- Mancos
- Gallup
- Basin Dakota (plugged at the top of the Graneros)
- Deeper formations will be reviewed on a case-by-case basis

Figure B

South (Artesia) Formations to be isolated with cement plugs are:

- Fusselman
- Montoya
- Devonian
- Morrow
- Strawn
- Atoka
- Permo-Penn
- Wolfcamp
- Bone Springs
- Delaware , in certain areas where the Delaware is subdivided into;
 - 1. Bell Canyon
 - 2. Cherry Canyon
 - 3. Brushy Canyon
- Any salt sections
- Abo
- Yeso
- Glorieta
- San Andres
- Greyburg
- Queen
- Yates

Figure C

Potash Area R-111-P

T 18S – R 30E

Sec 10 Unit P. Sec 11 Unit M,N. Sec 13 Unit L,M,N. Sec 14 Unit C -P. Sec 15 Unit A G,H,I,J,K,N,O,P. Sec 22 Unit All

except for M. Sec 23, Sec 24 Unit C,D,E,L, Sec 26 Unit A-G, Sec 27 Unit A,B,C

T 19S – R 29E

Sec 11 Unit P. Sec 12 Unit H-P. Sec 13. Sec 14 Unit A,B,F-P. Sec 15 Unit P. Sec 22 Unit A,B,C,F,G,H,I,J K,N,O,P. Sec 23.

Sec 24. Sec 25 Unit D. Sec 26 Unit A- F. Sec 27 Unit A,B,C,F,G,H.

T 19S – R 30E

Sec 2 Unit K,L,M,N. Sec 3 Unit I,L,M,N,O,P. Sec 4 Unit C,D,E,F,G,I-P. Sec 5 Unit A,B,C,E-P. Sec 6 Unit I,O,P. Sec 7 – Sec

10. Sec 11 Unit D, G—P. Sec 12 Unit A,B,E-P. Sec 13 Unit A-O. Sec 14-Sec 18. Sec 19 Unit A-L, P. Sec 20 – Sec 23. Sec

24 Unit C,D,E,F,L,M,N. Sec 25 Unit D. Sec 26 Unit A-G, I-P. Sec 27, Sec 28, Sec 29 Unit

A,B,C,D,F,G,H,I,J,O,P. Sec 32

Unit A,B,G,H,I,J,N,O,P. Sec 33. Sec 34. Sec 35. Sec 36 Unit D,E,F,I-P.

T 19S – R 31E

Sec 7 Unit C,D,E,F,L. Sec 18 Unit C,D,E,F,G,K,L. Sec 31 Unit M. Sec 34 Unit P. Sec 35 Unit M,N,O. Sec 36 Unit O,P.

T 20S – R 29E

Sec 1 Unit H,I,P. Sec 13 Unit E,L,M,N. Sec 14 Unit B-P. Sec 15 Unit A,H,I,J,N,O,P. Sec 22 Unit A,B,C,F,G,H,I,J,O,P. Sec

23. Sec 24 Unit C,D,E,F,G,J-P. Sec 25 Unit A-O. Sec 26. Sec 27 Unit A,B,G,H,I,J,O,P. Sec 34 Unit A,B,G,H. Sec 35 Unit

A-H. Sec 36 Unit B-G.

T 20S – R 30E

Sec 1 – Sec 4. Sec 5 Unit A,B,C,E-P. Sec 6 Unit E,G-P. Sec 7 Unit A-H,I,J,O,P. Sec 8 – 17. Sec 18 Unit A,B,G,H,I,J,O,P.

Sec 19 Unit A,B,G,H,I,J,O,P. Sec 20 – 29. Sec 30 Unit A-L,N,O,P. Sec 31 Unit A,B,G,H,I,P. Sec 32 – Sec 36.

T 20S – R 31E

Sec 1 Unit A,B,C,E-P. Sec 2. Sec 3 Unit A,B,G,H,I,J,O,P. Sec 6 Unit D,E,F,J-P. Sec 7. Sec 8 Unit E-P. Sec 9 Unit E,F,J-P.

Sec 10 Unit A,B,G-P. Sec 11 – Sec 36.

T 21S – R 29E

Sec 1 – Sec 3. Sec 4 Unit L1 – L16,I,J,K,O,P. Sec 5 Unit L1. Sec 10 Unit A,B,H,P. Sec 11 – Sec 14. Sec 15 Unit A,H,I. Sec

23 Unit A,B. Sec 24 Unit A,B,C,D,F,G,H,I,J,O,P. Sec 25 Unit A,O,P. Sec 35 Unit G,H,I,J,K,N,O,P. Sec 36 A,B,C,F – P.

T 21S – R 30E

Sec 1 – Sec 36

T 21S – R 31E

Sec 1 – Sec 36

T 22S – R 28E

Sec 36 Unit A,H,I,P.

T 22S – R 29E

Sec 1. Sec2. Sec 3 Unit I,J,N,O,P. Sec 9 Unit G – P. Sec 10 – Sec 16. Sec 19 Unit H,I,J. Sec 20 – Sec 28. Sec 29 Unit

A,B,C,D,G,H,I,J,O,P. Sec 30 Unit A. Section 31 Unit C – P. Sec 32 – Sec 36

T 22S – R 30E

Sec 1 – Sec 36

T 22S – R 31E

Sec 1 – Sec 11. Sec 12 Unit B,C,D,E,F,L. Sec 13 Unit E,F,K,L,M,N. Sec 14 – Sec 23. Sec 24 Unit C,D,E,F,K,L,M,N. Sec 25

Unit A,B,C,D. Sec 26 Unit A,BC,D,G,H. Sec 27 – Sec 34.

T 23S – R 28E

Sec 1 Unit A

T 23S – R 29E

Sec 1 – Sec 5. Sec 6 Unit A – I, N,O,P. Sec 7 Unit A,B,C,G,H,I,P. Sec 8 Unit A – L, N,O,P. Sec 9 – Sec 16. Sec 17 Unit

A,B,G,H,I,P. Sec 21 – Sec 23. Sec 24 Unit A – N. Sec 25 Unit D,E,L. Sec 26. Sec 27. Sec 28 Unit A – J, N,O,P. Sec 33

Unit A,B,C. Sec 34 Unit A,B,C,D,F,G,H. Sec 35. Sec 36 Unit B,C,D,E,F,G,K,L.

T 23S – R 30E

Sec 1 – Sec 18. Sec 19 Unit A – I,N,O,P. Sec 20, Sec 21. Sec 22 Unit A – N, P. Sec 23, Sec 24, Sec 25. Sec 26 Unit

A,B,F-P. Sec 27 Unit C,D,E,I,N,O,P. Sec 28 Unit A – H, K,L,M,N. Sec 29 Unit A – J, O,P. Sec 30 Unit A,B. Sec 32 A,B. Sec

33 Unit C,D,H,I,O,P. Sec 34, Sec 35, Sec 36.

T 23S – R 31E

Sec 2 Unit D,E,J,O. Sec 3 – Sec 7. Sec 8 Unit A – G, K – N. Sec 9 Unit A,B,C,D. Sec 10 Unit D,P. Sec 11 Unit G,H,I,J,M,N,O,P. Sec 12 Unit E,L,K,M,N. Sec 13 Unit C,D,E,F,G,J,K,L,M,N,O. Sec 14. Sec 15 Unit A,B,E – P.

Sec 16 Unit

I, K – P. Sec 17 Unit B,C,D,E, I – P. Sec 18 – Sec 23. Sec 24 Unit B – G, K,L,M,N. Sec 25 Unit B – G, J,K,L. Sec 26 – Sec

34. Sec 35 Unit C,D,E.

T 24S – R 29E

Sec 2 Unit A, B, C, D. Sec 3 Unit A

T 24S – R 30E

Sec 1 Unit A – H, J – N. Sec 2, Sec 3. Sec 4 Unit A,B,F – K, M,N,O,P. Sec 9 Unit A – L. Sec 10 Unit A – L, O,P. Sec 11.

Sec 12 Unit D,E,L. Sec 14 Unit B – G. Sec 15 Unit A,B,G,H.

T 24S – R 31E

Sec 3 Unit B – G, J – O. Sec 4. Sec 5 Unit A – L, P. Sec 6 Unit A – L. Sec 9 Unit A – J, O, P. Sec 10 Unit B – G, K – N. Sec

35 Unit E – P. Sec 36 Unit E, K, L, M, N.

T 25S – R 31E

Sec 1 Unit C, D, E, F. Sec 2 Unit A – H.

Figure D1 and D2

South (Hobbs) Formations to be isolated with cement plugs are:

The plugging requirements in the Hobbs Area are based on the well location within specific areas of the Area (See Figure D1). The Formations in the Hobbs Area to be isolated with cement plugs are (see Figure D2)

Figure D1 Map

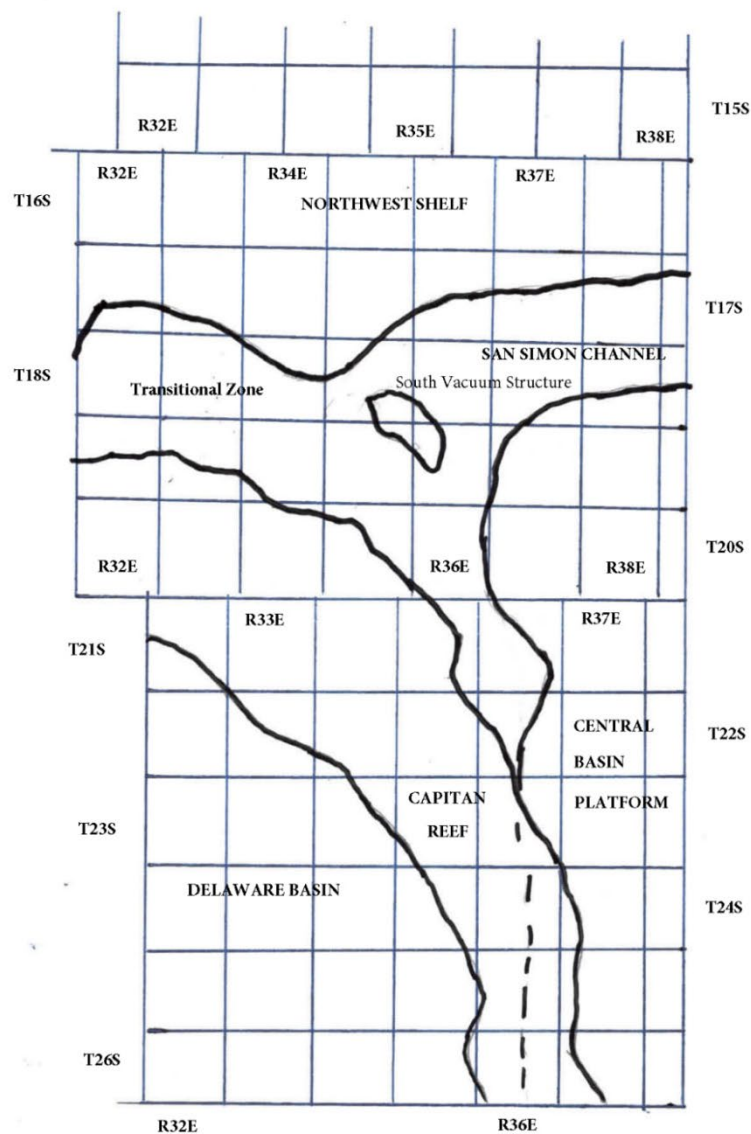


Figure D2 Formation Table

100' P'plug to isolate upper and lower fresh water zones (typiailly 2.50' to 350')						
NDIthwest Shelf	C;iptan Reef Area	Trani5ition Zone	San Simon Oh.annel	South \lacJUUm Structure	Delaware Basin	Ce<n,tiral Basin Platform
Granit \./ash (Detrital basement material and fractured pre-Cambrian basement rock)	Siluro-Devonian	Morrow	Siluro-Devonian	Ellenburger	Siluro-Devonian	Granit \./ash (Detrital basement material, fractured pre-Cambrian basement rock and fracture Mafic Volcanic intrusives).
Montoya	Mississippian	Atoka	Morrow	Mckee	Morrow	Ellenburger
Fusselman	Morrow	Strawn	\./olfcamp	Siluro-Devonian	Atoka	Connell
Woodford	Atoka	Cisco	Abo Reef	Woodford	Strawn	Waddell
Siluro-Devonian	Strawn	Pennsylvanian	Bone Spring	Mississippian	Pennsylvanian	Mckee
Chester	Pennsylvanian	\./olfcamp	Delaware	Barnett Shale	Low er \./olfcamp	Simpson Group
Austin	\./olfcamp	Bone Spring	San Andres	Morrow	Upper \./olfcamp	Montoya
Mississippian	Abo Reef, if present	Delaware	Queen	Atoka	\./olfcamp	Fusselman
Morrow	Abo, if present	San Andres	Yates	Strawn	Third Bone Spring Sand (Top of \./olfbone)	Silurian
Atoka	Queen, if present	Grayburg-San Andres	Base of Salt	Canyon	First Bone Spring Sand (Top of Lower Bone Spring)	Devonian
Lower Pennsylvanian	Bone Spring	Queen	Rustler	Pennsylvanian	Bone Spring	Strawn
Cisco-Canyon	Delaware	Seven Rivers		Blinebry	Brushy Canyon	Pennsylvanian
Pennsylvanian	Base Capitan Reef	Yates		Bone Spring	Delaw are (Base of Salt)	\./olfcamp
Bough	Seven Rivers	Base of Salt		San Andres	Rustler	Abo
\./olfcamp	Yates	Rustler		Queen		Abo Reef
Abo	Top Capitan Reef			Base of Salt		Drinkard
Abo Reef, if present	Base of Salt			Rustler		Tubb
Yeso (Township 15 South to Township 17 South)	Rustler					Blinebry
Drinkard or Low er Yeso (Township 15 South to Township 17 South)						Paddock
Tubb (Township 15 South to Township 17 South)						Glorieta
Blinebry (Township 15 South to Township 17 South)						San Andres
Paddock (Township 15 South to Township 17 South)						Grayburg
Glorieta						Grayburg-San Andres
San Andres						Queen
Queen (Township 15 South to Township 17 South)						Seven Rivers
Seven Rivers (Township 15 South to Township 17 South)						Yates
Yates (Township 15 South to Township 17 South)						Base of Salt
Base of Salt						Rustler
Rustler						

Sante Fe Main Office
Phone: (505) 476-3441

General Information
Phone: (505) 629-6116

Online Phone Directory
<https://www.emnrd.nm.gov/ocd/contact-us>

State of New Mexico
Energy, Minerals and Natural Resources
Oil Conservation Division
1220 S. St Francis Dr.
Santa Fe, NM 87505

CONDITIONS

Action 499973

CONDITIONS

Operator: SCHALK DEVELOPMENT CO P.O. Box 25825 Albuquerque, NM 87125	OGRID: 20389
	Action Number: 499973
	Action Type: [C-103] NOI Plug & Abandon (C-103F)

CONDITIONS

Created By	Condition	Condition Date
loren.diede	Notify the OCD inspection supervisor via email 24 hours prior to beginning Plug & Abandon (P&A) operations.	8/28/2025
loren.diede	A Cement Bond Log (CBL) is required to be submitted to electronic permitting.	8/28/2025
loren.diede	Modify Plug # 1 definition: To cover the PC perforations and the Fruitland formation top with the plug from 2096' to 1917'.	8/28/2025
loren.diede	Modify Plug 2: To be placed from 1654' to 1200' to cover the Kirtland and Ojo Alamo formation tops.	8/28/2025
loren.diede	Submit photo and GPS coordinates of the P&A marker with the final P&A reports. The API# on the marker is to be clearly legible,	8/28/2025
loren.diede	Change the county on the subsequent forms to reflect that the well is in Rio Arriba county, NM, not San Juan county.	8/28/2025