Ceived by OCD: 10/20/2025 8:44:28 Phone: (505) 476-3441	AM State of New Mexico	Form C-103 ¹ of
General Information Phone: (505) 629-6116	Energy, Minerals and Natural Resource	S Revised July 18, 2013 WELL API NO.
Online Phone Directory Visit: https://www.emnrd.nm.gov/ocd/contact-us/	OIL CONSERVATION DIVISION 1220 South St. Francis Dr. Santa Fe, NM 87505	5. Indicate Type of Lease STATE FEE 6. State Oil & Gas Lease No.
(DO NOT USE THIS FORM FOR PROPOSA	ES AND REPORTS ON WELLS LS TO DRILL OR TO DEEPEN OR PLUG BACK TO A TION FOR PERMIT" (FORM C-101) FOR SUCH	7. Lease Name or Unit Agreement Name Resler Yates State
	as Well Other	8. Well Number #332
2. Name of Operator Sandlott En	ergy (Jackie Brewer DBA)	9. OGRID Number 154329
3. Address of Operator P.O. Box 7 Lovington,		10. Pool name or Wildcat (3230) Artesia; Queen-Grayburg-San Andre s
4. Well Location Unit LetterJ:		
Section 29	Township 18S Range 28E	NMPM Eddy County
	11. Elevation (Show whether DR, RKB, RT, GR	R, etc.)
12. Check Ap	opropriate Box to Indicate Nature of Not	ice, Report or Other Data
TEMPORARILY ABANDON	PLUG AND ABANDON 🛚 REMEDIAL \	DRILLING OPNS. P AND A
	<u> </u>	s, and give pertinent dates, including estimated date
of starting any proposed work	x). SEE RULE 19.15.7.14 NMAC. For Multiple	
proposed completion or recor	mpletion.	
Please see attached p	rocedure & wellbore schematics	
_		
Spud Date:	Rig Release Date:	
I hereby certify that the information ab	pove is true and complete to the best of my know	vledge and belief.
SIGNATURE	TITLE	DATE
Type or print name	E-mail address:	PHONE:
For State Use Only		
APPROVED BY:Conditions of Approval (if any):	TITLE	DATE

Mewbourne Oil Company

Plug and Abandon


Wellname:	Resler Yates State #33	2		
Location:	2310' FSL & 2310' FEL;Sec J- NM	29-18S-28E; Eddy Co,		
Date:	August 7, 2025			
API#:	30-015-02109	Surf Csg Set:	7" 20# J-55	
Csg Size:	4 1/2" 9.5# J-55	Set @:	513'	
Set @:	2023'	Inter #1:		
Perfs:	1995'-2000' (20 shots)	Set @:		

Well is to be plugged & abandoned.


Procedure:

- 1. MIRU plugging crew.
- 2. ND WH & NU BOP.
- 3. POOH w/tbg.
- 4. RIH & set CIBP @ 1974'.
- 5. Test csg to 500# for 30 mins.
- 6. Circulate capacity of MLF (35 bbls).
- 7. POOH w/tbg & MIRU WL.
- 8. Run cement bond log and verify tops of cement.
- 9. POOH & RDMO WL.
- 10. RIH & spot 40 sks Class C neat cmt on CIBP (± 550').
- 11. WOC 6 hrs & tag plug @ 1424' or higher (Top Grayburg @ 1989').
- 12. POOH w/tbg to 563' & circulate 40 sks Class C neat cmt (±563').
- 13. WOC 6 hrs & confirm that wellbore remains full.
- 14. Cut off WH & install dry hole marker. Cut off anchors & clean location.

RESLER YATES STATE #332- Before WBS

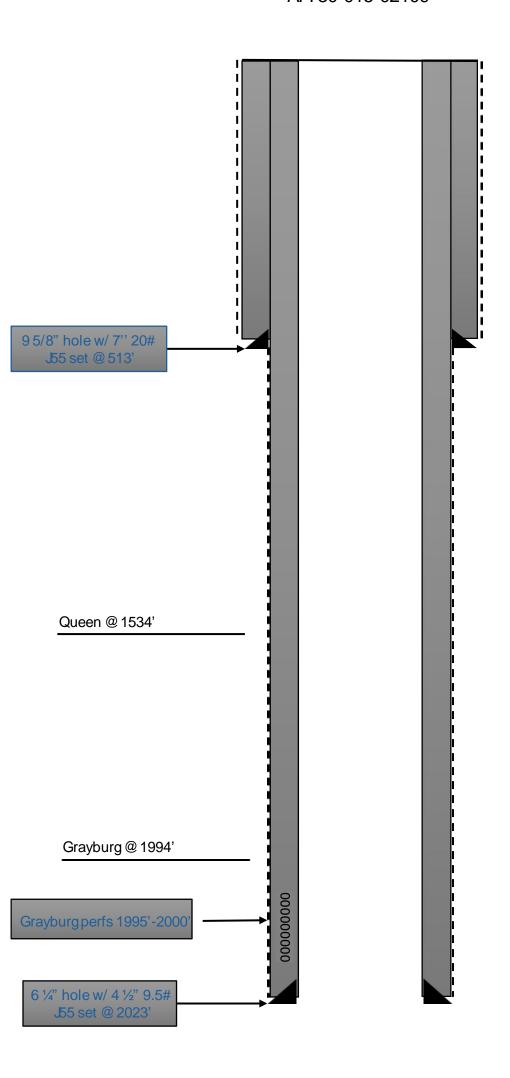

RESLER YATES STATE #332- Final WBS

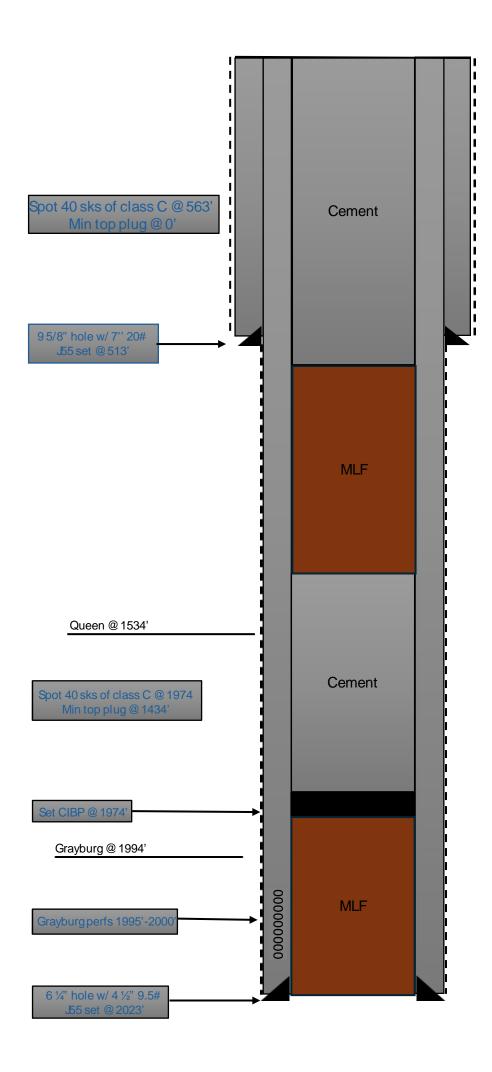

Santa Fe Main Office Phone: (505) 476-3441	State of New Mexico	Form C-103
General Information	Energy, Minerals and Natural Resources	Revised July 18, 2013 WELL API NO.
Phone: (505) 629-6116	OIL CONSERVATION DIVISION	305013-02015
Online Phone Directory Visit:	1220 South St. Francis Dr.	5. Indicate Type of Lease
	Santa Fe, NM 87505	STATE FEE 6. State Oil & Gas Lease No.
(DO NOT USE THIS FORM FOR PROPOSALS DIFFERENT RESERVOIR. USE "APPLICATION"	S AND REPORTS ON WELLS IS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DN FOR PERMIT" (FORM C-101) FOR SUCH	7. Lease Name or Unit Agreement Name Rester Yares State
PROPOSALS.) 1. Type of Well: Oil Well Gas	Well Other	8. Well Number
2. Name of Operator	gy (Jackie Brewer DBA)	9. OGRID Number
3. Address of Operator P.O Box 711	/	10. Pool name or Wildcat (3230)
Lovington, N		Artesia; Queen-Gillyburg San Andre
4. Well Location		
	Sitefeet from theSouth line and	
Section 29	Township Range 389 1. Elevation (Show whether DR, RKB, RT, GR, e	NMPM Edds County
1	1. Elevation (Snow whether DR, RRB, R1, GR, e	(C.)
12. Check Appr	ropriate Box to Indicate Nature of Notice	e, Report or Other Data
NOTICE OF INTE		BSEQUENT REPORT OF:
<u> </u>	LUG AND ABANDON ☑ REMEDIAL WO HANGE PLANS ☐ COMMENCE D	RK ☐ ALTERING CASING ☐ ☐ RILLING OPNS.☐ P AND A ☐ ☐
-	ULTIPLE COMPL CASING/CEME	
DOWNHOLE COMMINGLE		_
CLOSED-LOOP SYSTEM OTHER:	OTHER:	
	OTHER:	and give pertinent dates, including estimated date
of starting any proposed work).	SEE RULE 19.15.7.14 NMAC. For Multiple C	
proposed completion or recomp	letion.	
Please see attached pro	ocedure & wellbore schematics	
6. 15.	Di Di D	
Spud Date:	Rig Release Date:	
"	·	
I hereby certify that the information above	ve is true and complete to the best of my knowled	lge and belief.
\sim \mathcal{R}		,
SIGNATURE J. Teur	TITLE	DATE 9/25/2025
Trung on maint u		/ /
Type or print name / For State Use Only	E-mail address:	PHUNE:
•		
APPROVED BY: Conditions of Approval (if any):	TTTLE	DATE

Plug and Abandon

 Resler Yates State #332

 Location:
 2310' FSL & 2310' FEL; Sec J-29-18S-28E; Eddy Co, NM

 Date:
 August 7, 2025

 API #:
 30-015-02109
 Surf Csg Set: 7" 20# J-55

 Csg Size:
 4 1/2" 9.5# J-55
 Set @: 513'

 Set @:
 2023'
 Inter #1:


 Perfs:
 1995'-2000' (20 shots)
 Set @:

Well is to be plugged & abandoned.


Procedure:

- 1. MIRU plugging crew.
- 2. ND WH & NU BOP.
- 3. POOH w/tbg.
- RIH & set CIBP @ 1974'.
- 5. Test csg to 500# for 30 mins.
- 6. Circulate capacity of MLF (35 bbls).
- 7. POOH w/tbg & MIRU WL.
- 8. Run cement bond log and verify tops of cement.
- 9. POOH & RDMO WL.
- 10. RIH & spot 40 sks Class C neat cmt on CIBP (± 550').
- 11. WOC 6 hrs & tag plug @ 1424' or higher (Top Grayburg @ 1989').
- 12. POOH w/tbg to 563' & circulate 40 sks Class C neat cmt (±563').
- 13. WOC 6 hrs & confirm that wellbore remains full.
- 14. Cut off WH & install dry hole marker. Cut off anchors & clean location.

RESLER YATES STATE #332- Before WBS

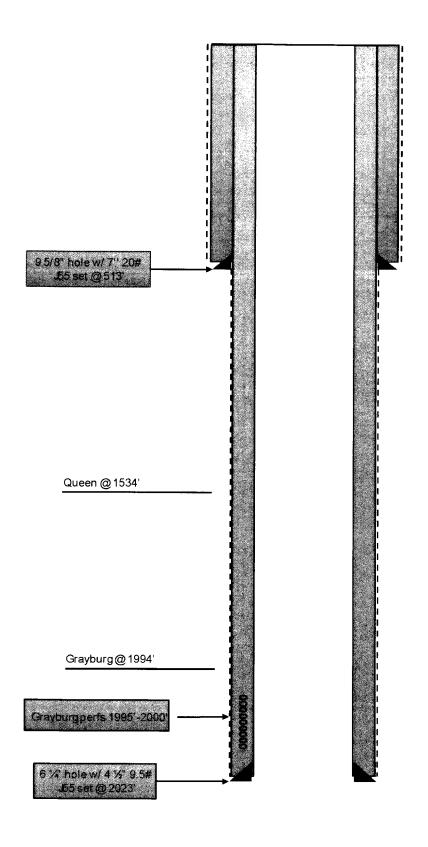

RESLER YATES STATE #332- Final WBS

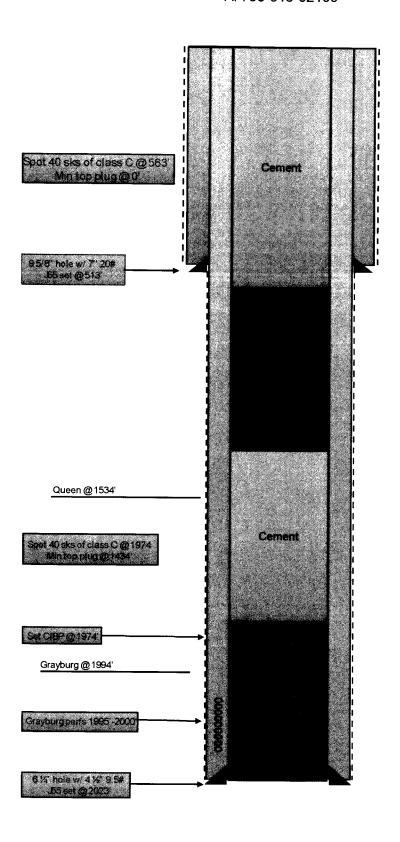

Sante Fe Main Office Phone: (505) 476-3441

General Information Phone: (505) 629-6116

Online Phone Directory https://www.emnrd.nm.gov/ocd/contact-us

State of New Mexico Energy, Minerals and Natural Resources Oil Conservation Division 1220 S. St Francis Dr. Santa Fe, NM 87505

CONDITIONS

Action 517914

CONDITIONS

Operator:	OGRID:
MEWBOURNE OIL CO	14744
P.O. Box 5270	Action Number:
Hobbs, NM 88241	517914
	Action Type:
	[C-103] NOI Plug & Abandon (C-103F)

CONDITIONS

Created By	Condition	Condition Date
loren.diede	Notify the OCD inspection supervisor via email 24 hours prior to beginning Plug & Abandon (P&A) operations.	10/23/2025
loren.diede	NMOCD does not consider this well to be within the LPCH restricted area and an above ground P&A marker is required. NMOCD requires that plug (s) be added to cover the 7 Rivers = (930') and Yates = (600') formation tops. Submit photo and GPS coordinates of the P&A marker with the final P&A reports. The API# on the marker is to be clearly legible. Run CBL from CIBP to surface. Submit the CBL tif file to NMOCD for uploading into the Well Log File.	10/23/2025