


Big Wait Battery Area #1

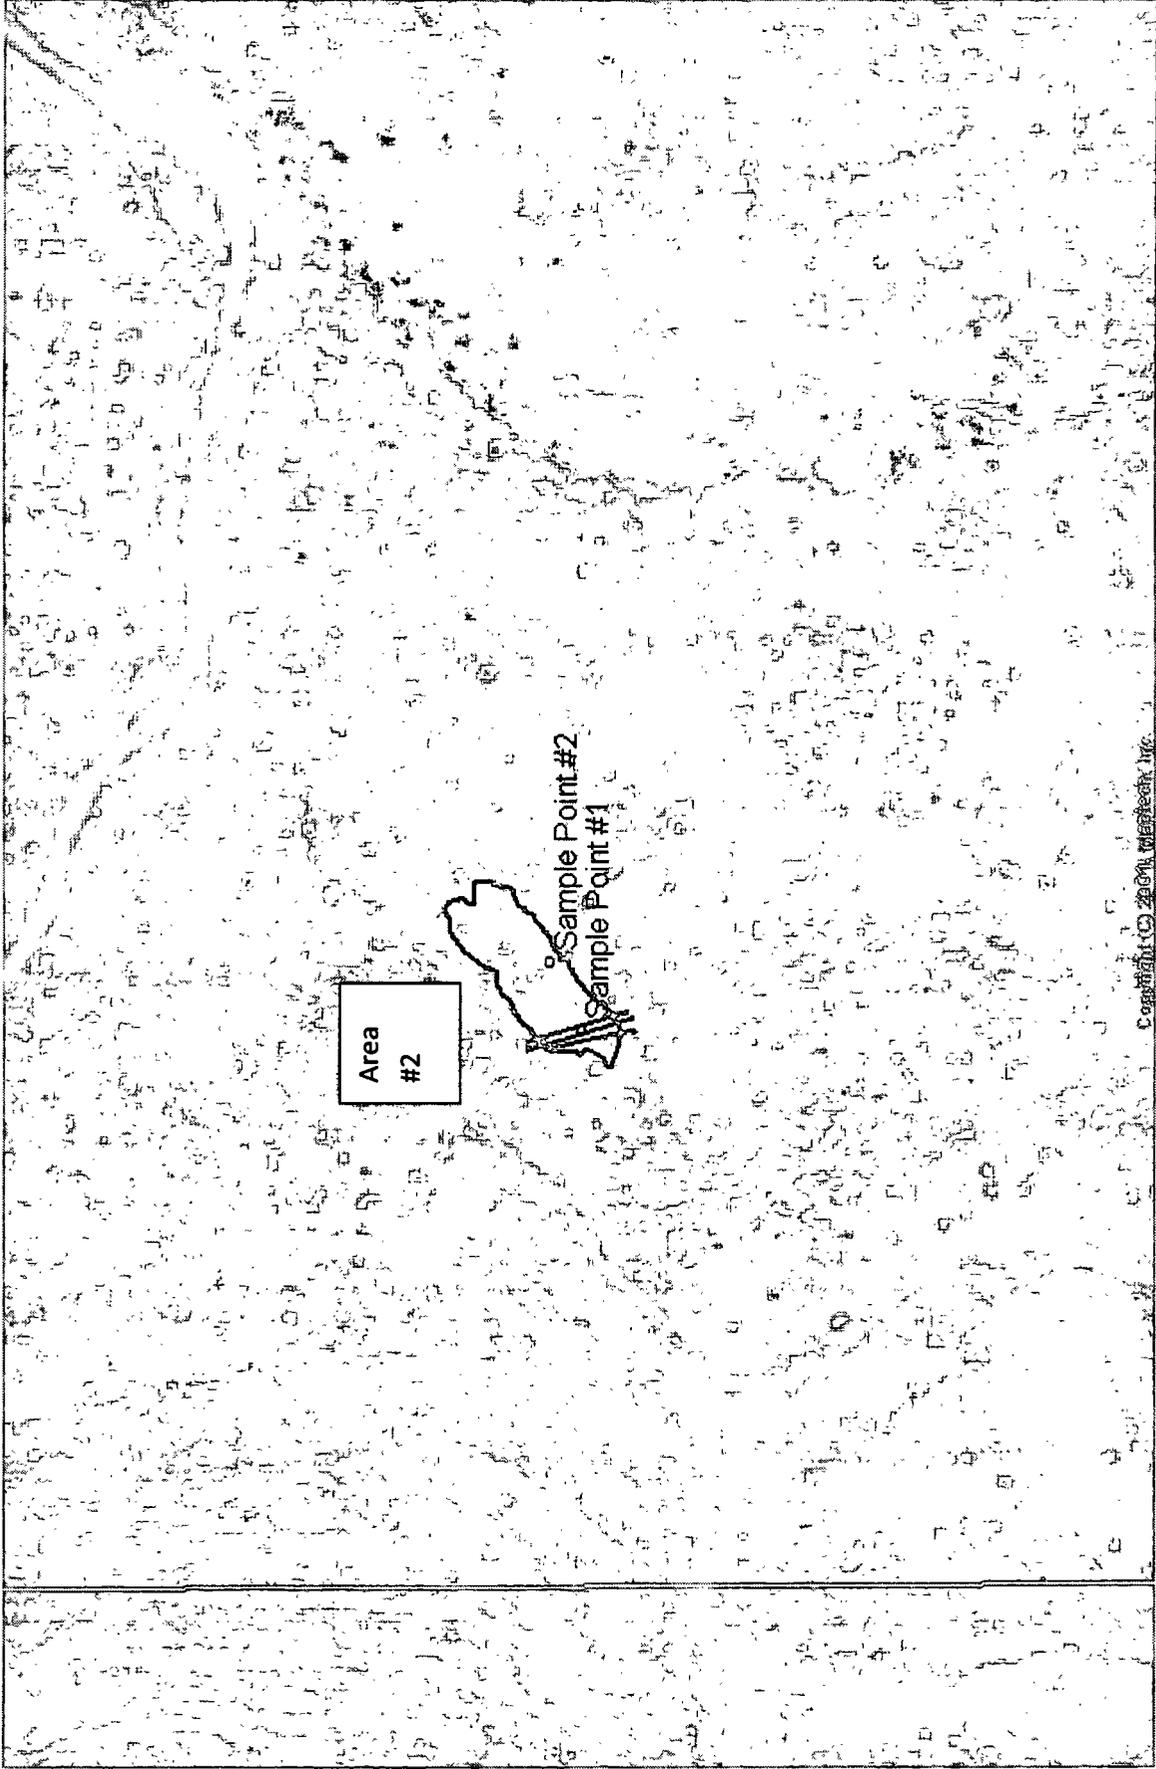

Copyright © 2004 Westech, Inc.

Big Walt Battery Area #2

Big Walt Battery Results:

October 8, 2007

Sample point	Chlorides	Benzene	Toluene	Ethyl Benzene	Xyolene	TPH
#1	300	ND	19	6.1	69	75,000
#2	130	ND	6.8	2.6	36	51,000
#3	200	ND	9.9	3.6	36	48,000
#4	560	ND	1.1	0.80	6.5	28,000
#5	92	ND	93	27	300	87,000
Background	ND	ND	ND	ND	ND	ND

June 18, 2008

Sample point	Chlorides	Benzene	Toluene	Ethyl Benzene	Xyolene	TPH
#1	74	ND	ND	ND	ND	47,000
#2	100	ND	ND	ND	ND	44,000
#3	260	ND	ND	ND	ND	31,000
#4	170	ND	ND	ND	ND	26,000

October 3, 2008

Sample point	Chlorides	Benzene	Toluene	Ethyl Benzene	Xyolene	TPH
#1	96	ND	ND	ND	ND	970
#2	350	ND	ND	ND	ND	22,000
#3	22	ND	ND	ND	ND	4,900
#4	130	ND	ND	ND	ND	31,000
SP #1 Area 2	450	ND	ND	ND	ND	27,000
SP #2 Area 2	280	ND	ND	ND	ND	25