

Submit 1 Copy To Appropriate District
Office
District I - (575) 393-6161
1625 N. French Dr., Hobbs, NM 88240
District II - (575) 748-1283
811 S. First St., Artesia, NM 88210
District III - (505) 334-6178
1000 Rio Brazos Rd., Aztec, NM 87410
District IV - (505) 476-3460
1220 S. St. Francis Dr., Santa Fe, NM
87505

State of New Mexico
Energy, Minerals and Natural Resources

Form C-103
Revised August 1, 2011

OIL CONSERVATION DIVISION
1220 South St. Francis Dr.
Santa Fe, NM 87505

SUNDRY NOTICES AND REPORTS ON WELLS (DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH PROPOSALS.)		WELL API NO. 30-015-26012
1. Type of Well: Oil Well <input checked="" type="checkbox"/> Gas Well <input type="checkbox"/> Other <input type="checkbox"/>		5. Indicate Type of Lease STATE <input type="checkbox"/> FEE <input type="checkbox"/>
2. Name of Operator SM ENERGY COMPANY		6. State Oil & Gas Lease No.
3. Address of Operator 3300 N "A" ST BLDG 7-200 MIDLAND, TX 79705		7. Lease Name or Unit Agreement Name PARKWAY DELAWARE UNIT
4. Well Location Unit Letter P : 660 feet from the SOUTH line and 810 feet from the EAST line Section 35 Township 19S Range 29E NMPM County EDDY		8. Well Number 801
11. Elevation (Show whether DR, RKB, RT, GR, etc)		9. OGRID Number 154903
		10. Pool name or Wildcat PARKWAY;DELAWARE

12. Check Appropriate Box to Indicate Nature of Notice, Report or Other Data

NOTICE OF INTENTION TO:
PERFORM REMEDIAL WORK ☐ PLUG AND ABANDON ☐
TEMPORARILY ABANDON ☐ CHANGE PLANS ☐
PULL OR ALTER CASING ☒ MULTIPLE COMPL ☐
DOWNHOLE COMMINGLE ☐


SUBSEQUENT REPORT OF:
REMEDIAL WORK ☐ ALTERING CASING ☐
COMMENCE DRILLING OPNS. ☐ P AND A ☐
CASING/CEMENT JOB ☐

OTHER: ☐ OTHER: ☐

13. Describe proposed or completed operations. (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Completions: Attach wellbore diagram of proposed completion or recompletion.

ISOLATE WELL. REMOVE PUMPING UNIT TO REPAIR SURFACE CASING. ONCE AREA IS CLEAR, WE WILL DIG AROUND THE WELLHEAD UNTIL WE REACH USEABLE PIPE. AT THAT POINT, WE WILL CUT OFF CORRODED PIPE AND WILL RE-WELD NEW SURFACE CASING AND WELLHEAD INTO PLACE.

~ Federal Hall ~

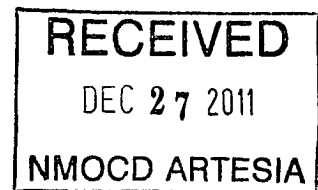

Spud Date:

Rig Release Date:

I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNATURE Vickie Martinez TITLE ENGINEER TECH II DATE 12/21/2011

Type or print name VICKIE MARTINEZ E-mail address: VMARTINEZ@SM-ENERGY.COM PHONE: (432)688-1709

For State Use Only

ACCEPTED BY: T. C. Shogard TITLE Geologist DATE 1/13/2012
For Record