

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

FORM APPROVED
Budget Bureau No. 1004-0135
Expires: March 31, 1993

SUNDRY NOTICES AND REPORTS ON WELLS

Do not use this form for proposals to drill or to deepen or reentry to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals

5. Lease Designation and Serial No.
LC-029426-B

6. If Indian, Allottee or Tribe Name

SUBMIT IN TRIPLICATE

RECEIVED

FEB 02 1993

1. Type of Well

Oil Well Gas Well Other WIW

2. Name of Operator

SOCORRO PETROLEUM COMPANY

O. C. D.

3. Address and Telephone No.

P.O. BOX 38, LOCO HILLS, N.M. (505) 677-3223

4. Location of Well (Footage, Sec., T., R., M., or Survey Description)

660' FSL, 1980' FEL, Sec 3-T17S-R31E

7. If Unit or CA, Agreement Designation

8. Well Name and No.

H.E. WEST "B" # 18

9. API Well No.

30-015-05057

10. Field and Pool, or Exploratory Area

GRAYBURG JACKSON

11. County or Parish, State

EDDY CO., N.M.

12. CHECK APPROPRIATE BOX(S) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

TYPE OF SUBMISSION

- Notice of Intent
 Subsequent Report
 Final Abandonment Notice


TYPE OF ACTION

- Abandonment
 Recompletion
 Plugging Back
 Casing Repair
 Altering Casing
 Other Clean out, Log & Acidize
 Change of Plans
 New Construction
 Non-Routine Fracturing
 Water Shut-Off
 Conversion to Injection
 Dispose Water

(Note: Report results of multiple completion or Well Completion or Recompletion Report and Log form 1)

13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

- 1.) Dig small working pit. Bleed well down. Haul excess wtr. Catch wtr samples & analyze for solids, hydrocarbons & bacteria.
- 2.) Release pkr. POH w/tbg & pkr.
- 3.) RIH w/tbg & bit or bailer.
- 4.) Clean out well to TD.
- 5.) Run cased hole logs.
- 6.) Acidize well to clean perms & remove any near well bore damage. Flow & swab back acid residue. Drain and back fill working pit.
- 7.) RIH w/plastic coated tbg & pkr. Set pkr no more than \pm 50' above top perf. Place one drum of corrosion inhibitor in casing annulus & pressure test. Must hold 300# for 30 minutes.
- 8.) Place well on injection & establish injection rate.

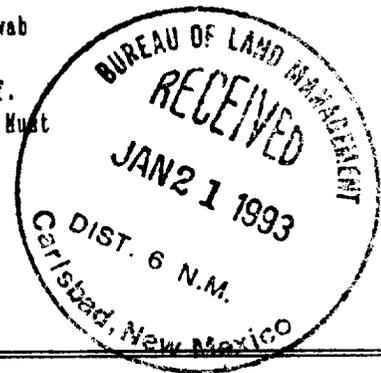

14. I hereby certify that the foregoing is true and correct

Signed

[Signature]

Title Production Manager

Date 1-21-93

(This space for Federal or State official use)

Approved by

[Signature]

Title PETROLEUM ENGINEER

Date 1-22-93

Conditions of approval, if any:

CLSF