
fax (505)746-9539



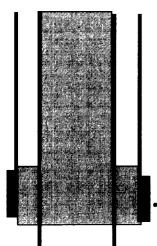

Perforate casing 50' above 8 5/8" casing shoe and circulate cement to surface in and out.

8 5/8" 28# @ 505' Cmt. w/50 sks.

Top Salt 515'

Base Salt 1255'

5 1/2" 14# @ 1906" cmt. w/100 sks.

Tag bottom spot cmt. plug from PBTD to 1850' 50' above 5 1/2 shoe, Tag plug at 1850'

Open Hole 1906'-1982'