


Operator COG Resources
 Well Yates B #1
 Unit P Section 12 Township 18 Range 30
 API # 30-015-04507

TOPS

Salado ~ 685'
 B Salt ~ 1558'
 Yates ~ 1750'
 Trivers ~ 2000'
 Bowers ~ 2600'
 Queen ~ 2850'
 Grayburg ~ 3350'
 San Antonio ~ 3500'

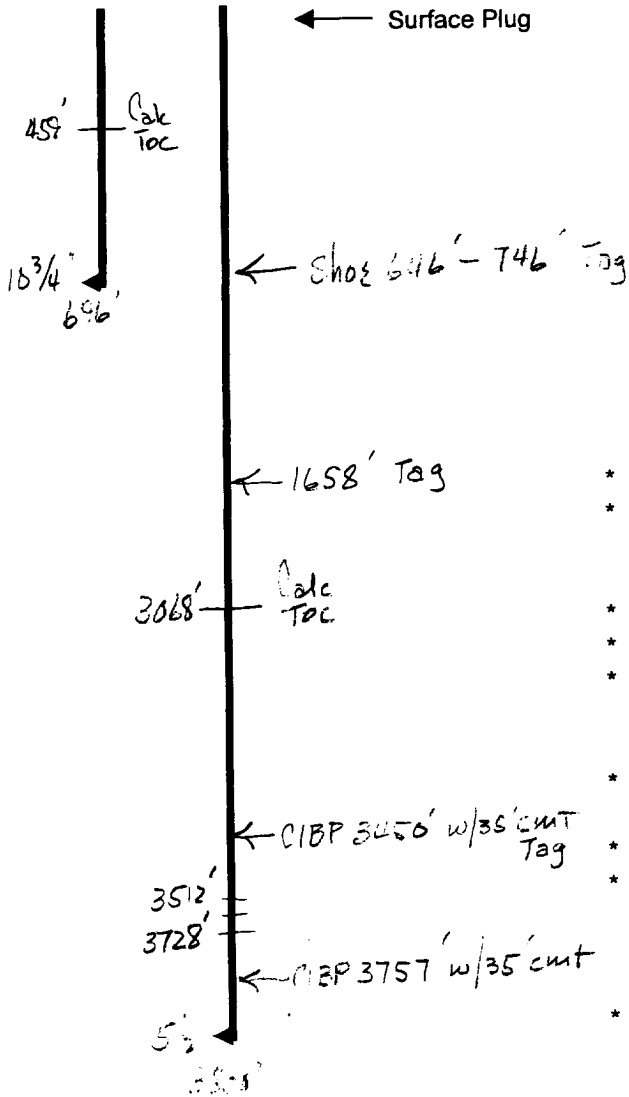

- * Contact OCD 24 hrs. prior to any work done.
- * Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.
- * Install dry hole marker as per Rule 202.B.2
- * Plugs are to be set from point indicated up.
- * Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
- * Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- * Surface plug will be from 0' - 60'
- * Where plugs are required, cement must be placed inside and outside of all casing string(s) in the correct footage or sacks required, if no cement exists.
- * Plugs to be tagged will be indicated.

Written from Approved Federal Sundry

16