

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

SUNDRY NOTICES AND REPORTS ON WELLS
Do not use this form for proposals to drill or to re-enter an abandoned well. Use Form 3160-3 (APD) for such proposals.

FORM APPROVED
OMB No. 1004-0135
Expires November 30, 2000

SUBMIT IN TRIPLICATE - Other instructions on reverse side

1. Type of Well

☒ Oil Well ☐ Gas Well ☐ Other

2. Name of Operator *Vulcan Minerals*

% NMOC

3a. Address *1000 Rio Brazos Rd.*

Aztec, NM 87410

3b. Phone No. (include area code)

334-6178

4. Location of Well (Footage, Sec., T., R., M., or Survey Description)

Sec. 32, T 31N, R 16W

2110/N & 2020/E

5. Lease Serial No.

14-20-603-734

6. If Indian, Allottee or Tribe Name

Navajo

7. If Unit or CA/Agreement, Name and/or No.

Horseshoe Gallup Unit

8. Well Name and No.

43 HGU

9. API Well No.

30045 10194

10. Field and Pool, or Exploratory Area

Horseshoe Gallup

11. County or Parish, State

San Juan NM

12. CHECK APPROPRIATE BOX(ES) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

TYPE OF SUBMISSION	TYPE OF ACTION			
<input checked="" type="checkbox"/> Notice of Intent	<input type="checkbox"/> Acidize	<input type="checkbox"/> Deepen	<input type="checkbox"/> Production (Start/Resume)	<input type="checkbox"/> Water Shut-Off
<input type="checkbox"/> Subsequent Report	<input type="checkbox"/> Alter Casing	<input type="checkbox"/> Fracture Treat	<input type="checkbox"/> Reclamation	<input type="checkbox"/> Well Integrity
<input type="checkbox"/> Final Abandonment Notice	<input type="checkbox"/> Casing Repair	<input type="checkbox"/> New Construction	<input type="checkbox"/> Recomplete	<input type="checkbox"/> Other _____
	<input type="checkbox"/> Change Plans	<input checked="" type="checkbox"/> Plug and Abandon	<input type="checkbox"/> Temporarily Abandon	
	<input type="checkbox"/> Convert to Injection	<input type="checkbox"/> Plug Back	<input type="checkbox"/> Water Disposal	

13. Describe Proposed or Completed Operation (clearly state all pertinent details, including estimated starting date of any proposed work and approximate duration thereof. If the proposal is to deepen directionally or recompleat horizontally, give subsurface locations and measured and true vertical depths of all pertinent markers and zones. Attach the Bond under which the work will be performed or provide the Bond No. on file with BLM/BIA. Required subsequent reports shall be filed within 30 days following completion of the involved operations. If the operation results in a multiple completion or recompleat in a new interval, a Form 3160-4 shall be filed once testing has been completed. Final Abandonment Notices shall be filed only after all requirements, including reclamation, have been completed, and the operator has determined that the site is ready for final inspection.)

See attached plugging procedure.

14. I hereby certify that the foregoing is true and correct

Name (Printed/Typed)

NMOC Contract Plugging

Title

Signature

NMOC

Date

4/2/02

THIS SPACE FOR FEDERAL OR STATE OFFICE USE

Approved by

Original Signed: *Stephen Mason*

Title

Date

4/2/02

Conditions of approval, if any, are attached. Approval of this notice does not warrant or certify that the applicant holds legal or equitable title to those rights in the subject lease which would entitle the applicant to conduct operations thereon.

Office

Title 18 U.S.C. Section 1001 and Title 43 U.S.C. Section 1212, make it a crime for any person knowingly and willfully to make to any department or agency of the United States any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction.

NMOC

API WELL # Well Name Well # Operator Name Type Stat County UL Sec Twp N/S Rng W/E Feet NS Ft EW Order_No
30-045-10194 HORSESHOE GALLUP UNIT 043 PLAYA MINERALS & ENERGY INC O A San Juan G 32 31 N 16 W 2110 N 2020
E

status csg_1 csg_1q csg_1d csg_3 csg_3q csg_3d tubing t_set_dept csg_perf CO 8 5/8
102 110S 4 1/2 1271 120S 2 7/8 1271 1127-1362

Procedure

MIRU, NUBOPE,

POOH Lay Down Rods & Tubing if present,

RIH with Gauge ring,

Pick up work string, Run Scraper if required,

RIH Set CIBP 1030 ', cap with 216 'cement .

Test casing.

POOH lay down tubing.

RU wire line RIH, perforate @ 152 ' + - 50' under surface casing shoe or Mesa Verde base whichever is lower..

Establish Circulation; circulate cement to surface inside and outside casing


Cut off well head and install P&A marker

Cut off anchors 2' below ground

Clean and level location

WELL NAME 43 HGU
 SEC, TWN, RNG. 32-31N-16W

Mancoos

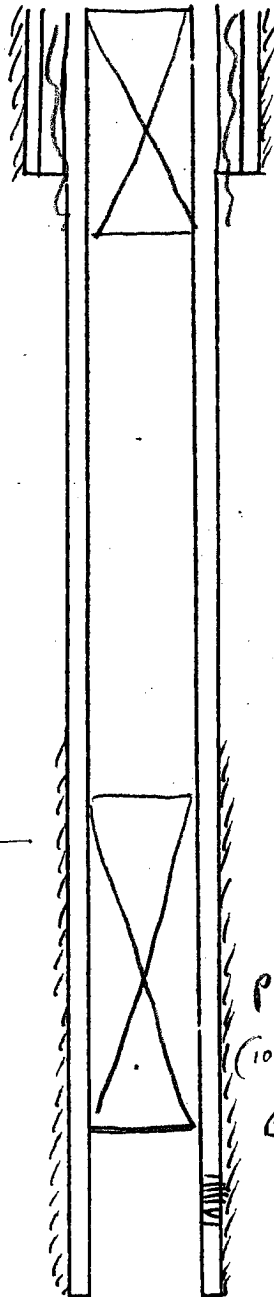

8 5/8" 24 #
 102'

plug 152 - surface

$$152 / 10.96 (1.18) = 12 \text{ sks}$$

$$50 / 4.3899 (1.18) = 10 \text{ sks}$$

$$102 / 4.046 (1.18) = \frac{21}{43} \text{ sks}$$

TOC @ 769' 75% eff

Gallup 864'

plug 1030' - 864'

$$(1030 - 864) + 50 / 10.96 (1.18) = 21 \text{ sks}$$

BP @ 1030'

Pert @ 1127' - 1270'

4 1/2" 9.5 #
 1271'

SURFACE CASING

SIZE HOLE _____"
 SIZE CASING _____"
 Annular Volume _____ ft³/ft.
 Cement _____ sks
 Volume _____ ft³

INTERMEDIATE CASING

SIZE HOLE _____"
 SIZE CASING _____"
 Annular Volume _____ f
 Cement _____ s
 Volume _____ f