

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENTFORM APPROVED
OMB NO. 1004-0135
Expires: November 30, 2000**SUNDRY NOTICES AND REPORTS ON WELLS**
Do not use this form for proposals to drill or to re-enter an abandoned well. Use form 3160-3 (APD) for such proposals.**SUBMIT IN TRIPLICATE - Other instructions on reverse side.**

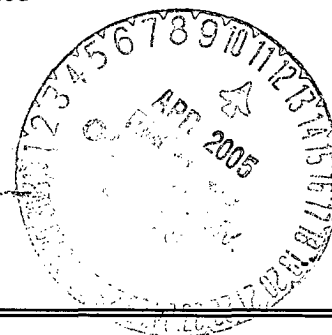
1. Type of Well <input checked="" type="checkbox"/> Oil Well <input type="checkbox"/> Gas Well <input type="checkbox"/> Other		5. Lease Serial No. JIC65
2. Name of Operator CONOCOPHILLIPS		6. If Indian, Allottee or Tribe Name JICARILLA APACHE
3a. Address PO BOX 2197 WL3 6106 HOUSTON, TX 77252		7. If Unit or CA/Agreement, Name and/or No.
3b. Phone No. (include area code) Ph: 832.486.2326 Fx: 832.486.2688		8. Well Name and No. JICARILLA 22 7
4. Location of Well (Footage, Sec., T., R., M., or Survey Description) Sec 21 T25N R4W NENE 990FNL 990FEL		9. API Well No. 30-039-20447-00-C1
		10. Field and Pool, or Exploratory W LINDRITH
		11. County or Parish, and State RIO ARRIBA COUNTY, NM

12. CHECK APPROPRIATE BOX(ES) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

TYPE OF SUBMISSION	TYPE OF ACTION			
<input checked="" type="checkbox"/> Notice of Intent	<input type="checkbox"/> Acidize	<input type="checkbox"/> Deepen	<input type="checkbox"/> Production (Start/Resume)	<input type="checkbox"/> Water Shut-Off
<input type="checkbox"/> Subsequent Report	<input type="checkbox"/> Alter Casing	<input type="checkbox"/> Fracture Treat	<input type="checkbox"/> Reclamation	<input type="checkbox"/> Well Integrity
<input type="checkbox"/> Final Abandonment Notice	<input type="checkbox"/> Casing Repair	<input type="checkbox"/> New Construction	<input type="checkbox"/> Recomplete	<input type="checkbox"/> Other
	<input type="checkbox"/> Change Plans	<input type="checkbox"/> Plug and Abandon	<input checked="" type="checkbox"/> Temporarily Abandon	
	<input type="checkbox"/> Convert to Injection	<input type="checkbox"/> Plug Back	<input type="checkbox"/> Water Disposal	

13. Describe Proposed or Completed Operation (clearly state all pertinent details, including estimated starting date of any proposed work and approximate duration thereof. If the proposal is to deepen directionally or recompleate horizontally, give subsurface locations and measured and true vertical depths of all pertinent markers and zones. Attach the Bond under which the work will be performed or provide the Bond No. on file with BLM/BIA. Required subsequent reports shall be filed within 30 days following completion of the involved operations. If the operation results in a multiple completion or recompleation in a new interval, a Form 3160-4 shall be filed once testing has been completed. Final Abandonment Notices shall be filed only after all requirements, including reclamation, have been completed, and the operator has determined that the site is ready for final inspection.)

This well has been inactive for a year. We request approval to permanently plug the Dakota and temporarily abandon the Mesaverde to give us time to evaluate a recompleate in this well. Attached is the procedure.

THIS APPROVAL EXPIRES 4/1/06

14. I hereby certify that the foregoing is true and correct.	
Electronic Submission #55160 verified by the BLM Well Information System For CONOCOPHILLIPS, sent to the Rio Puerco Committed to AFMSS for processing by MATTHEW HALBERT on 04/07/2005 (05MXH0020SE)	
Name (Printed/Typed) DEBORAH MARBERRY	Title SUBMITTING CONTACT
Signature (Electronic Submission)	Date 03/18/2005

THIS SPACE FOR FEDERAL OR STATE OFFICE USE

Approved By <u>STEPHEN MASON</u>	Title <u>PETROLEUM ENGINEER</u>	Date <u>04/08/2005</u>
Conditions of approval, if any, are attached. Approval of this notice does not warrant or certify that the applicant holds legal or equitable title to those rights in the subject lease which would entitle the applicant to conduct operations thereon.		Office <u>Rio Puerco</u>

Title 18 U.S.C. Section 1001 and Title 43 U.S.C. Section 1212, make it a crime for any person knowingly and willfully to make to any department or agency of the United States any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction.

**** BLM REVISED ** BLM REVISED ** BLM REVISED ** BLM REVISED ** BLM REVISED ******NMOCD**



San Juan Temporary Anbandoment Procedure

Jicarilla 22-#7

"Our work is never so urgent or important that we cannot take time to do it safely."
Workover Proposal: Temporarily abandon the Mesa Verde and permanently abandon the Dakota.

PROCEDURE:

Ensure that well is shut in, energy isolated, locked and tagged out; Cathodic protection disconnected.

1. Notify Operator, Travis Chavez 505 320-1537.
2. Prepare Location. Test anchors to 10,000 lbs.
3. RU WL and retrieve plunger & spring. RD WL.
4. Hold Safety Meeting.
5. MI & RU WO rig.
6. The well is a Category 2/Class 2 designation. Thus, two untested or one tested barrier will be needed to kill the well.
7. ND wellhead and NU BOPE. (Refer to COPC well control manual, Sec 6.13 for pressure testing procedure).
8. Remove the BPV and stab landing joint. POOH w/ tubing. Inspect and replace any bad joints of tubing.
9. RIH with bit and scraper down to 6900'.
10. RIH and set CIBP at **6850'** and dump 50' of cement on top of plug.
11. RIH and set CIBP at **5100'**.
12. Load well with 2% KCl.
13. Pressure-test the casing to 500 lbs for 30 minutes. If it passes the test then proceed with procedure. If test fails consult with Houston. The test will need to have a chart recording to be submitted to the OCD and BLM.
14. RD MO rig. NOTIFY regulatory (Yolanda or Deb) to inform that work is completed.

15. Turn well over to production.