

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEYSUBMIT IN TRIPlicate
(Other instructions on reverse side)Form approved,
Budget Bureau No. 42-11424.
5. LEASE DESIGNATION AND SERIAL NO.NM-081208-8269
6. IF INDIAN, ALLOTTEE OR TRIBE NAME

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT--" for such proposals.)

1. OIL WELL ☒ GAS WELL ☐ OTHER ☐	7. UNIT AGREEMENT NAME
2. NAME OF OPERATOR Tenneco Oil Company	8. FARM OR LEASE NAME Hospah
3. ADDRESS OF OPERATOR 720 So. Colorado Blvd., Denver, Colorado 80222	9. WELL NO. 10
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements. See also space 17 below.) At surface 990' FN and 2300' FWL, Unit	10. FIELD AND POOL, OR WILDCAT Dakota/Gallup
14. PERMIT NO.	11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA Sec. 12, T17N, R9W
15. ELEVATIONS (Show whether DF, RT, GK, etc.) 7034' GR	12. COUNTY OR PARISH McKINLEY
	13. STATE NM

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

☐
☐
☐
☐

PULL OR ALTER CASING

☐
☐
☐
☐

FRACTURE TREAT

MULTIPLE COMPLETE

SHOOT OR ACIDIZE

ABANDON*

REPAIR WELL

CHANGE PLANS

(Other) Install larger pump

SURSEQUENT REPORT OF:

WATER SHUT-OFF

☐
☐
☐
☐

REPAIRING WELL

☐
☐
☐
☐

FRACTURE TREATMENT

ALTERING CASING

SHOOTING OR ACIDIZING


ABANDONMENT*

(Other)

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)

1. Kill long string. Remove WKM valve. Install Landing sub w/ ball valve.
2. Load annulus, Install blooie line.
3. Remove thread protector from Gulfco head.
4. Install offset spool&7" 600 BOP w/ 2-3/8 offset rams X blind rams.
5. Pull rods, tubing, pump on short string.
6. Unseat packer & circulate hole.
7. Remove Bop. Remove Gulfco Head. Install BOP on 7" 8rd. pin.
8. Pull & lay down long tubing string.
9. Rig up wireline. RIH w/ bridge plug. Set at 1800'
10. Pick up and RIH w/ 2-7/8" tubing and 3-1/4" tubing pump.
11. RIH w/ rods. Rig Down.
12. Test well. Install larger lift equipment as required.

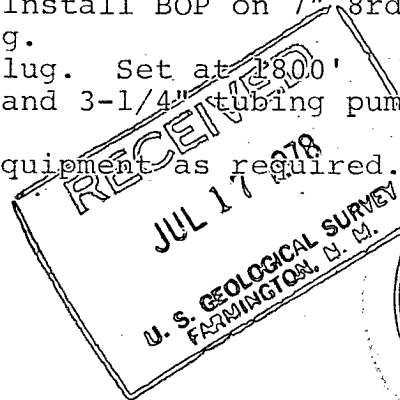

18. I hereby certify that the foregoing is true and correct.

SIGNED

Casley J. Thornton

TITLE: Administrative Supervisor

DATE

7/13/78

(This space for Federal or State office use)

APPROVED BY

TITLE

DATE

CONDITIONS OF APPROVAL, IF ANY: