

UNITED STATES  
DEPARTMENT OF THE INTERIOR  
GEOLOGICAL SURVEY

SUBMIT IN TRIPLICATE\*  
(Other instructions on reverse side)

Form approved.  
Budget Bureau No. 42-R1424.

5. LEASE DESIGNATION AND SERIAL NO.

LF-078953

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

7. UNIT AGREEMENT NAME

8. FARM OR LEASE NAME

J. W. Goddard

9. WELL NO.

3

10. FIELD AND POOL, OR WILDCAT

Callegos Gallup

11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA

Section 11-26N-12W

12. COUNTY OR PARISH

San Juan

13. STATE

New Mexico

1.

OIL WELL ☐ GAS WELL ☒ OTHER

2. NAME OF OPERATOR

Skelly Oil Company

3. ADDRESS OF OPERATOR

1360 Lincoln Street - Denver, Colorado 80203

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.\*

See also space 17 below.)  
At surface

2100' FSL & 1980' FSL of Section 11-26N-12W

14. PERMIT NO.

15. ELEVATIONS (Show whether DF, RT, GR, etc.)

6059' GR

16.

Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

PULL OR ALTER CASING

FRACTURE TREAT

MULTIPLE COMPLETE

SHOOT OR ACIDIZE

ABANDON\*

REPAIR WELL

CHANGE PLANS Sand

(Other) Plug back and test Fruitland

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

REPAIRING WELL

FRACTURE TREATMENT

ALTERING CASING

SHOOTING OR ACIDIZING

ABANDONMENT\*

(Other)

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)\*


Plans are to test the Fruitland Sand 1184-1207' as follows:

Squeeze 25 sacks of cement across Gallup perforations 5151-5188'. Run Gamma Ray Collar Log. Perforate at 1300' with 4 holes.

Pump 150 sacks cement down 5-1/2" casing with howco plug on top of cement. Displace down 5-1/2" casing with water and stop plug at 1260'. Top of cement behind casing to be at approximately 700' and across Fruitland Formation 1187-1207'. Shut well in at top and WOC 24 hours.

Perforate Fruitland Sand 1184-1207' with 112 holes (4 shots per foot). Run casing open ended and swab and test.

Sand frac with 20,000# sand and 20,000 gallons of water.

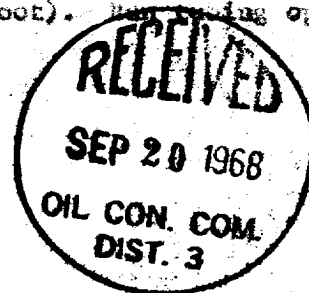

18. I hereby certify that the foregoing is true and correct

SIGNED

*Leland Thayer*

TITLE

District Production Manager

DATE


September 17, 1968

(This space for Federal or State office use)

APPROVED BY

TITLE

DATE



CONDITIONS OF APPROVAL, IF ANY:

SEP 19 1968

\*See Instructions on Reverse Side

U. S. GEOLOGICAL SURVEY

## Instructions

**General:** This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

**Item 4:** If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

**Item 17:** Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking for approval of the abandonment.