

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUBMIT IN TRIPLICATE*
(Other instructions on reverse side)

Form approved.
Budget Bureau No. 42-R1424.

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL <input type="checkbox"/> GAS WELL <input checked="" type="checkbox"/> OTHER		5. LEASE DESIGNATION AND SERIAL NO. NM-03561
2. NAME OF OPERATOR Aztec Oil & Gas Company		6. IF INDIAN, ALLOTTEE OR TRIBE NAME
3. ADDRESS OF OPERATOR P. O. Drawer 570, Farmington, New Mexico		7. UNIT AGREEMENT NAME
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface 1050' FSL & 860' FEL		8. FARM OR LEASE NAME Grenier "B"
14. PERMIT NO.		9. WELL NO. #8
15. ELEVATIONS (Show whether DF, RT, GR, etc.) 5829' GR		10. FIELD AND POOL, OR WILDCAT Aztec Pictured Cliffs
16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data		11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA Section 5, T29N, R10W
		12. COUNTY OR PARISH San Juan
		13. STATE New Mexico

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

FRACTURE TREAT

SHOOT OR ACIDIZE

REPAIR WELL

(Other)

PULL OR ALTER CASING

MULTIPLE COMPLETE

ABANDON*

CHANGE PLANS

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

FRACTURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

REPAIRING WELL

ALTERING CASING


ABANDONMENT*

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

PROPOSE TO:

1. Pull 1" tubing.
2. Pick up full-bore packer and isolate casing leak.
3. Set cement retainer at 2200'
4. Squeeze hole with enough cement to circulate to surface plus 25%.
5. Drill out cement and test.
6. Run 1-1/2" tubing and sting into retainer.
7. Return well to production.

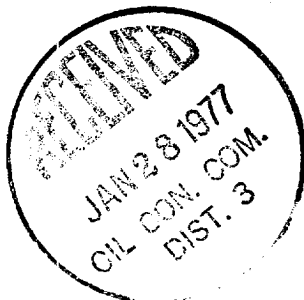

JAN 27 1977

18. I hereby certify that the foregoing is true and correct

SIGNED

TITLE District Production Manager

DATE January 25, 1977

(This space for Federal or State office use)

APPROVED BY

CONDITIONS OF APPROVAL, IF ANY:

TITLE

DATE

*See Instructions on Reverse Side