

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

RECEIVED
BLM

FORM APPROVED
Budget Bureau No. 1004-0135
Expires: March 31, 1993

SUNDRY NOTICES AND REPORTS ON WELLS

Do not use this form for proposals to drill or to deepen or reentry to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals

SUBMIT IN TRIPLICATE

| | |
|--|---|
| 1. Type of Well <input type="checkbox"/> Oil Well <input checked="" type="checkbox"/> Gas Well <input type="checkbox"/> Other | 5. Lease Designation and Serial No. 95-078139 |
| 2. Name of Operator Amoco Production Company Attn: John Hampton | 6. If Indian, Allottee or Tribe Name N.M. |
| 3. Address and Telephone No. P.O. Box 800, Denver, Colorado 80201 | 7. If Unit or CA, Agreement Designation |
| 4. Location of Well (Footage, Sec., T., R., M., or Survey Description) 1030' FNL, 1670' FWL, Sec. 34, T30N-R9W | 8. Well Name and No. Elliott Gas Com J #1 |
| | 9. API Well No. 3004509043 |
| | 10. Field and Pool, or Exploratory Area Blanco Pictured Cliffs |
| | 11. County or Parish, State San Juan, New Mexico |

12. CHECK APPROPRIATE BOX(s) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

| TYPE OF SUBMISSION | TYPE OF ACTION | |
|--|---|--|
| <input checked="" type="checkbox"/> Notice of Intent | <input checked="" type="checkbox"/> Abandonment | <input type="checkbox"/> Change of Plans |
| <input type="checkbox"/> Subsequent Report | <input type="checkbox"/> Recompletion | <input type="checkbox"/> New Construction |
| <input type="checkbox"/> Final Abandonment Notice | <input type="checkbox"/> Plugging Back | <input type="checkbox"/> Non-Routine Fracturing |
| | <input type="checkbox"/> Casing Repair | <input type="checkbox"/> Water Shut-Off |
| | <input type="checkbox"/> Altering Casing | <input type="checkbox"/> Conversion to Injection |
| | <input type="checkbox"/> Other _____ | <input type="checkbox"/> Dispose Water |

(Note: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

Amoco Production Company intends to Plug and Abandon the subject well.
See Attached for procedure:

RECEIVED
SEP 15 1992
OIL COM
BLM

If you have any questions please call Julie Acevedo at 303-830-6003.

APPROVED
AS AMENDED

| | |
|---|---------------------|
| 14. I hereby certify that the foregoing is true and correct | SEP 15 1992 |
| Signed <u>John Hampton</u> | Date <u>9/10/92</u> |
| (This space for Federal or State office use) | AREA MANAGER |
| Approved by _____ | Title _____ |
| Conditions of approval, if any: _____ | Date _____ |

Title 18 U.S.C. Section 1001, makes it a crime for any person knowingly and willfully to make to any department or agency of the United States any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction.


*See Instruction on Reverse Side

PXA Procedures
Elliott Gas Com J #1

1. Check location for anchors. Install if necessary. Test anchors.
2. MIRUSU. NDWH. NUBOPE.
3. POOH with 1 1/4" tbg and pick up 2 3/8 workstring. RIH with bit and scrapper. RIH with bridge plug and packer. Set at BP 2350. Pull up one stand and set packer. Load hole and pressure test bridge plug. Load back side and pressure test to 700#.
4. If casing leak found isolate leak and call Denver for further procedures.
5. POOH with packer and bridge plug.
6. RIH with 2 3/8 tbg and cement retainer. Set retainer at 2400'. Squeeze picture cliffs @ 2456' - 2475' with 25 sx of class b cement.
7. POOH and spot a cement plug to 2200' with 24 sx class b cement. WOC. Tag TOC.
8. Load hole with 9lbs mud/POZ water to 1450'. Spot a cement plug from 1450' to 1245' with 24 sx class b cement. WOC Tag TOC.
9. Load hole with 9lbs mud/POZ water to 750'. Spot a surface plug from 750' to surface with 87 sx of class b cement.
10. NDBOPE. Cut off casing and wellhead. Install PXA maker according to BLM or State requirements.
11. Turn over to John Schwartz for reclamation.
12. Rehabilitate location according to BLM or State requirements.

Note: Use Class B Cement.

ELLIOTT GAS COM J #1
LOCATION, 34 30N 9W
SINGLE PC
ORIGINAL COMPLETION 11/59
LAST FILE UPDATE 5/92 BY CSW

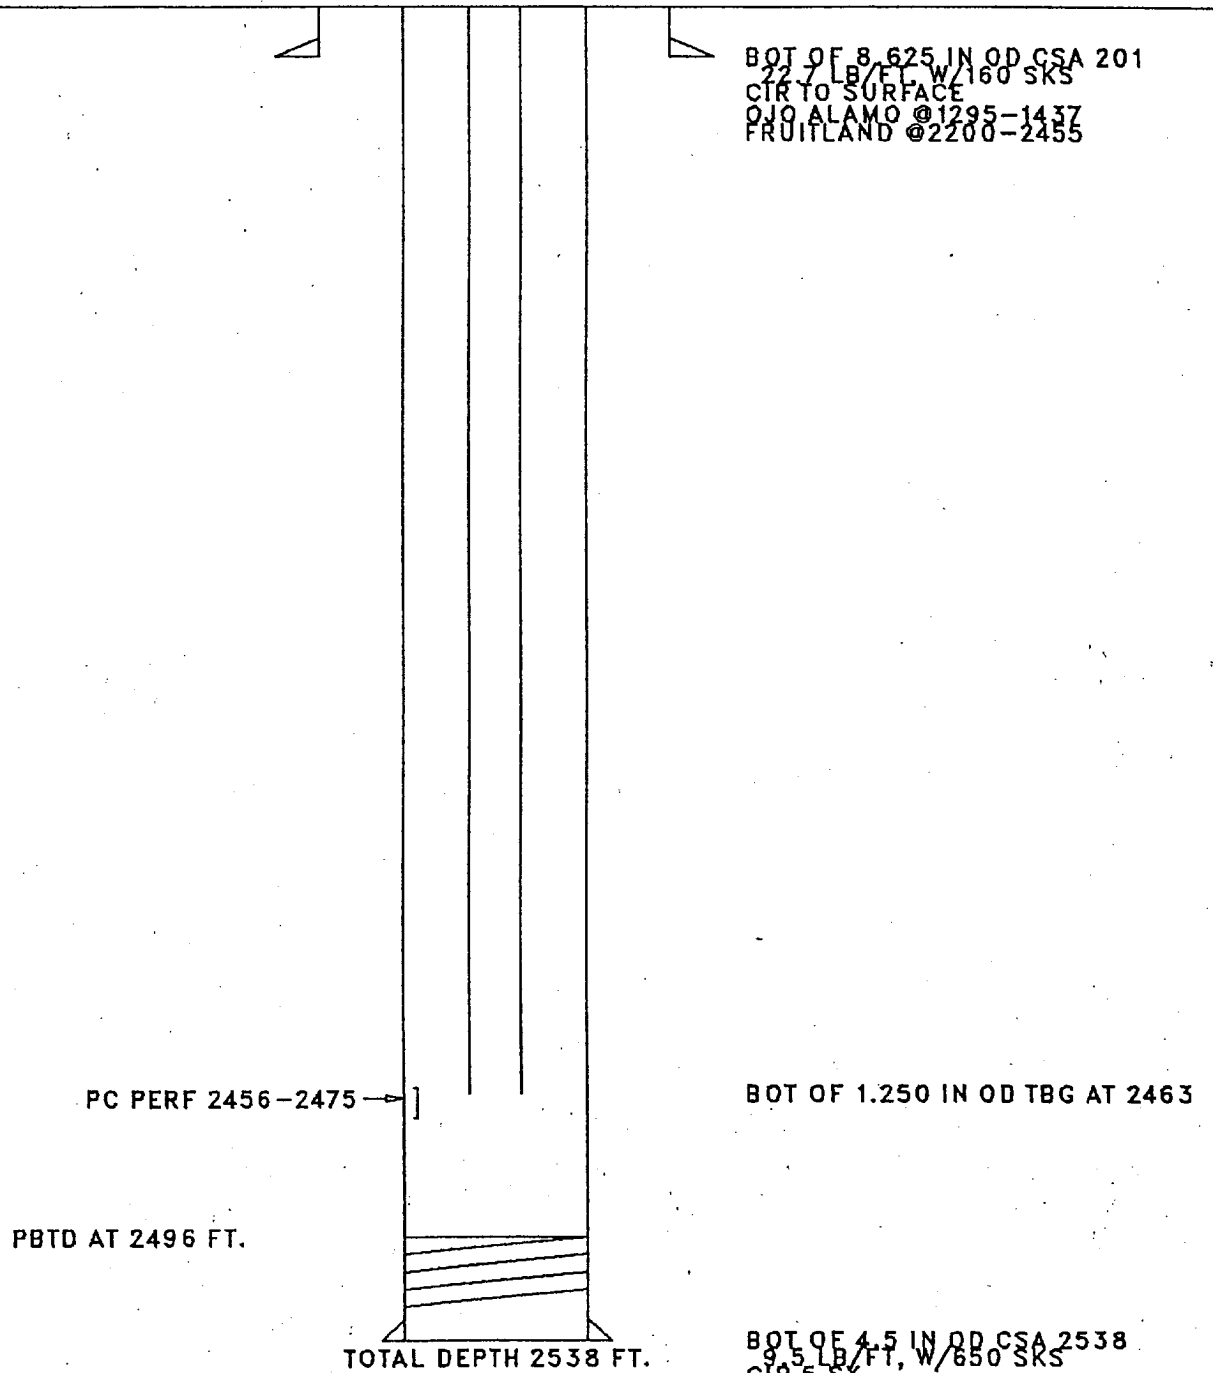

FILENAME:
04509043