

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

SUNDRY NOTICES AND REPORTS ON WELLS

Do not use this form for proposals to drill or to deepen or reentry to a different reservoir,
Use "APPLICATION FOR PERMIT—" for such proposals

SUBMIT IN TRIPLICATE

FORM APPROVED
Budget Bureau No. 1004-0135
Expires: March 31, 1993

5. Lease Designation and Serial No.

14-20-604-1951

6. If Indian, Ailotee or Tribe Name

Ute

7. If Unit or CA. Agreement Designation

Horseshoe Gallup Unit

8. Well Name and No.

HGU #169

9. API Well No.

30-045-10335

10. Field and Pool, or Exploratory Area

Horseshoe Gallup Unit

11. County or Parish, State

San Juan County, NM

12. CHECK APPROPRIATE BOX(es) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

TYPE OF SUBMISSION

TYPE OF ACTION

☒ Notice of Intent

☐ Subsequent Report

☐ Final Abandonment Notice

☒ Abandonment

☐ Recompletion

☐ Plugging Back

☐ Casing Repair

☐ Altering Casing

☐ Other _____

☐ Change of Plans

☐ New Construction

☐ Non-Routine Fracturing

☐ Water Shut-Off


☐ Conversion to Injection

☐ Dispose Water

(Note: Report results of multiple completion on Well
Completion or Recompletion Report and Log form.)

13. Describe Proposed or Completed Operations (Clearly state all pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

Central Resources Inc. plans to plug and abandon the referenced well as outlined in Attachment "A".

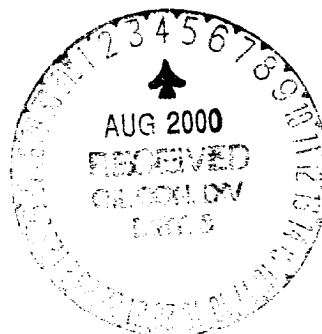

14. I hereby certify that the foregoing is true and correct

Signed Kenneth W. Jackson

Title Regulatory Compliance

Date 06/28/00

(This space for Federal or State office use)

Approved by _____

Title _____

Date 8/1/00

Conditions of approval, if any:

Title 18 U.S.C. Section 1001, makes it a crime for any person knowingly and willfully to make to any department or agency of the United States any false, fictitious or fraudulent statements or representations as to any manner within its jurisdiction.

*See Instruction on Reverse Side

AMCDD

**Plugging and Abandonment Procedure
Horseshoe Gallup Unit No. 169
Attachment "A"**

Well Data:

Location: 660' FSL, 660' FEL, Section 28 T31N, R16W
San Juan County New Mexico

TD: 1626'
PBSD: 1510'

Surface Casing: 7-5/8", 26.4 ppf, J-55 set @ 103' with 125 sacks

Production Casing: 5-1/2", J-55 set @ 1625' with 50 sacks

Perforations: 1447'-1478' with 2SPF

Procedure:

1. Release packer and TOH w/tubing.
2. Trip in hole with cement retainer and set at 1357'.
3. Mix and pump 33 sacks of cement below retainer. Pull out of retainer and set 25 sack plug on top of retainer. Estimated top of cement @ 1132'.
4. Trip out of hole and lay down tubing.
5. Perforate squeeze holes 153'
6. Establish circulation down casing, through annulus and out bradenhead.
7. Mix and pump 25 sacks of cement down casing through perforations, into annulus and out through bradenhead. Leave casing and annulus full of cement.
8. Cut off casing and install regulation dry hole marker.
9. Reclaim location as per BLM regulations.