

UNITED STATES  
DEPARTMENT OF THE INTERIOR  
GEOLOGICAL SURVEY

SUBMIT IN TRIPLICATE\*  
(Other instructions on re-  
verse side)

Form approved.  
Budget Bureau No. 42-R1424.

5. LEASE DESIGNATION AND SERIAL NO.

Ute Mtn. 14-29-151-49

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

Ute Mountain Tribal

7. UNIT AGREEMENT NAME

8. FARM OR LEASE NAME

Ute

9. WELL NO.

11

10. FIELD AND POOL, OR WILDCAT

Verde Gallop

11. SEC., T., R., M., OR BLK. AND  
SURVEY OR AREA

NMPM

Sec. 12, T31N, R15W,

12. COUNTY OR PARISH

San Juan

13. STATE

New Mexico

1. OIL ☒ GAS ☐  
WELL WELL OTHER

2. NAME OF OPERATOR

El Paso Natural Gas Products Company

3. ADDRESS OF OPERATOR

Post Office Box 1540, Farmington, New Mexico 87401

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.\*  
See also space 17 below.)  
At surface

730'/S & 1810'/E, Section 12, T31N, R15W, NMPM  
SW/4 SE/4 Section 12

14. PERMIT NO.

15. ELEVATIONS (Show whether DF, RT, GR, etc.)

5766' DF

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

FRACTURE TREAT

SHOOT OR ACIDIZE

REPAIR WELL

(Other)

PULL OR ALTER CASING

MULTIPLE COMPLETE

ABANDON\*

CHANGE PLANS

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

FRACTURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

REPAIRING WELL

ALTERING CASING

ABANDONMENT\*

(NOTE: Report results of multiple completion on Well  
Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)\*


This well was plugged and abandoned on September 16, 1963 in the following manner:

1. Set 145' Cement Plug 2180'-2325'.
2. Cut 5-1/2" OD Casing at 1450' and pulled 1442'.
3. Set 130' Cement Plug 1370'-1500'.
4. Set 100' Cement Plug 495'-595' (Across top of Point Lookout Formation, Top at 545').
5. Set 30' Cement Plug across bottom of Surface Casing.
6. Set 5 Sack Cement Plug at Surface with 4" Marker.

RECEIVED

DEC 3 1963

U. S. GEOLOGICAL SURVEY  
BUREAU, COLO.

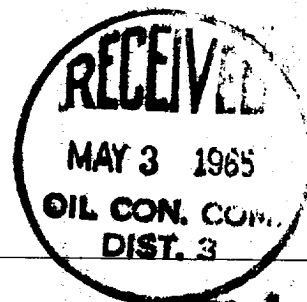

18. I hereby certify that the foregoing is true and correct

SIGNED JOHN J. STROJEK TITLE Petroleum Engineer

DATE Dec. 3, 1963

(This space for Federal or State office use)

APPROVED BY  
CONDITIONS OF APPROVAL, IF ANY:

TITLE

DATE

APPROVED

APR 29 1965

E. A. SCHMIDT

MANAGING GEOLOGIST

\*See Instructions on Reverse Side

## Instructions

**General:** This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

**Item 4:** If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

**Item 17:** Proposals to abandon a well should include subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement plugs; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of pulling of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.